
ABZ INNOVATION

WE BUILD DRONES.

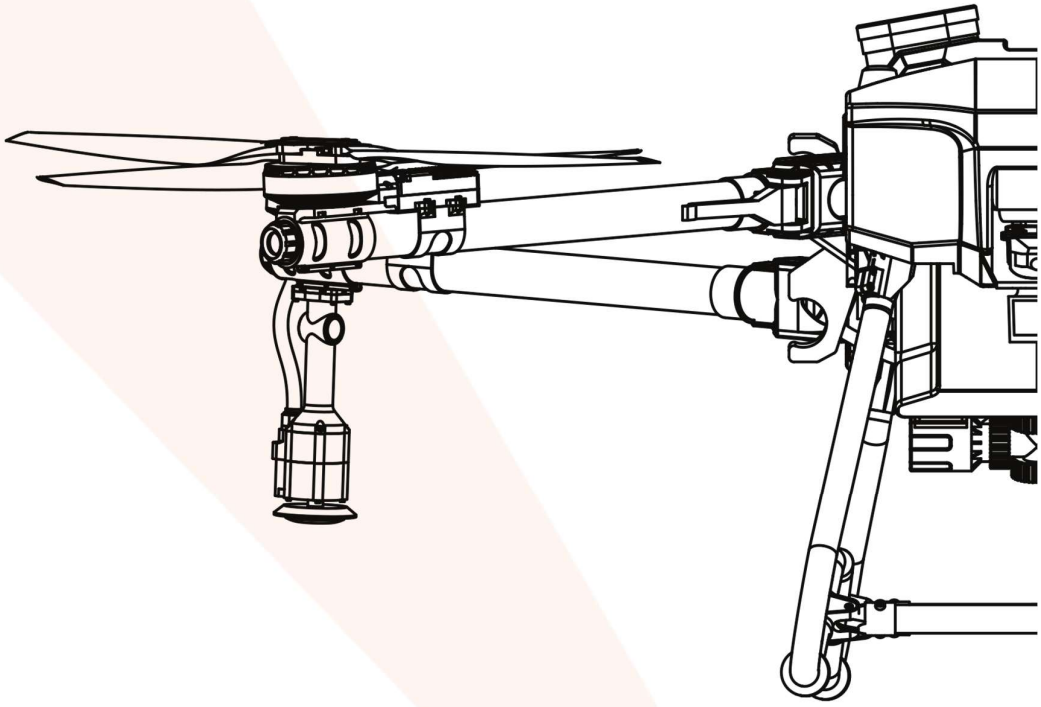

L30 V2

OPERATOR MANUAL

Version 3.0

General Information

General Overview

This manual is for the ABZ Innovation L30 V2 industrial, agricultural drone, equipped with a CDA (controlled droplet application) spraying system designed for the most efficient use.


The drone can be upgraded with a wide range of other payloads too, thanks to its universal design. The drone and its accessories may only be operated in accordance with the instructions in this manual.

Please read this notice and the manual provided for your ABZ Innovation L30 V2 drone before use. If you have any questions, please contact ABZ Innovation customer service before use. The contact details can be found at the end of this document. By using the drone, you declare that you have read this manual, that you understand and acknowledge the information contained herein, and that you consent to use the drone only under proper conditions, in full compliance with applicable laws and the instructions in this manual. Furthermore, you agree that you are now exclusively responsible for the drone and its operation, and for any direct or indirect legal consequences arising from its operation.

The ABZ Innovation L30 V2 drone is NOT a toy and is to be used only with care. Improper use of the drone poses a serious risk and can cause damage to the drone and its surroundings, severe personal injury, or death. The drone may only be used by qualified pilots. The ABZ Innovation L30 V2 is a technical, agricultural device.

Any modification to the drone, its components or software will immediately void the warranty.

©2026 ABZ Innovation

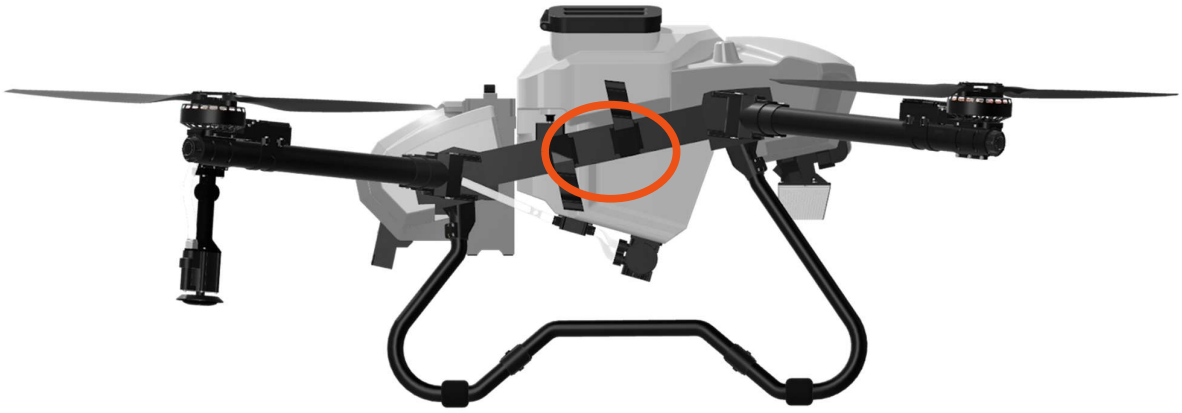

To identify an L30 V2, locate the serial number label on the right side of the drone frame and check if the „Model” is L30 V2.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device contains the following FCC-certified modules: FCC ID: XPYANNAB4, FCC ID: 2AZBB-MK15RX, FCC ID: RID-LR101H, FCC ID: 2ABCB-RPI5

This device complies with Part 15 of the FCC Rules for Class A digital devices. NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Responsible Party:

Drone Nerds 5553 Anglers Ave, Suite #109, Ft. Lauderdale, FL 33312 Phone:(786) 708-7807, Email: sales@dronenerds.com

©2026 ABZ Innovation

Drone main parts



1: Motors

2: Propellers

3: Front cover

4: Tank

5: Battery

6: Rear cover

7: Arms

8: Camera

9: LiDAR sensor

10: Landing gear

11: Pump

12: CDA sprayers

Packing list

The L30 V2 drone standard package contains:

- L30 V2 drone and tank
- ABZ Innovation MK15 remote controller with sticks and antennas
- 20 W fast charger and cable for remote controller
- US/EU plug converter for the fast charger
- USB-C / USB-A converter
- Carrying case for the remote controller

©2026 ABZ Innovation

General specifications		
	EU	**US**
Payload	30 l spraying system	7.9 gal spraying system
Max. take-off weight	72 kg	158.7 lbs
Total weight (with battery) *	41.9 kg	92.4 lbs
Total weight (without battery) *	32 kg	70.5 lbs
Maximum characteristic dimension **	3130 mm	123.2 in
Dimensions (arms & propellers unfolded) (L x W x H)	2490 x 2600 x 780 mm	98 x 102.4 x 30.7 in
Dimensions (arms and propellers folded) (L x W x H)	1040 x 685 x 780 mm	41 x 27 x 30.7 in
Effective signal range of RC	~3.5 km	~2.17 mi
Spraying System		
Maximum per Hectare Performance	21 ha/h	51.9 ac/h
Average per Hectare Performance	15-17 ha/h	37-42 ac/h
Maximum flow	16 l/min	4.2 gal/min
Adjustable droplet size	60 – 1000 µm	60 – 1000 µm
Spray tank capacity	30 l	7.9 gal
Adjustable working width	5-10 m	16.4-32.8 ft
Frequency bands		
Radio Control and Telemetry	2.4GHz	2.4GHz
WLAN	2.4GHz	2.4GHz
Flight		
Max. operating flight speed	8 m/s	17.9 mi/h
Max. level speed	10 m/s	22.4 mi/h
Max. tolerable wind speed	10 m/s	22.4 mi/h

Specifications

©2026 ABZ Innovation

Safety requirements

Use of plant protection products

- Pesticides are toxic, and their use poses high health and safety risks. Use them only as prescribed!
- Do not use strong acids, strong alkalis, high-temperature liquids, or pesticides that are prohibited.
- Do not endanger people, animals, or the health of the environment.
- Pesticides must not be allowed to contaminate rivers and drinking water sources.
- Avoid the use of powder-based pesticides, as they can shorten the life of the spraying system of the device.
- Mix the pesticide with clean water and filter it immediately before use to avoid clogging the filter. Clean the filters of the device before use if noticing deposits.
- The valves of the drone can be opened for cleaning. They have to be closed during operation.
- The membrane of the valve might become clogged with particles. For cleaning instructions, refer to CDA valve cleaning.
- If spraying in a windward direction, make sure that the spray does not drift onto you or anyone else on the site. Wear full protective gear to avoid direct contact with the pesticide.
- Clean the drone and remote controller after spraying.
- The effectiveness of application depends on the density of pesticides, the speed and distance of spraying, the flight speed and is affected by wind speed, wind direction, temperature and humidity. Take all these factors into account when spraying!
- Avoiding unnecessary spraying: accurate planning of the spraying work is necessary to determine the right amount of pesticide to use, so that the amount of excess spray can be minimized. It is recommended to apply the residual spray or water used to wash the drone's system to plants.

Child protection provisions

- This equipment is not suitable for use in places where children are likely to be present.
- The equipment must be kept out of the reach of children.
- The equipment contains a spray that is dangerous for children and must be kept out of the reach of children!
- In case of contact with the spray, wash off immediately with plenty of water. In case of ingestion of spray, seek medical advice immediately.
- The equipment operates rotating parts that are dangerous for children and must be kept out of the reach of children!

Environmental aspects

©2026 ABZ Innovation

- It is forbidden to operate the drone or any of its components in an enclosed space.
- Fly only in places where there are no buildings or other obstacles.
- Do not fly over or near large crowds.
- Do not fly above 4.5 km (14 763 feet) above sea level.
- Fly only in moderate weather conditions, between temperatures of 5°C and 45°C (41°F and 113°F).
- Rain and foggy weather might affect the performance of the LiDAR, and consequently, the performance of altitude hold and obstacle sensing.
- During lightning, flight is prohibited.
- During adverse weather conditions, such as heavy rain, snow, and icing, flight is prohibited.
- Your flying and spraying activities must not violate any applicable laws or regulations. You must have all the necessary permits. Contact the appropriate government agency or authority before flying to ensure that you operate your drone in compliance with laws and regulations.

Operation

- The drone may only be switched on and operated in accordance with the "Flight Protocol" chapter.
- Only use the drone in full compliance with the Checklists.
- Stay away from rotating propellers and motors, CDAs.
- Do not exceed the maximum combined accessories and batteries and payload weight in any case. Otherwise, the drone may be damaged and the flight might pose danger.
- Always keep track of the drone's flight, and be ready for manual control. Manually avoid obstacles at a safe distance. Never rely exclusively on the ABZ Control app. It is important to check or set the correct Failsafe and RTL altitude before each flight.
- Always keep the drone within visual line of sight (VLOS) and keep an eye on it.
- Don't get distracted by using your mobile phone or any other activities.
- Don't fly under the influence of alcohol, drugs or medicines. Fly only when you are mentally and physically capable of safely controlling the drone, including paying attention to its surroundings.
- If the drone or remote controller battery is low, land the drone in a safe place. The state of the drone battery should be monitored before the flight using the charging indicator LEDs on the battery. We recommend starting the flight with a minimum of 80% battery charge.
- During the flight, the pilot must monitor the battery voltage, which should always be above 51.4 V for Tattu Plus batteries and 48.5 V, even when flying with the Maximum Take-off Mass (MTOM).

©2026 ABZ Innovation

- When the battery voltage level drops under 51.4 V for Tattu Plus batteries and 48.5 V for ABZ Innovation L30 Smart Batteries, start returning and landing the drone. If, during the return, the battery voltage reaches the critical threshold 50.4 V for Tattu Plus batteries and 46.5 V for ABZ Innovation L30 Smart Batteries, the drone will automatically initiate landing. For further information, see Battery Failsafe.
- Never fly closer than 100 m (328 ft) to a high-voltage power line or high-power radio emitters (e.g. Radar, TV/Radio station).
- Never fly closer than 30 m (100 feet) horizontal distance to buildings.
- After landing, switch off the motors, switch off the drone by disconnecting the battery, and then switch off the remote controller.
- In case of loss of remote controller signal, the drone can automatically switch to Failsafe RTL mode.

Maintenance and storage

- Do not use damaged, broken, or aged propellers.
- Clean the drone immediately after spraying.
- Regularly check the condition of the drone and make a flight log.
- To avoid damage to the drone's landing gear, remove or empty the spray tank, remove payloads, accessories, and the battery before transportation.
- Significant dust and stains on the optical window will affect the performance of the LiDAR sensor.
  - If it is necessary to clean the sensor, first use compressed or canned air. DO NOT wipe a dusty optical window, as it will only cause more damage.
  - If the optical window has visible stains after dusting, it is necessary to wipe it as well.
  - DO NOT wipe using a dry lens tissue, as it will scratch the surface of the optical window. Use a lens tissue with isopropyl alcohol. Wipe slowly to remove the dirt instead of redistributing it on the surface of the optical window.
  - If the optical window is still dirty, a mild soap solution can be used to gently wash the window. Repeat Step 2 to remove any remaining soap residue.
- Never take pictures of the LiDAR while it is operating. The laser pulses emitted by the LiDAR may damage the mobile phone's camera sensor.
- Only store the drone with the spray system thoroughly emptied, cleaned, and flushed.
- Clean the drone, especially the propellers, after use.
- Recommended storage temperature: between 5°C and 40°C (41°F and 104°F) applicable for the drone, as well as the remote controller and the batteries.
- Never store the remote controller or the drone's batteries below 0°C (32°F), as it will cause excessive degradation to the battery cells.
- Store the drone, remote controller, and batteries below 60% relative humidity.
- The remote controller and the drone's batteries must be stored at about 60% charge.

©2026 ABZ Innovation

- Batteries deplete after extended storage. The remote controller and the drone's batteries must be discharged and recharged every 3 months of storage.
- After long-term storage:
  - Every battery must be inspected and fully charged before use.
  - The drone's motors must be inspected for free rotation.

Personal precautions


- The temperature of the chemicals in the spray tank cannot exceed 45°C (113°F). During use, the working temperature range is between 5°C and 45°C (41°F and 113°F).
- Before starting the spraying work, always carry out an inspection of the condition of the drone (condition of seals, detection of possible leaks, quality of the spraying) with clean water. Make sure that everything is working properly before you start working with chemicals.
- Always prepare the chemicals according to the instructions for use provided by the manufacturer. Adhere to the appropriate mixing or dilution ratio prescribed by the manufacturer. Mixing and dilution at inappropriate ratios is prohibited as it may have adverse effects on humans and the environment, may be harmful to health, and may result in insufficient treatment of plants.
- Using protective equipment (safety goggles, rubber gloves, overalls, safety shoes, or boots), rinse the spray tank and the spraying system with plenty of water after each operation. Clean the drone after every work session. After cleaning the equipment, wash your hands, change your clothes, and store your work clothes and protective equipment in a locked place. After working with chemicals, always take a shower if possible.

Drone handling and use precautions

- Before commencing each flight, plan your drone's flight path with care and attention. Pay attention to the following:
  - working at a suitable time of day,
  - weather conditions,
  - environmental influences (such as sunlight),
  - drifting of the drone in case of wind,
  - wind speed,
  - flight altitude,
  - when planning, the correct line spacing,
  - turning points,
  - obstacles in the work area.
- When planning your flight, pay close attention to spray runoff caused by the wind. The degree of runoff depends on:
  - the amount of spray applied,
  - the flight altitude,

©2026 ABZ Innovation

  - the airspeed,
  - the droplet size (determined by the combination of impeller speed and pump delivery volume),
  - the direction and speed of the wind.
- Always factor in the amount of runoff when planning your flight. An incorrectly chosen combination of airspeed and altitude will greatly reduce the quality of the work done. Therefore, follow the instructions provided by the chemical manufacturer and choose the correct flight speed, altitude and amount of spray to be applied.
- You can always count on some residue during operation, which is 1% of the spray tank capacity.
- Carefully store any remaining chemicals after the spraying is done.
- The equipment is powered by a replaceable battery. Make sure the batteries are in good condition and fully charged. Do not use faulty or damaged batteries. To learn about proper use and storage, please read the battery's instruction manual.
- The batteries can be charged using an external battery charger. To use this, please refer to the battery charger's instructions for use.
- The battery performance varies by temperature, so always pay attention to this phenomenon and follow the battery's instruction manual. Operate or charge the batteries only between 5°C and 45°C (41°F and 113°F) ambient temperatures, while the battery's temperature remains between 10°C and 60°C (50°F and 140°F).
- Battery discharge is not linear, depending on load, temperature, internal resistance, condition of cells. This figure shows the typical discharge curve for a drone battery in 90% state of health, at 40°C (104°F) at 7,5C load:

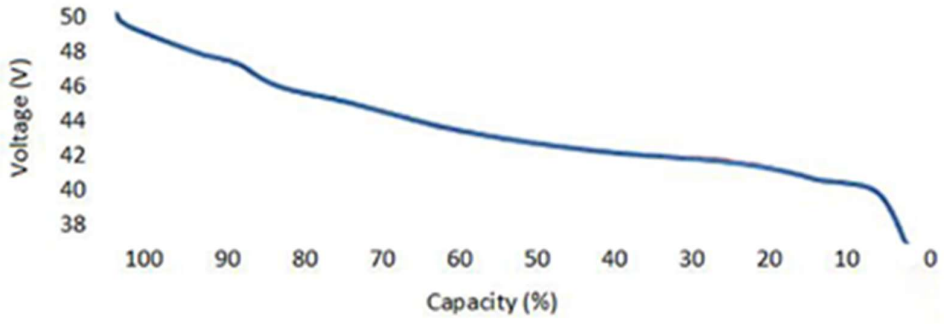

©2026 ABZ Innovation

- The maximum masses of accessories/batteries/payloads combined, fitted to the drone must not exceed 38 kg (83,77 lbs), thereby the drone's overall mass must not exceed the Maximum Take-off Mass (MTOM), 70 kg (154,32 lbs).
- Maximum flight time with one battery is mostly dependent on the Take-off Mass, which is highly related to installed accessories and payloads. The difference in safe maximum flight time between an unequipped L30 V2 and a fully loaded L30 V2 at MTOM can be as high as 9 minutes.
- The drone's agility and balance are highly influenced by the payloads or accessories, especially if those are installed further away from the Optimal payload area. If a heavier device is installed offset from the drone's center of gravity, the pilot must fly with extreme caution to the altered controllability and potential of slower deceleration, acceleration, turning, elevation, and descent speeds.

Information about transport

The drone is designed for outdoor agricultural work. The drone can be delivered to the site in the trunk of a vehicle, in the loading area of a truck, or in a trailer. Proper anchorage is an important prerequisite for the safe transport of the drone, as it is done on uneven road surfaces and on various terrain. Securing the drone improperly can cause damage such as deformation and ultimately breakage of the propellers, damage to the spray tank, punctures, damage to the spraying system, etc.

Transporting the equipment requires extra care and attention. Improperly secured equipment and accessories necessary for its operation (drone, drone batteries, battery charger, generator, spray tank, spraying chemicals, etc...) can lead to damage, which may ultimately lead to total equipment failure. Therefore, please carefully secure the drone during transport and store its accessories in a suitable place.

©2026 ABZ Innovation

In case of loss of signal and communication

General Failsafe

The ABZ Innovation L30 V2 drone's software is equipped with safety features that ensure safe operation at all times. These include possible loss of signal and communication. This can occur when the drone signal is out of range, obstructed by a hill or building, or affected by interference from nearby equipment, electronic devices, or magnetic sources. In these cases, the drone will communicate clear instructions to the operator while the software initiates safety functions. The safety features can be set before take-off, telling the drone what to do if the drone loses signal.

These options can also be set with the following:

- Returning to the starting point (Return to Launch – RTL)
- Landing
- continuing Auto mission

If the drone loses signal from the remote controller, or the communication between these are interrupted, on the remote controller's screen the following message will appear: „COMMUNICATION LOST" and it will read it out loud (if the volume is not muted).

The drone and the remote controller will try to recover the connection automatically. However, if possible, it is highly recommended for the pilot to move the remote controller closer to the drone, especially if any obstacles (e.g. building, tree, or a hill) are in between, and also if the communication between the remote controller and the drone is recovered, take back manual control of the drone (e.g. switching to Manual (Loiter) mode).

©2026 ABZ Innovation

Low Power Condition

Battery Failsafe

The L30 drone is equipped with battery safety procedures to ensure that the drone operates only within safe battery voltage levels.

The Battery Failsafe system consists of three stages:

- **Stage I – User-Configurable Battery Threshold**
  The threshold can be configured by the pilot under **Settings > Safety**. When the battery voltage reaches the configured threshold, the configured battery failsafe action is activated.
  - Range: 30-40 %
  - Available Actions: **Warning**, Switch to **Manual** mode

- **Stage II – User-Configurable Battery Threshold**
  The threshold can be configured by the pilot under **Settings > Safety**.
  When the battery voltage reaches the configured threshold, the configured battery failsafe action is activated.
  - Range: 20-29 %
  - Available Actions: **Warning**, Switch to **Manual** mode, **Land**
- **Stage III – Automatic Failsafe Mode**
  When the battery voltage reaches **the critical threshold of** 50.4 V for Tattu Plus batteries and 46.5 V for ABZ Innovation L30 Smart Batteries**,** the drone will immediately **initiate an automatic landing.**

Stage	Threshold	Available Failsafe Actions
Stage I (User-configurable)	30–40%	Warning, Manual, RTL
Stage II (User-configurable)	20–29%	Warning, Manual, Land, RTL
Stage III (Automatic)	50.4 V for Tattu Plus batteries and 46.5 V for ABZ Innovation L30 Smart Batteries (critical)	Automatic Landing

©2026 ABZ Innovation

List of Actions:

- **Warning:** The system provides a visual and audible notification when the battery reaches the warning threshold.
- **Land:** The drone automatically performs a controlled descent and landing. In Land Mode, the pilot can only provide forward, rearward (pitch), left, and right (roll) stick inputs to help ensure a safe landing.
- **Manual:** The drone switches to Manual Flight Mode and awaits pilot input.
- **RTL:** the drone switches to RTL mode, and following the Return to Launch settings, it flies back to the takeoff position, then lands and disarms itself after landing.

Regardless of the battery failsafe system in place, the pilot must continuously monitor the battery voltage during flight. The voltage should remain above 51.4 V for Tattu Plus batteries and 48.5 V for ABZ Innovation L30 Smart Batteries, even when operating at Maximum Take-Off Mass (MTOM).

©2026 ABZ Innovation

In the event of a crash, the drone typically disarms itself. However, if the rotors are still spinning, the pilot should attempt to activate the Motor emergency stop (by pressing the C and D buttons simultaneously), even if the 'Communication Lost' message is displayed.




Never approach an armed drone!

©2026 ABZ Innovation

Mandatory Remote identification with Dronetag

For security reasons, remote identification of drones is mandatory in the United States and the

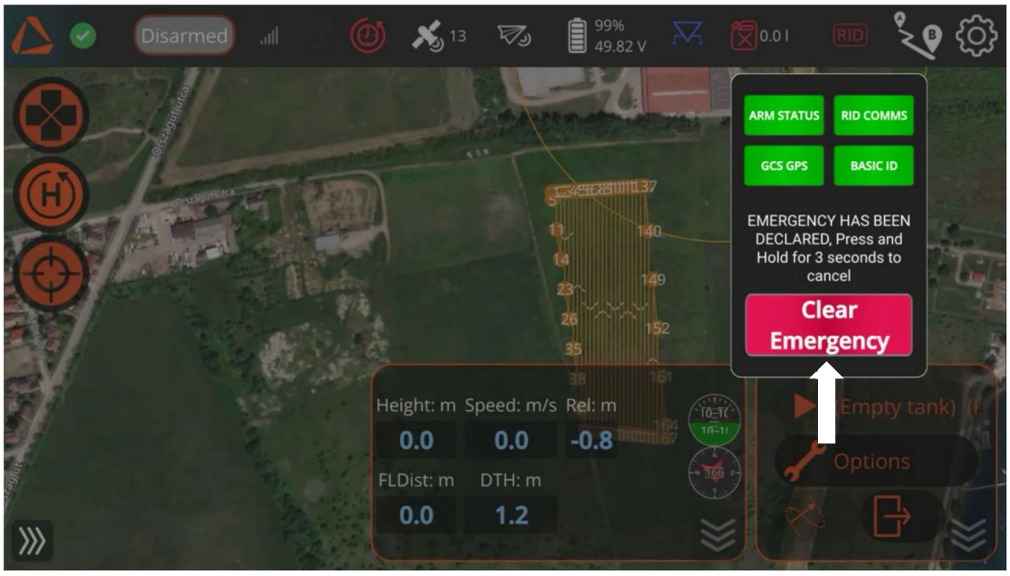

European Union. All drones must be equipped with a Remote Identification device to locally transmit information about the operating drone.


The L30 drone comes equipped with a Dronetag DRI Remote ID module and meets the requirements of the legislation requirements of the European Union[1] and the United States[2].

The Remote ID of your drone is its serial number, which is broadcast from the device during flight. The drone's system prevents takeoff if the Remote ID is not functioning.

The **RID icon** shows the operational status of the Remote ID system. If the icon is green, the Remote ID is broadcast correctly.

[1] Commission Implementing Regulation (EU) 2019/947 (https://eur-lex.europa.eu/legal-content/EN/TXT/?uri=CELEX%3A32019R0947)
[2] 14 CFR Part 89 – Minimum Performance Requirements for Standard Remote Identification of Unmanned Aircraft (https://www.ecfr.gov/current/title-14/chapter-I/subchapter-F/part-89)

©2026 ABZ Innovation

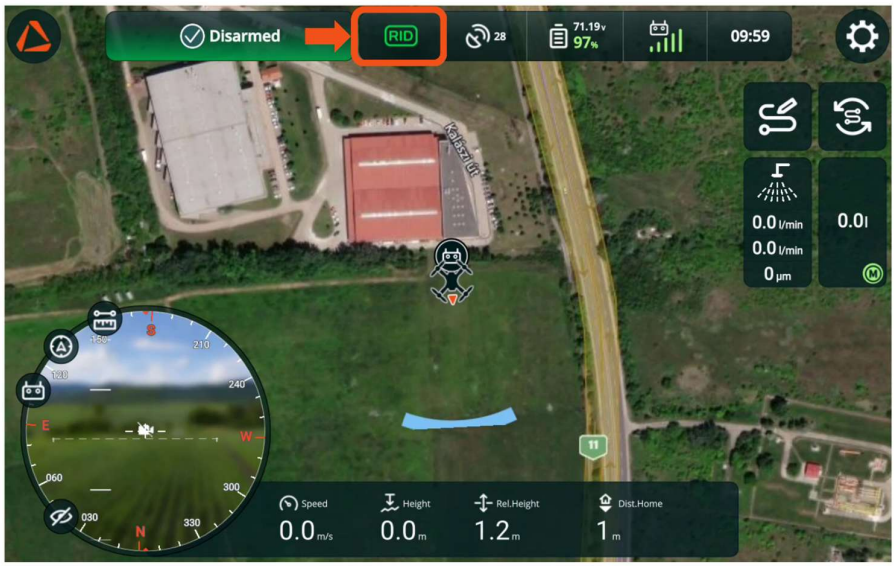


If the RID icon is red, it indicates that the Remote ID broadcast is not functioning properly.



By clicking on the icon, you can check the health of the systems providing the necessary data for the Remote ID module.

©2026 ABZ Innovation

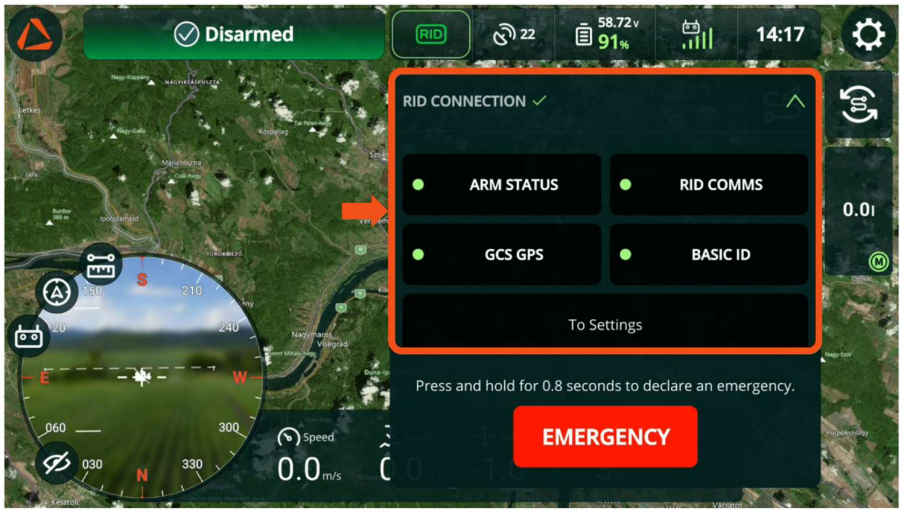

The **ARM STATUS** field provides feedback about the proper functioning of the location source hardware and software of the drone. In the case of a malfunction, this icon will turn red, and consequently, the Remote ID icon will also turn red, indicating a malfunction in the Remote ID system. The drone will also provide an error message stating that the Open Drone ID has encountered a problem (e.g., not receiving a location message).


©2026 ABZ Innovation

The **GCP GPS** field provides feedback about the proper functioning of the Transmitter radio GPS (hardware and software). In the case of a malfunction, this icon will turn red, and consequently, the Remote ID icon will also turn red, indicating a malfunction in the Remote ID system. The drone will also provide an error message stating that the Open Drone ID has encountered a problem (e.g., not receiving a location message).

The **RID COMMS** field provides feedback on the proper connection between the Remote ID module and the drone.


The **BASIC ID** field should always be green, indicating that the drone's serial number has been set up as Remote ID and is broadcasting.

If you are flying in the **European Union**, the **Operator ID** field should be visible, and your Operator ID must be entered into the system. In the European Union, it is mandatory to register as a drone operator on the official website of your National Aviation Authority. After registration, you will receive a registration ID number, which you can enter under *Settings > Remote ID*.

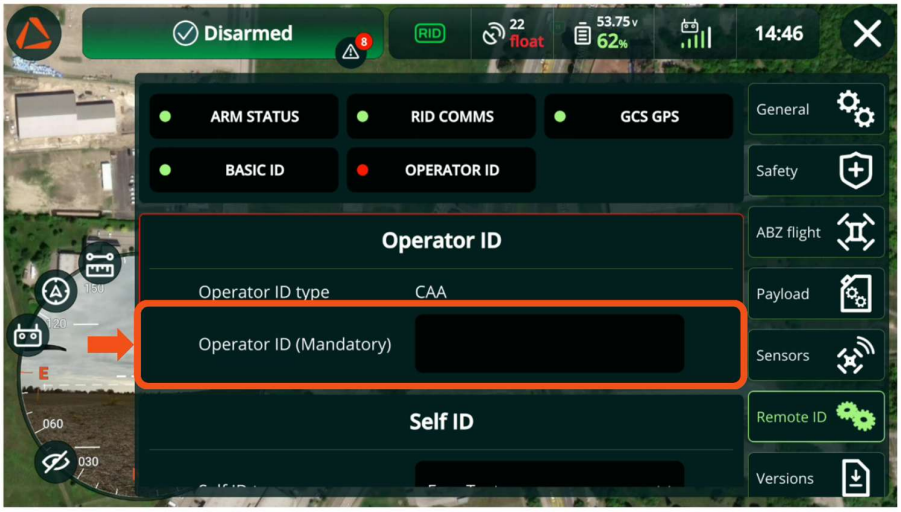

©2026 ABZ Innovation

If the Remote ID system experiences an error due to insufficient GPS coverage on the drone or the remote controller, or a hardware malfunction, the drone prevents arming.

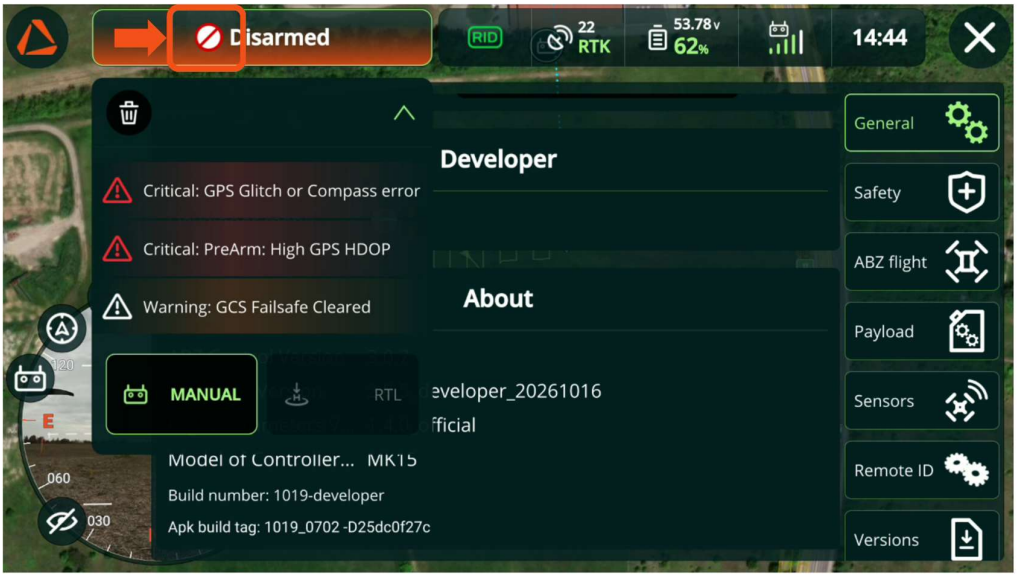

The drone continuously monitors the Remote ID functionality **from takeoff to shutdown** and provides a **notification of any malfunction or failure** in the top bar of the ABZ Control application. If the Remote ID system detects an error during flight, the RID icon will turn red, and the drone will provide an error message stating that the Open Drone ID has encountered a problem (e.g., not receiving a location message).


If the Remote ID system experiences an error during operation, the unmanned aircraft is no longer broadcasting the message elements of the standard Remote ID. The pilot must [3] land the unmanned aircraft as soon as practicable.

[3] in accordance with 14 CFR Part 89 (Minimum Performance Requirements for Standard Remote Identification of Unmanned Aircraft:https://www.ecfr.gov/current/title-14/chapter-I/subchapter-F/part-89)


©2026 ABZ Innovation

Declaring an Emergency

In the Remote ID interface, the pilot can click on the **Declare Emergency** button. To declare an emergency, you need to **press and hold the button for 3 seconds.** This function may be employed in situations such as loss of control, potential threats to persons or property, or in other emergency scenarios, at the pilot's discretion.

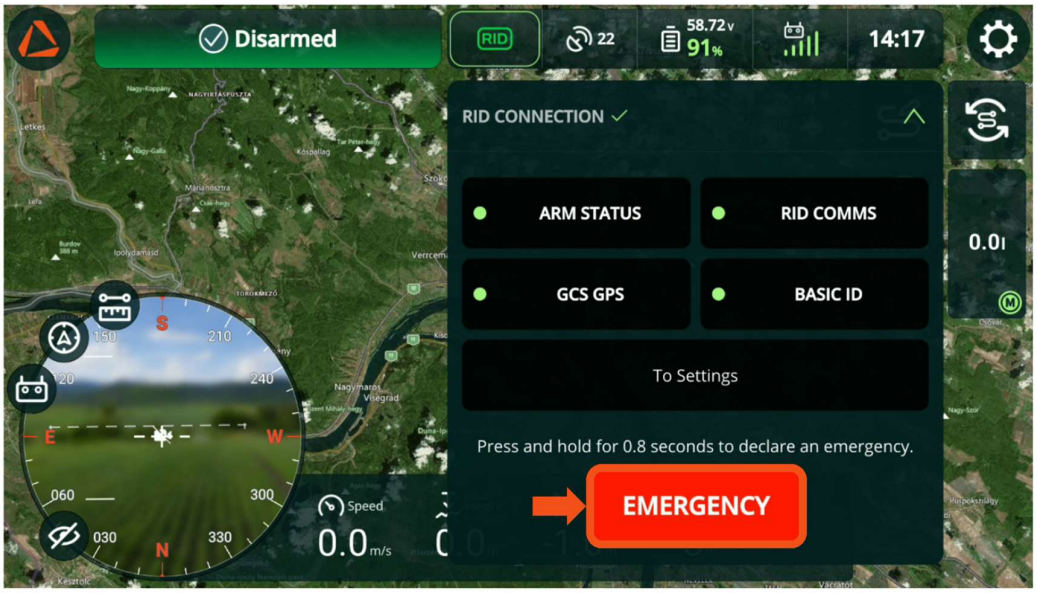

When an emergency is declared, the drone will broadcast the emergency status. To clear the emergency, press and hold the same button (which now displays the text **'Clear Emergency') for 3 seconds.**

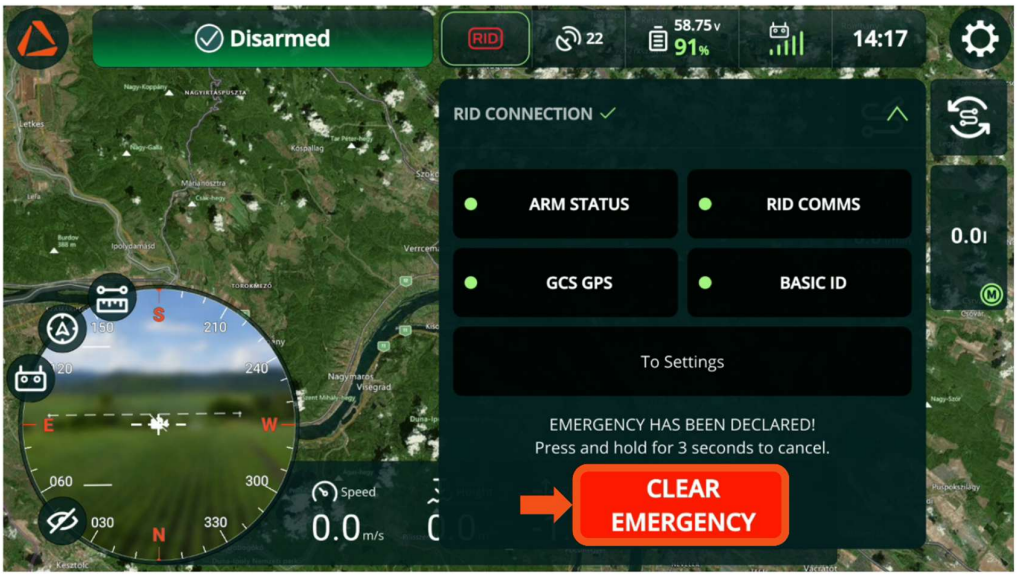

©2026 ABZ Innovation

Remote Controller

The L30 V2 is compatible only with the controllers provided by ABZ Innovation with specialized ABZ Control software. All firmware/software combinations are compatible with the drone. The available remote controller unit:

- ABZ Innovation MK15

Other devices or applications are not compatible for controlling the drone and, therefore prohibited to use with the drone.

The MK15 remote controller is an Android operation system-based device, with an integrated system for communicating through radio signals with the drone. It runs the **ABZ Control** application to control the drone and let the pilot access all telemetry data and advanced flight planning.


If the remote controller is turned off, you can check the battery charge of the remote controller by a short push of the power button. The blue LEDs indicate the charge level. The single LED in front of them gives feedback about the connection between the drone and the remote controller. When the LED is green, the drone and the remote controller are connected.




©2026 ABZ Innovation

To switch on the remote controller, push the power button once briefly and then once more for a longer duration (until you hear the system's sound signal).

You can only charge the remote controller when it is powered OFF and only with the supplied fast Charger. The RC cannot be charged while working.

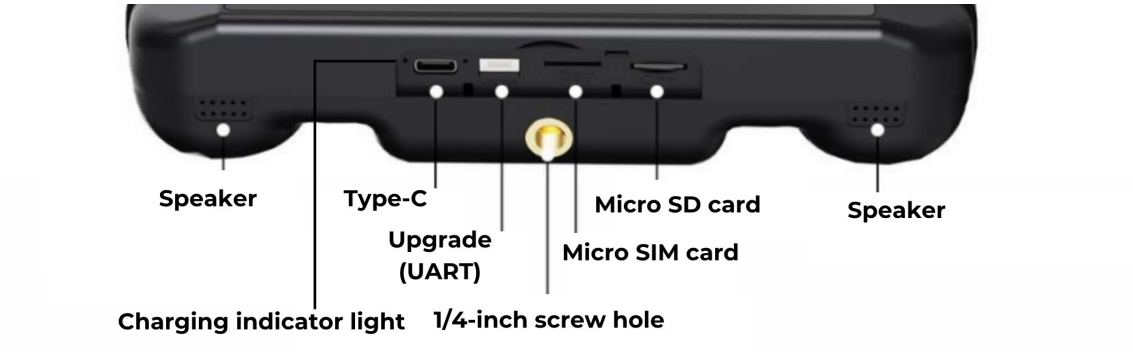

1. Connect the remote controller to the fast charger (connector Type-C) and plug it into the power supply.
2. The charging indicator lights are red when the ground unit is charging.
3. The charging indicator lights are green when charging is finished.

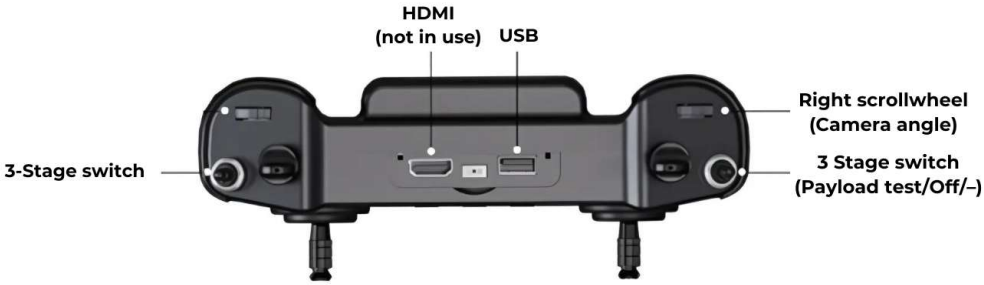


If you push the power button once short, the screen will turn off (power saving mode). If you push the button for 1 second, you can choose between the options of powering off the remote controller or taking a screenshot.


©2026 ABZ Innovation

Remote Controller Settings

You can access the Android navigation bar by swiping down from the top of the screen or swiping from the right side of the screen.

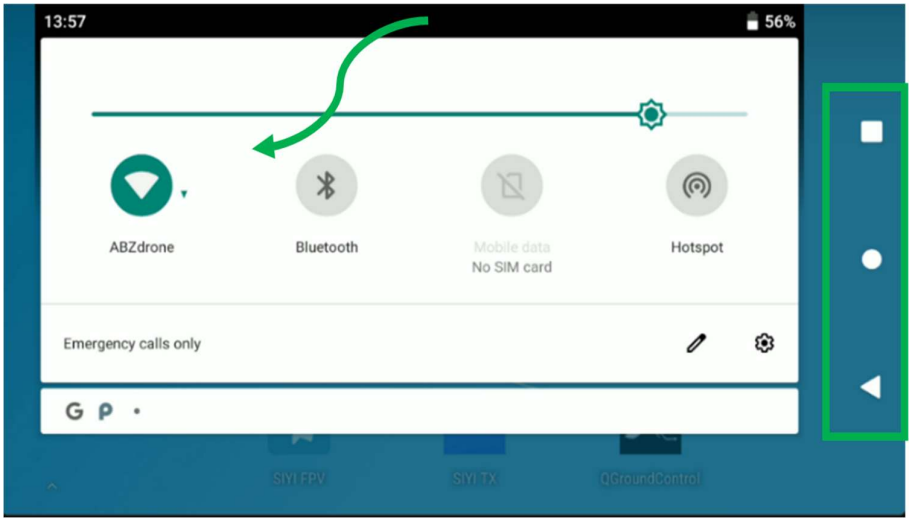

The rectangular icon allows you to switch between applications. The circular icon takes you to the main screen. The triangular icon lets you go back to the previous screen (note: this function is not supported in ABZ Control).

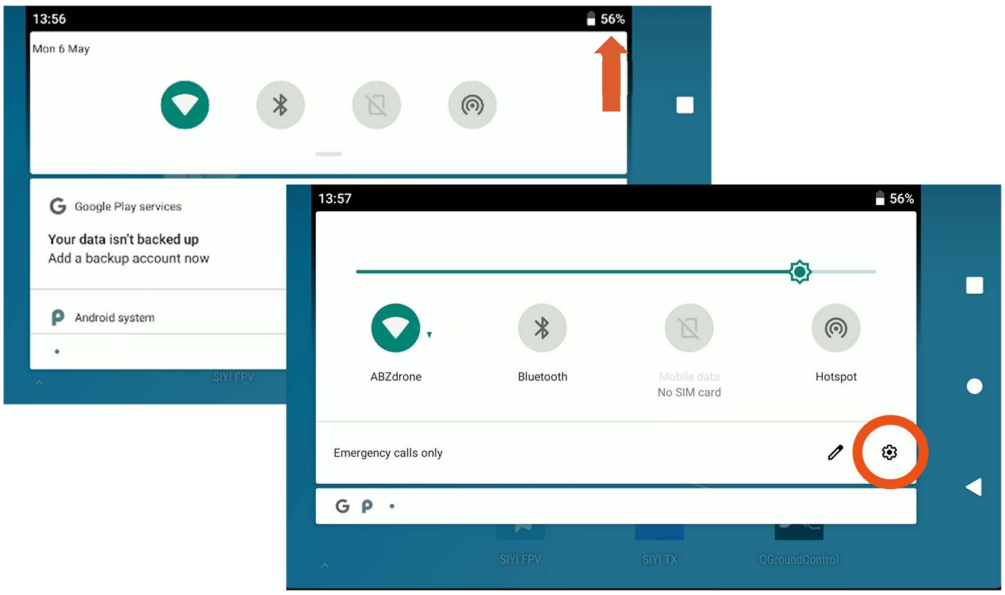


The remote controller battery status is displayed in the Android menu (by swiping down from the top of the screen).


©2026 ABZ Innovation

Set the **display brightness** and **sound volume** always according to environmental conditions (light conditions and noise level)! Setting the display brightness and sound volume is always accessible (even when operating the ABZ Control software) from the basic Android menu, swiping down from the top of the touch screen once, where the general Android quick menu appears.

Swiping down from the top of the touch screen once more, the slider for the display brightness setting appears:

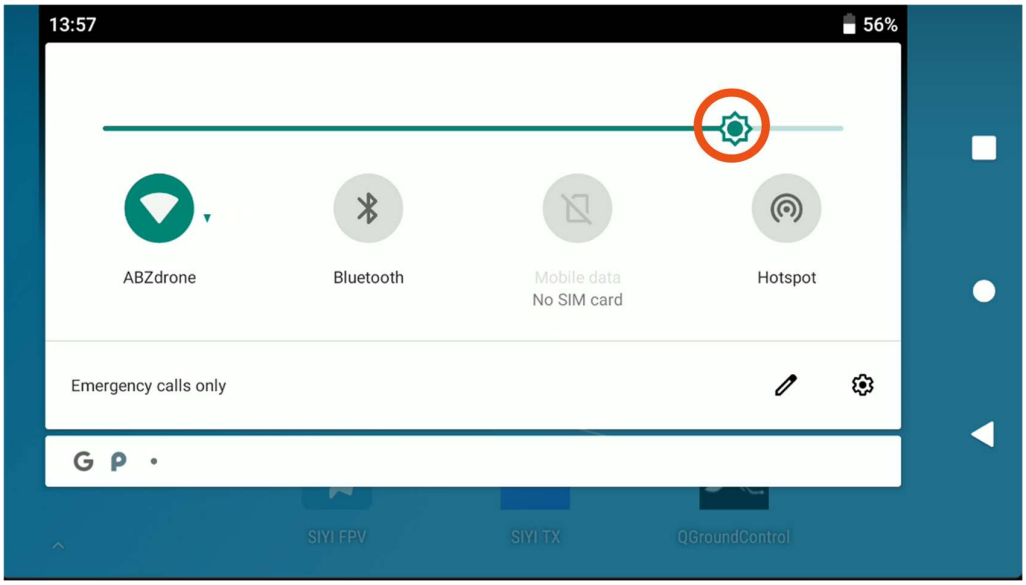

Click on **Settings** (gear icon) then scroll down to the Sound menu and tap on it to show the sliders for volume control functions.

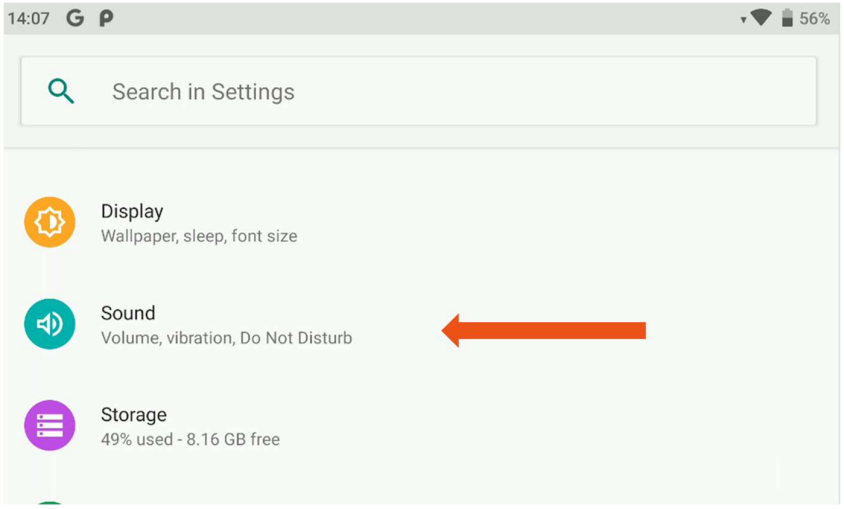

©2026 ABZ Innovation

Media volume controls the ABZ Control application's alerts and information volumes. **We highly recommend keeping it set to maximum volume at all times.**



©2026 ABZ Innovation


Network settings

To ensure the proper functioning of the ABZ Control application, the Ethernet connection must always be turned on. This setting is available under *Android Settings > Network & Internet.*

Internet connection

The remote controller can access the internet via Wi-Fi or Bluetooth connection, e.g. shared from a router, mobile phone, tablet, or laptop.

These options are available in the Android's Settings menu (by swiping down from top), by long pressing the Wi-Fi or Bluetooth icon, or by tapping the gear icon.

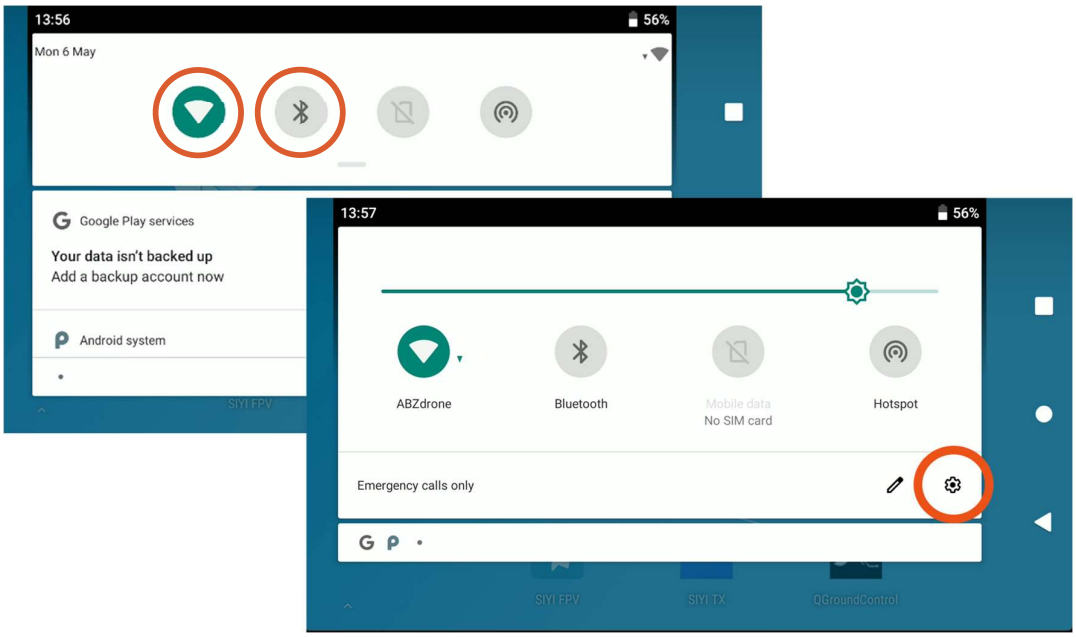


In the submenu the function can be switched on/off and the available devices can be connected. Wi-Fi only works on 2.4GHz networks. If the controller does not recognize the Wi-Fi from your mobile device, using Bluetooth connection for internet access is recommended.

©2026 ABZ Innovation

To set up the Bluetooth connection for internet access:

1. Turn off Wi-Fi on the controller.
2. Turn on Bluetooth hotspot / internet sharing on your mobile device.
3. Turn on Bluetooth on the controller and pair the two devices.
4. If your device is connected to the controller, you need to set up the internet connection.
5. Tap on the gear icon next to the device name, then turn on the Internet access.

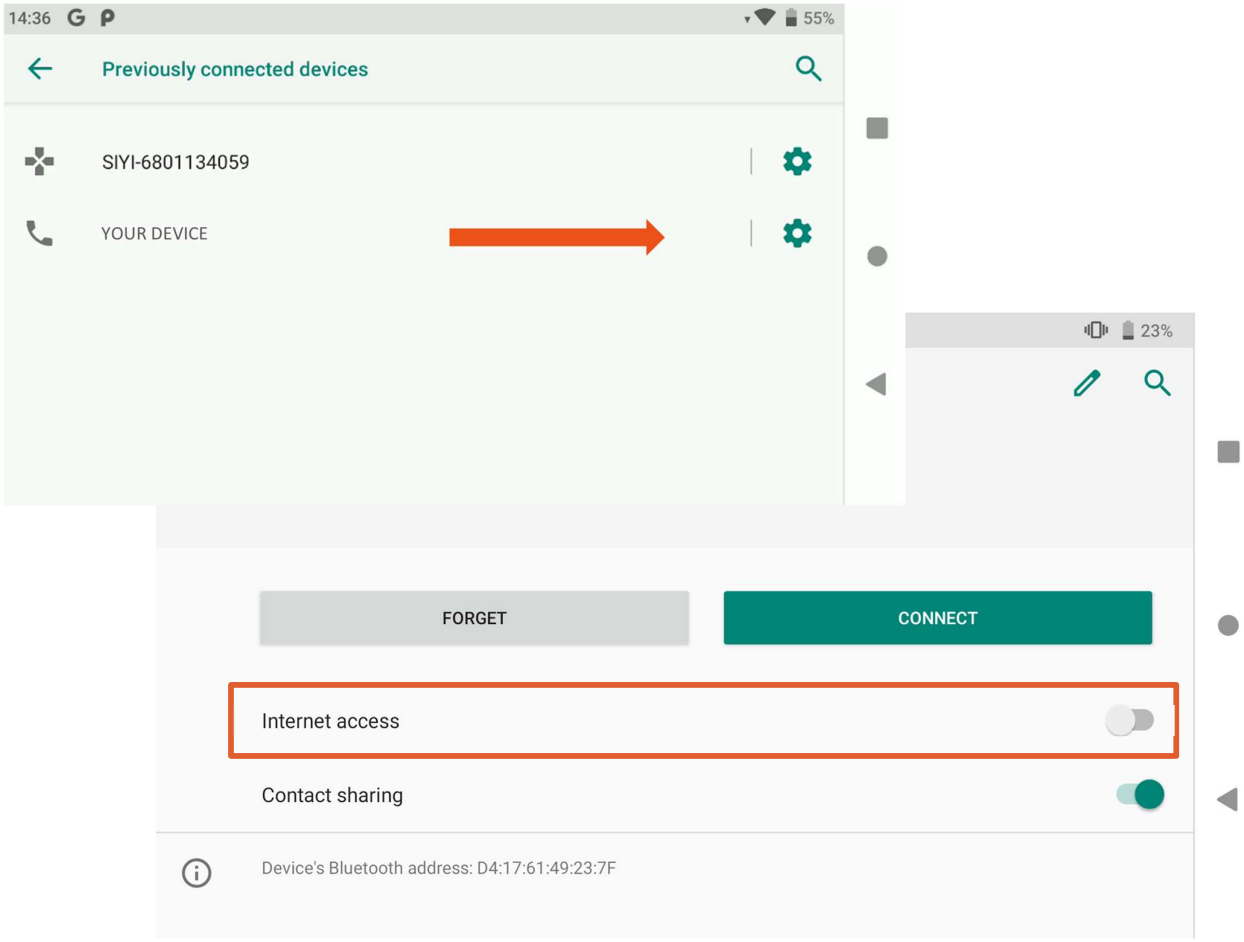

©2026 ABZ Innovation

Controlling the drone

It is only permitted to operate the drone in full compliance with this entire operator's manual and specifically the checklists.

Manual flight commands - switching flight modes to choose manual flight control:

- **Manual (Loiter) flight mode: A button** – (GPS-based) the flight must be controlled manually with the sticks. If both sticks are fully released, the drone will stop and hover at the actual GPS coordinated position.

- **Auto flight mode:** slider on the screen – (GPS based) the drone will fly the mission uploaded to the drone (created by Mission Planner application or created by ABZ Control on the remote controller). Always start the drone manually and fly to a safe height before switching to Auto flight mode.

- **Return To Launch flight mode**: **B button** – (GPS based) the drone will fly the shortest way to the launch position (if not changed manually, it is the same as the take-off position) at the specified altitude (Settings/Safety/Return to Launch) and then land itself.

  Every automated flight can be interrupted at any time, by the pilot's command to switch back to manual flight mode.

- **(AltHold flight mode (WITHOUT GPS positioning - *DevMode)*:** By default, this manual flight mode is **disabled** on the RC. To enable it, go to *ABZ Control > Settings > ABZ Flight > Advanced*. Once enabled, AltHold mode can be activated with the ***C*** **button**.

  In this mode, flight, braking, and stopping must be controlled manually with the sticks.The drone does not maintain its position, and the pilot must counteract wind forces. The drone maintains altitude using only its barometric pressure sensor, so the pilot must pay attention to altitude changes caused by atmospheric and weather conditions.)[4]

Emergency stop: In case of emergency, push the C button and D button simultaneously for at least 1 second. The motors will stop immediately, and the drone will crash into the ground.

[4] Only applicable for service flights

©2026 ABZ Innovation

The drone's pitch and roll angles, turning radius, climb, and descent speeds are limited by firmware in order to ensure safe flight. The pilot can safely fly the drone within all possible pilot inputs, no extra limitations are needed to implement manually.





- **Takeoff:** Switch to "Armed" mode by pushing the left control stick fully to the down-right position until "Armed" is shown on display, then release.
- After the motors are started and **have reached operating speed**, fly the drone manually using the left stick in **Mode 2** (default), and **take off to a safe height (at least 3 m/9.8 ft).**
- **Land:** Manually control the descent speed and slow it down before reaching ground.

©2026 ABZ Innovation

After landing, switch to **„Disarmed**" mode by pushing the left control stick fully to the down position until „Disarmed" is shown on the display and the motors are completely stopped, then release it.

Make sure to release the stick after arm immediately, otherwise the system will detect your action as accidental and switch back to the mode previously selected.

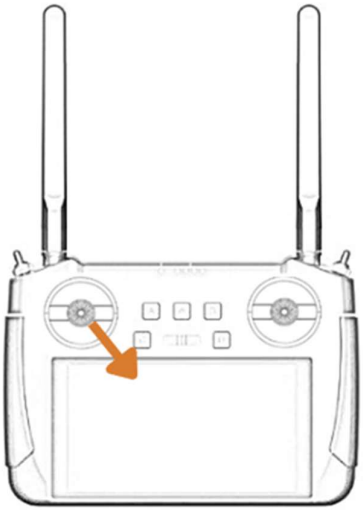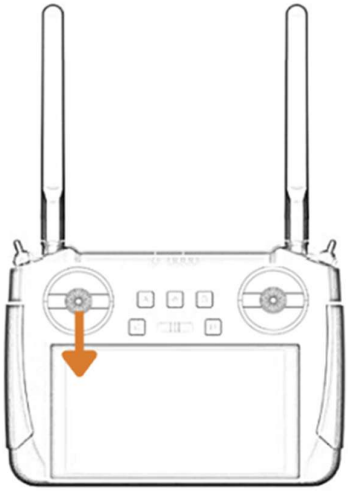Arm	Disarm
	





When you arm or disarm the drone, a large orange text appears on the screen, notifying you of the drone's status change. If audio is enabled, a voice notification will announce the same:

©2026 ABZ Innovation



©2026 ABZ Innovation

Default control (mode 2)

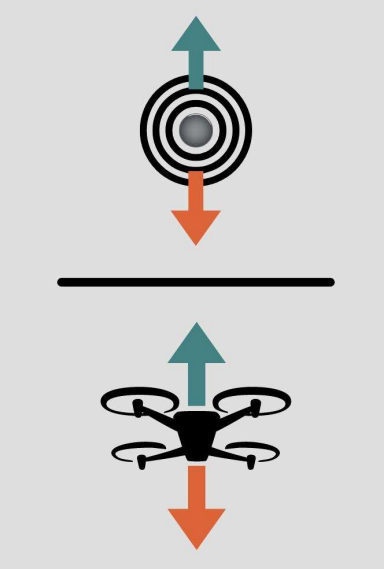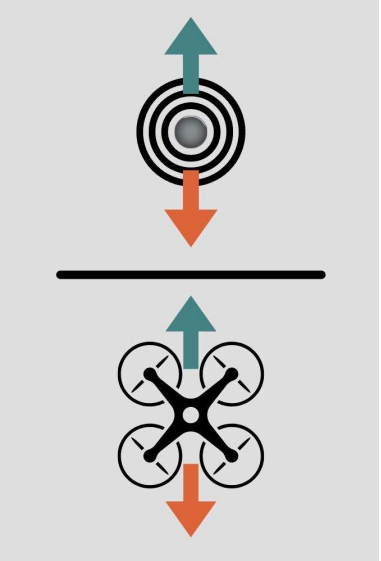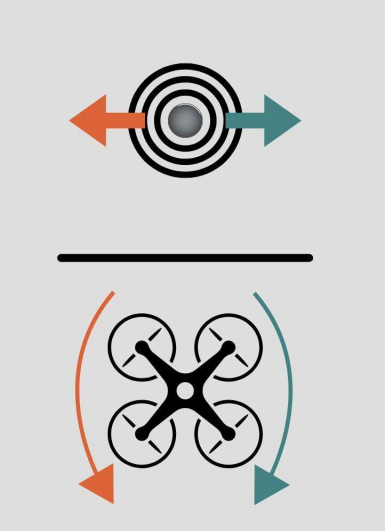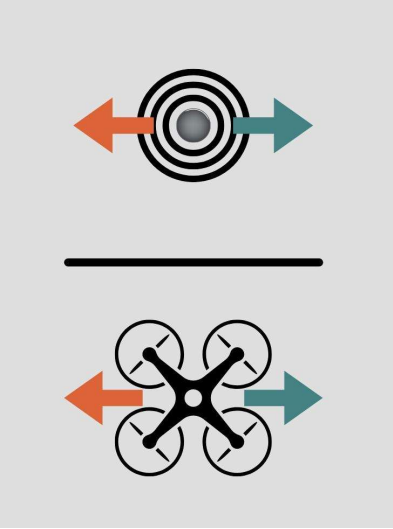Left stick  **Up/down** **(Throttle)**	**Right stick**  **Forward/backward** **(Pitch)**
 **Rotation** **(Yaw)**	 **Left/right** **(Roll)**


©2026 ABZ Innovation

Starting the pump/payload manually

If the drone is filled with liquid for the first time after the tank has been completely emptied, the pump can be started manually before take-off to facilitate dispensing from the empty tubes. This method can also be used to flush the spraying system.

In any case, this function is only used before pressing the Upload button of the automatic flight plan detailed below, if necessary! Cleaning and flushing the spray system is recommended with the Test Pump pwm at 1900 and the Test Spinner pwm at 1100 and 1900 (the lowest and highest CDA rotation).

You can make the necessary settings in the ABZ Control application under **Settings > Payload** by selecting Sprayer as Payload. You can activate the function by flipping the three-position switch on the right-hand side backward.

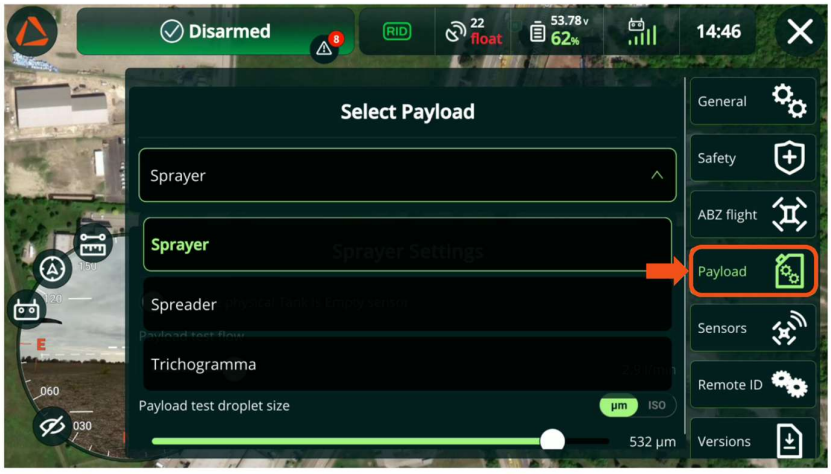



©2026 ABZ Innovation

ABZ Control Software Overview


The L30 V2 is compatible only with the controllers provided by ABZ Innovation with specialized ABZ Control software. Other devices or applications are not compatible for controlling the drone and, therefore prohibited to use with the drone.

No software update is needed before and during operating the drone, future updates are only optional. Any future software updates will not affect the control and flight functions. Software update procedures are explained and guided in the documentation of the update package. All information and files are available at: abzinnovation.com/updates. Please check this website if you are looking for software or firmware update options.

Start the ABZ Control flight control and planning application by clicking on its icon on the home screen.




After starting the ABZ Control application, you will receive a pop-up window with the message: Allow ABZ Control to access USB to UART Controller. Click on OK.

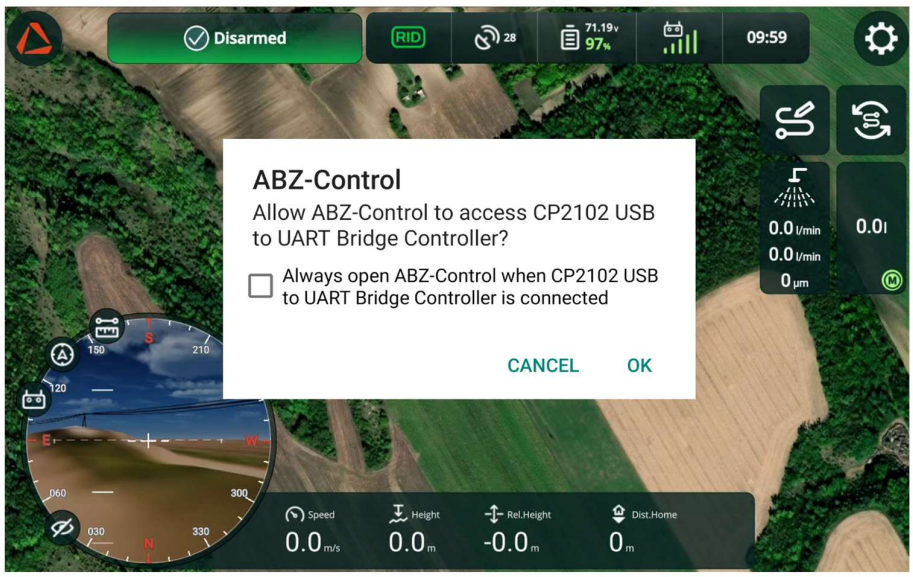


©2026 ABZ Innovation

While the drone connects to ABZ Control, the startup screen is displayed. You can access Settings without connecting to the drone by clicking the Gear icon. To open the Fly view without a drone connection, click the **Go to Fly View** option.

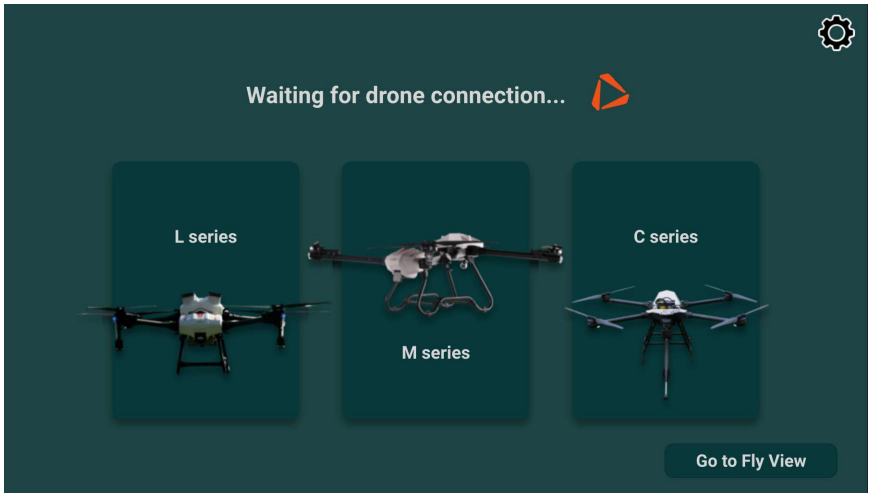


After launching the application, the following screen will be displayed. In the top menu bar, you will find icons representing the main views. In the left corner, the ABZ Innovation icon navigates to the Fly view.

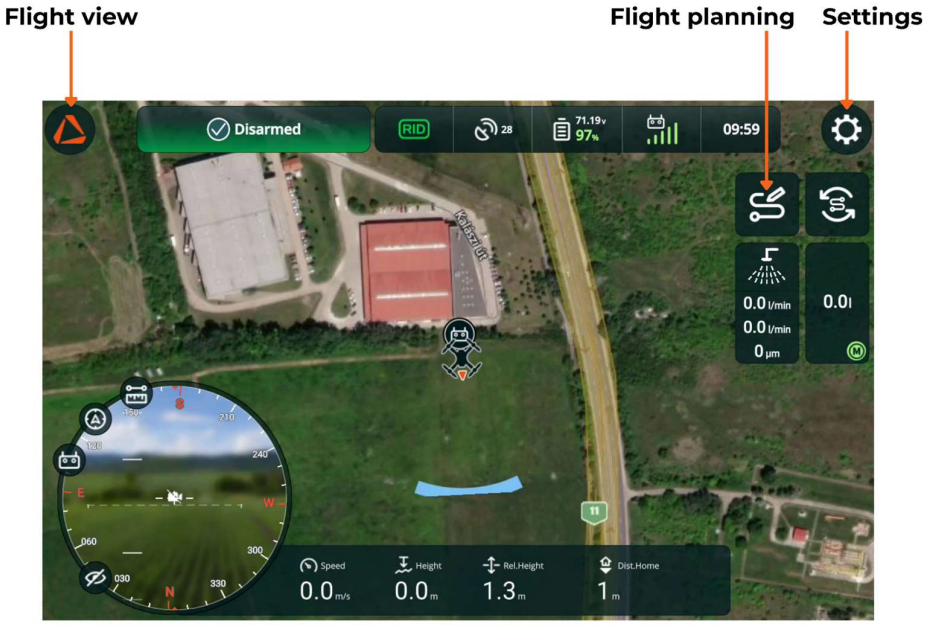

In the top right corner of the screen, you can access the Settings and the Flight Planning view.

After powering on and connecting the drone, you will see status icons at the top, including: Vehicle Messages, Remote ID Status, GNSS Status, Drone Battery Status, GCS failsafe.

©2026 ABZ Innovation

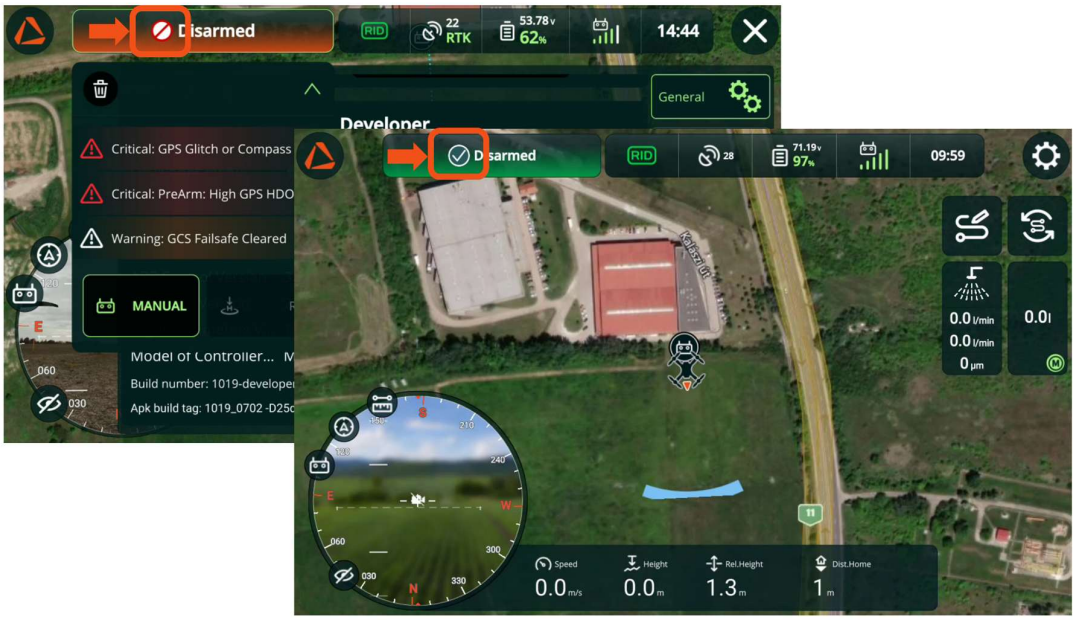

On the left side of the top bar, a red no-entry sign indicates that the drone is still preparing its systems for flight. If the icon changes to a green check mark, the drone is ready and can be armed.

©2026 ABZ Innovation



1: Vehicle messages

2: Systems ready

- Not ready to fly
- Ready to fly

3: Flight mode and altitude hold method

4: Remote ID (RID) Status

- RID healthy
- RID unhealthy

5: GNSS status

Above: Number of satelites

Below: RTK connection feedback

6: Drone battery status

Above: Battery voltage

Below: Charge percentage

7: Remote controller battery status

8: Payload status

Relevent only for L-series drones

- Sprayer OFF
- Sprayer ON
- Spreader OFF
- Spreader ON
- Trichogramma OFF
- Trichogramma ON


9: Tank status

10: Obstacle avoidance (OBA)

- OBA


©2026 ABZ Innovation

The RID icon shows the operational status of the Remote ID system. If the icon is green, the Remote ID is broadcast correctly. By clicking on the icon, you can check the health of the systems providing the necessary data for the Remote ID module. For further information regarding Remote Identification, see Mandatory Remote identification with Dronetag.

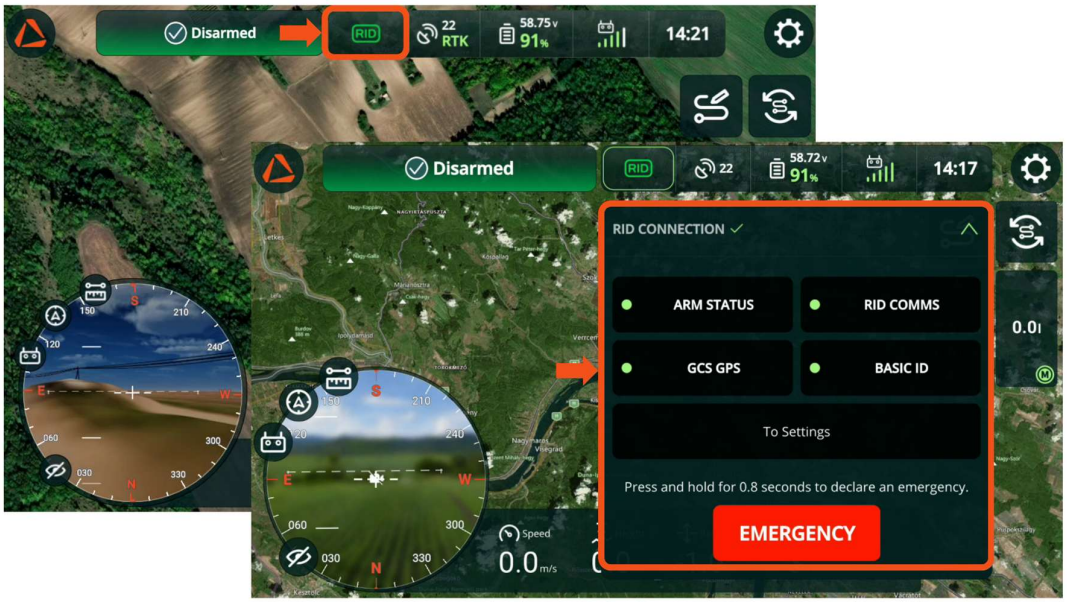

In the event of a Remote ID system error caused by insufficient GPS coverage on the drone or the remote controller, or by a hardware malfunction, the drone prevents arming!

By clicking on the GPS icon, you can enable the RTK connection and select the RTK source. For further adjustments, click the **To Settings** button to access the **Settings > RTK** menu.

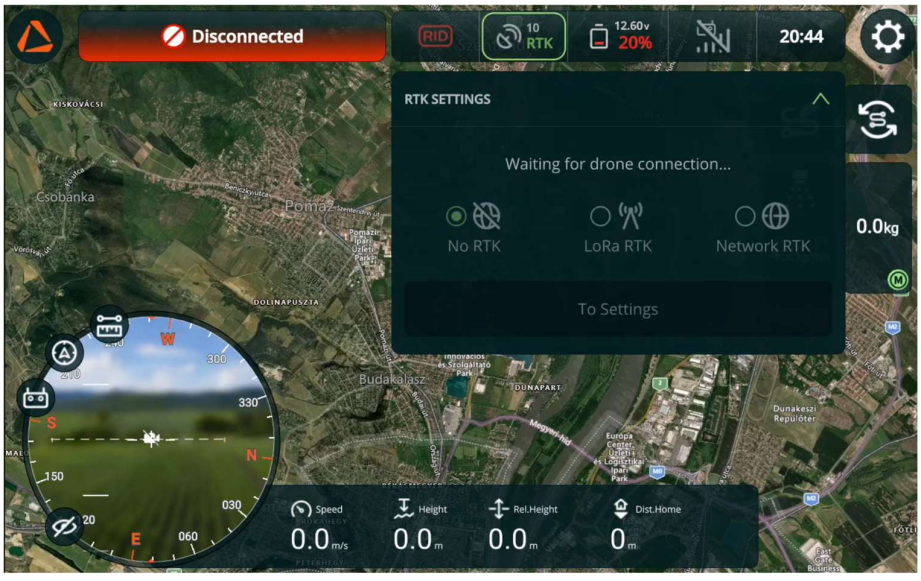

©2026 ABZ Innovation

Next to the drone battery icon, you will see the charge percentage and battery voltage. During the flight, you must continuously monitor the battery voltage, which should remain above 51.4 V for Tattu Plus batteries and 48.5 V for ABZ Innovation L30 Smart Batteries , even when flying at the Maximum Take-Off Mass (MTOM).



The state of the drone battery should also be monitored before the flight using the charging indicator LEDs on the battery. We recommend starting the flight with a minimum of 80% battery charge.

By clicking on the battery icon, you can change the Battery Failsafe settings. For further adjustments, click the To Settings button to access the settings menu.




©2026 ABZ Innovation

By clicking on the RC icon, you can adjust the GCS Failsafe Settings (Height and Action). For further adjustments, click the **To Settings** button to access the **Settings > Safety** menu.



In the Flight status bar, you can see information about the altitude hold method (Follow terrain with LiDAR or Relative) and the actual flight mode of the drone.

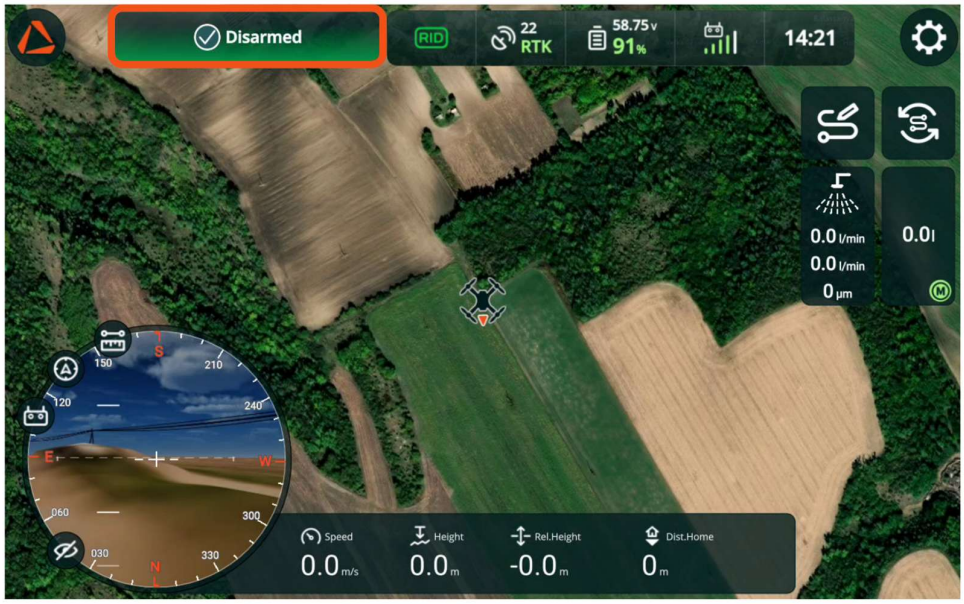


©2026 ABZ Innovation

It can show the following statuses:

- Disarmed
- ManualRel: Manual (Manual (Loiter)) – Relative mode
- AutoTerr: Auto mode – Follow terrain
- AutoRel: Auto mode – Relative mode
- RTL (Return to Launch mode)

Only fly the drone if the green check mark is visible, and the **Manual (Loiter) flight mode** is selected.

Click on the status bar to display the system messages. You can choose between **Manual** and **RTL** (Return to Launch) flight mode. When you select RTL the drone will immediately return to the launch point—without asking for confirmation—based on the settings defined under **Settings > Safety > Return to Launch**.

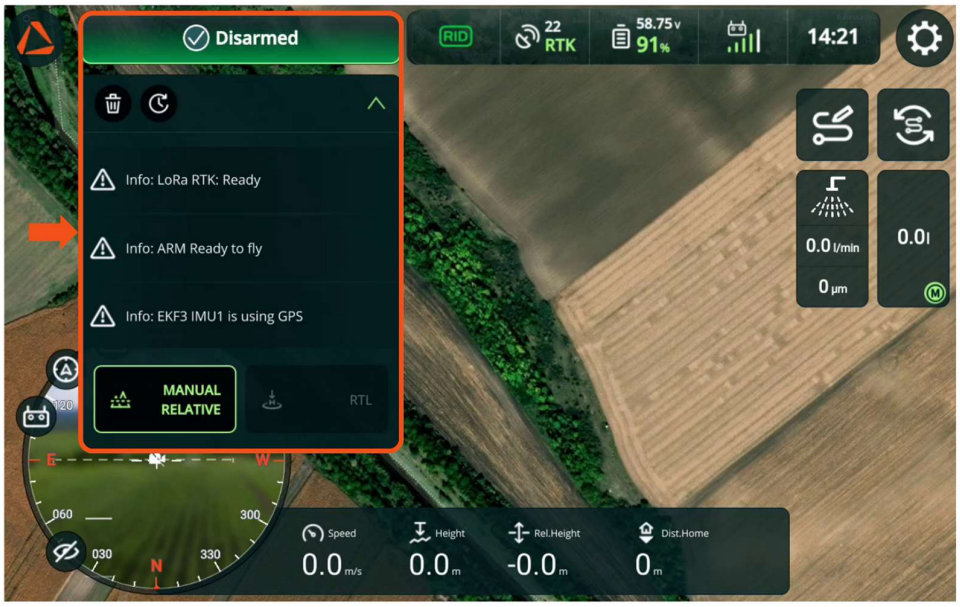

In the Fly view, with a mission uploaded to the drone, you will see three windows: the **Camera View** (1), the **Telemetry Window** (3), and the **Operation Window** (2).

©2026 ABZ Innovation



The **Camera View** contains an artificial horizon, compass and home point marker. For a full screen camera view, click on the camera view window.



When the full screen camera view is selected the map view displays in the small window at the bottom left corner. Rotate the dial to zoom in and out.

©2026 ABZ Innovation



On the **Camera view** window there are four function buttons:




- Measuring instrument (1): Click on the icon to activate this function. Select locations on the map to measure distance, perimeter and area.



©2026 ABZ Innovation

- Drone position icon (2): Click on the icon to center the map on the **drone**.
- Remote control position icon (3) Click on the icon to center the map either on the **remote controller** or on your **mission**.
- Hide view icon (4): Click on the icon to **hide** the **Camera View** and the **Telemetry Window**. When this function is activated the telemetry data displays in a small window next to the drone icon. Click on the drone icon to hide the small telemetry display.

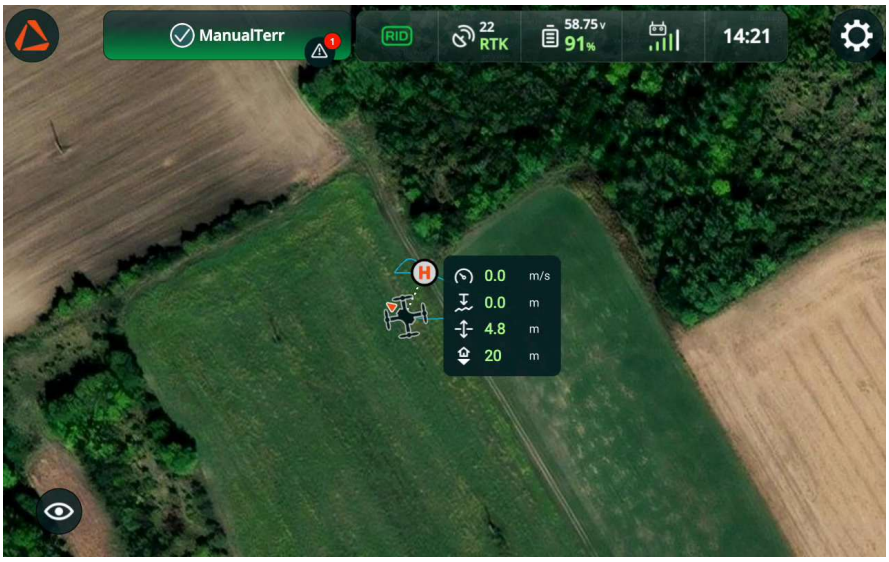

The **Telemetry Window** displays real-time telemetry data, including operational information and drone measurements.



©2026 ABZ Innovation

In the telemetry window, you can monitor the following data during flight:

- **Speed** → The current speed of the drone.
- **Height** → The current height from the ground measured by the LIDAR.
- **Rel. Height** → The relative altitude from the takeoff point.
- **Dist. Home** → The distance from the Home point (takeoff point).

©2026 ABZ Innovation

If a mission was uploaded to the drone, the **Operation window** displays the upcoming steps for the pilot and provides access to essential functions throughout the automatic flight.


After you have entered the fluid level in the tank, armed the drone, and taken off manually, the Mission Start button becomes available.
(For further information on flying a Mission, see the Starting the mission section.



If the drone is in **Auto Mission mode**, this button will change to **Pause Mission**. When you click on Pause, the drone switches to Manual (Loiter) Mode.



©2026 ABZ Innovation

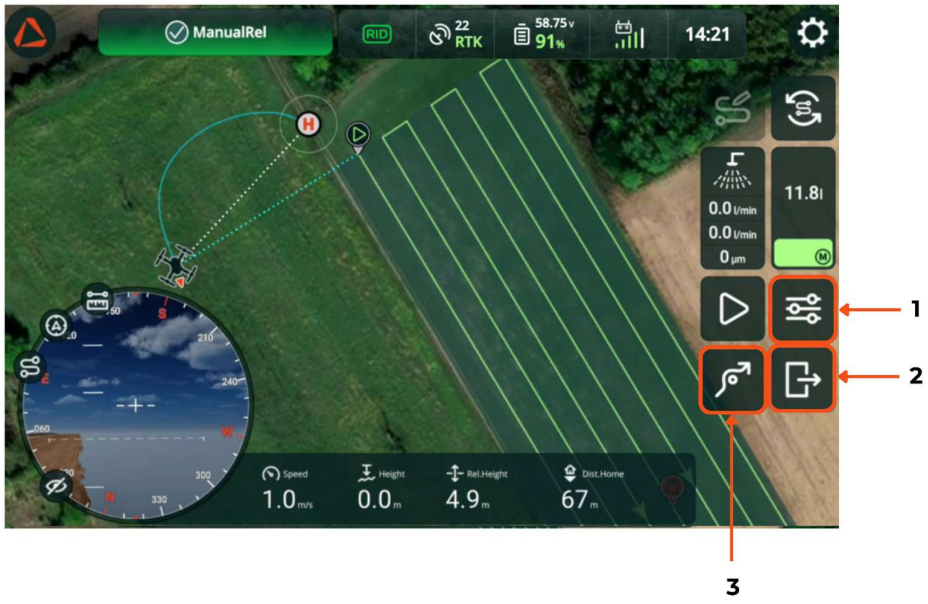


During flight, in the Operation window:

- Use the **Options button** (1) to change the Mission and Spraying settings after pausing the mission.
- Use the **OBA button** (3) to manually declare an obstacle. (For more information, see the Obstacle Avoidance with ABZ sense section.)
- Use the **Exit mission button** (2) to clear the mission from the drone.


©2026 ABZ Innovation

Settings

In the **Settings** menu, you can change the user interface settings (e.g., language or units of measurement), configure the Failsafe and Mission-related behavior of your drone, set up the Obstacle Avoidance system and your payloads, manage the shapefiles used during planning, configure the RTK correction, and adjust the default behavior of your drone. To access the Settings, tap the gear icon in the top-right corner of the screen.

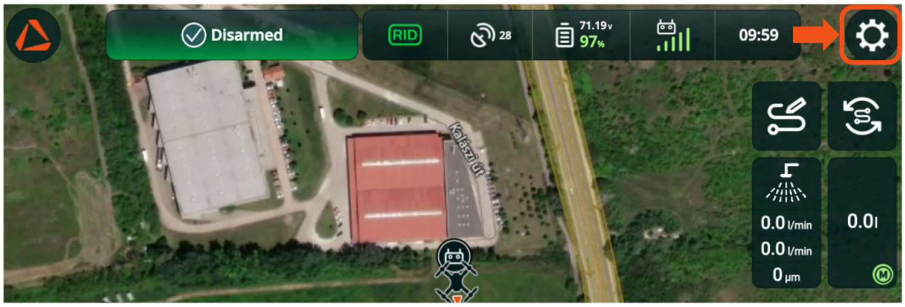

In the General Menu, you can configure various settings, including the default measurement units used in the ABZ Control interface and on the online map used as the background of the Fly view.

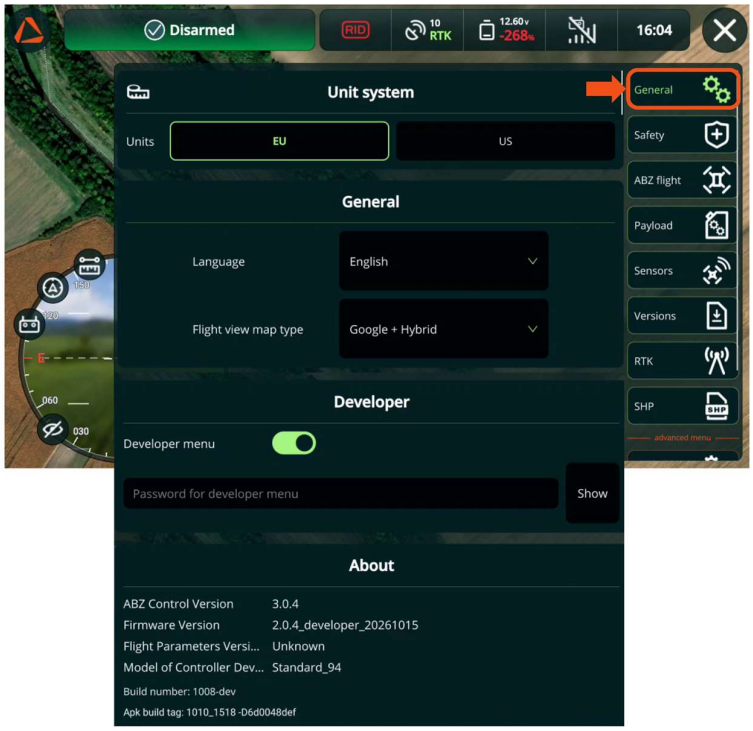

The current software version of your drone is displayed at the bottom of this page. If you contact our Support Center with an inquiry regarding your drone, you will be required to provide this information. The same details are also accessible via the *Settings > Versions* menu.

Safety – Setting up FailSafe

When using a UAS, unexpected events may occur that require intervention. The FailSafe settings are required by law, primarily to prevent personal injury and property damage.

Under *Settings > Safety*, always check and configure the FailSafe settings before every new flight or mission.

- **General failsafe triggers:** you can set what the machine should do in case of losing the remote controller's signal
- **Return to Launch:** set parameters for automatic return to home
  - Specify if current or specified altitude is desired.
  - Return at specific altitude: decide the altitude at which the drone flies in Return-to-Launch mode.
  - Return speed: decide the speed at which the drone flies in Return-to-Launch mode.
- **GeoCage:** you can set virtual boundaries that the drone will not fly over.
  - Circle Centered on Home means the drone will stop if it reaches the desired radius from the Home position.
  - Maximum Altitude means the drone will not fly over the desired altitude relative to the takeoff position.


    (For more safety instructions when you use the Geocage with AltHold flight mode, see Brake mode.)
- **Arm Lock Sensor Status:** You can decide whether the arm lock sensor's feedback regarding the arms' lock status should be included in the pre-arm check. If enabled, the drone will not allow arming if the sensor detects that an arm is not locked. (Error message: Arms are not secured, check them again!) If this function is enabled, the arms' lock status can be verified using the provided visual. A green circle around the propeller indicates that the arm is locked.

You can also configure the drone's heading behavior and flight speed during Return-to-Launch mode. To adjust these settings, go to *Settings > ABZ Flight > Heading behavior during RTL*.

©2026 ABZ Innovation

Action functions:

- **None:** the drone does not take any action itself. It remains in the actual flight mode.
- **Land:** the drone lands at the actual position and disarms itself after landing.
- **RTL:** the drone switches to RTL mode, and following the Return to Launch settings, it flies back to the takeoff position, then lands and disarms itself after landing.

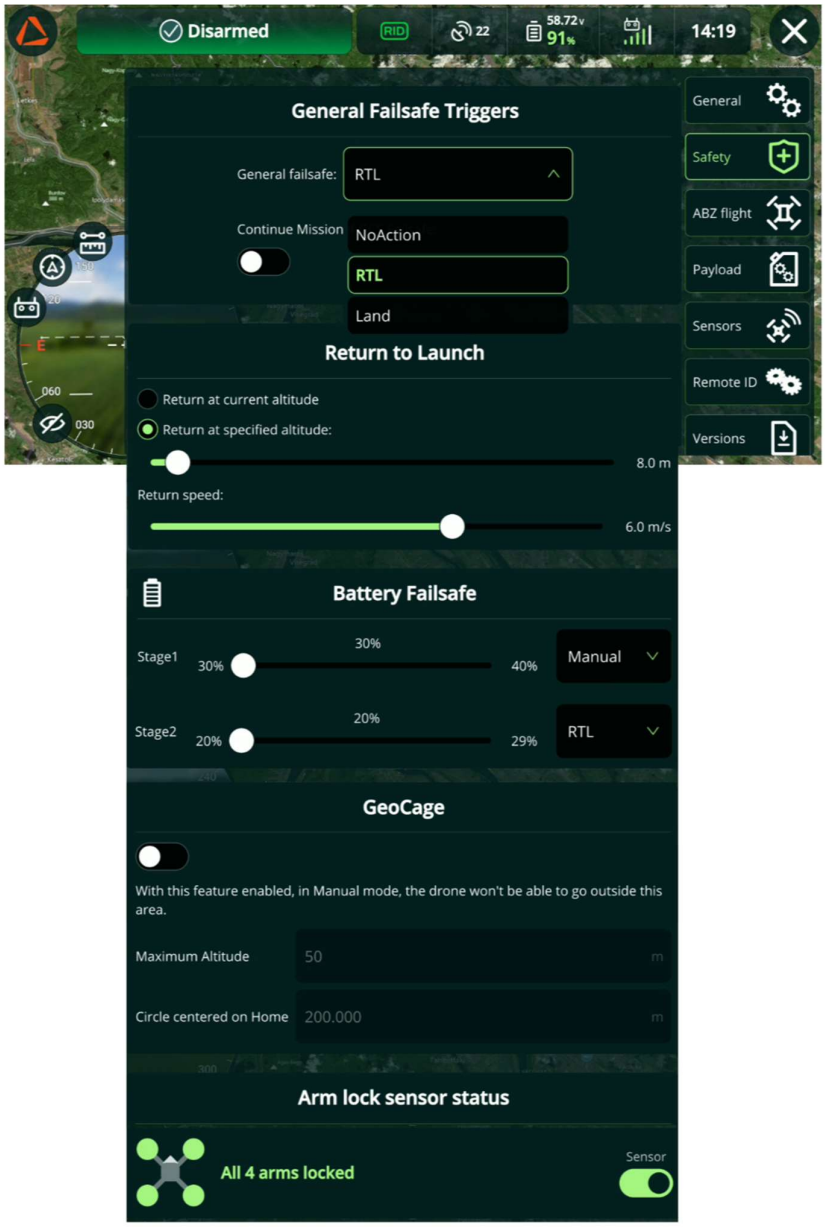


©2026 ABZ Innovation


RTK configuration

In the **RTK** menu, you can connect to an RTK correction data source to achieve centimeter-level positioning accuracy during flight. You can connect either to:

- an online server that provides RTK for your drone (Network RTK),
- an **Emlid base station** via **LoRa radio****, local **NTRIP, or NTRIP (via the Emlid Caster)**.

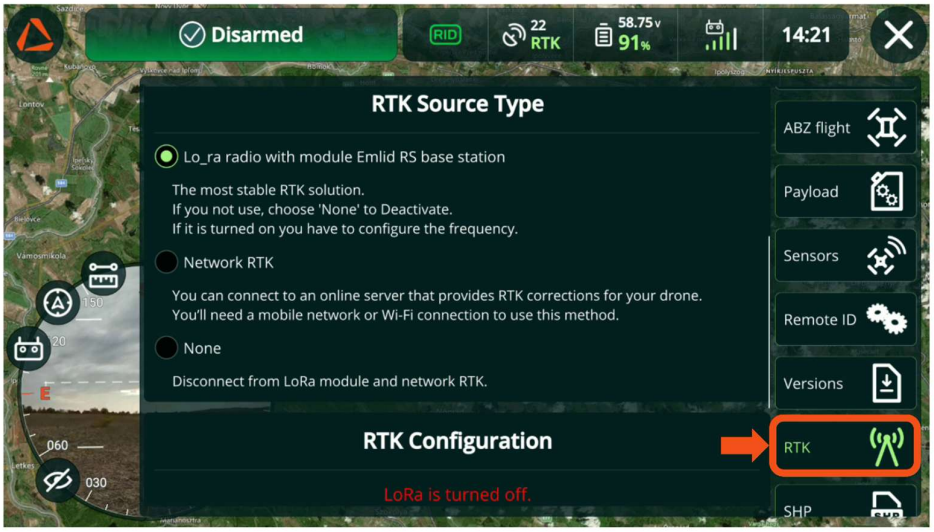

If using an **Emlid RS base station with LoRa[5]****, make sure it is configured to **Output: LoRa**, and that the frequency matches the Base output value specified in the Emlid flow app.

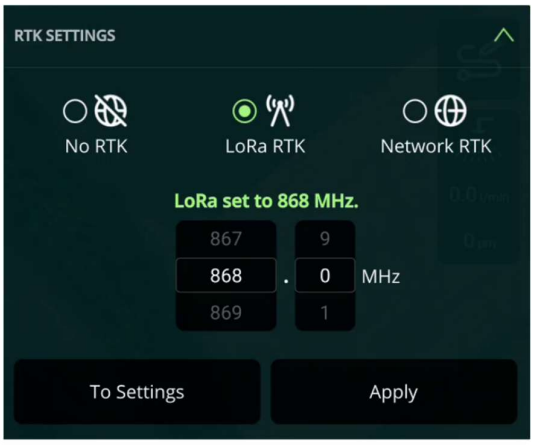



[5]****The LoRa connection to the Emlid base station is only applicable for drones equipped with LoRa modul.**

©2026 ABZ Innovation

Under **Network RTK**, you can connect to a Network RTK environment, or to the nearest Continuously Operating Reference Station (CORS) through an NTRIP Caster. You can also connect to your Emlid base station through **Local NTRIP** or **NTRIP**. (For more information about connecting to the Emlid base station, see the Emlid RTK section).


To receive corrections from a Network RTK provider, connect to the internet with your mobile device as a hotspot.

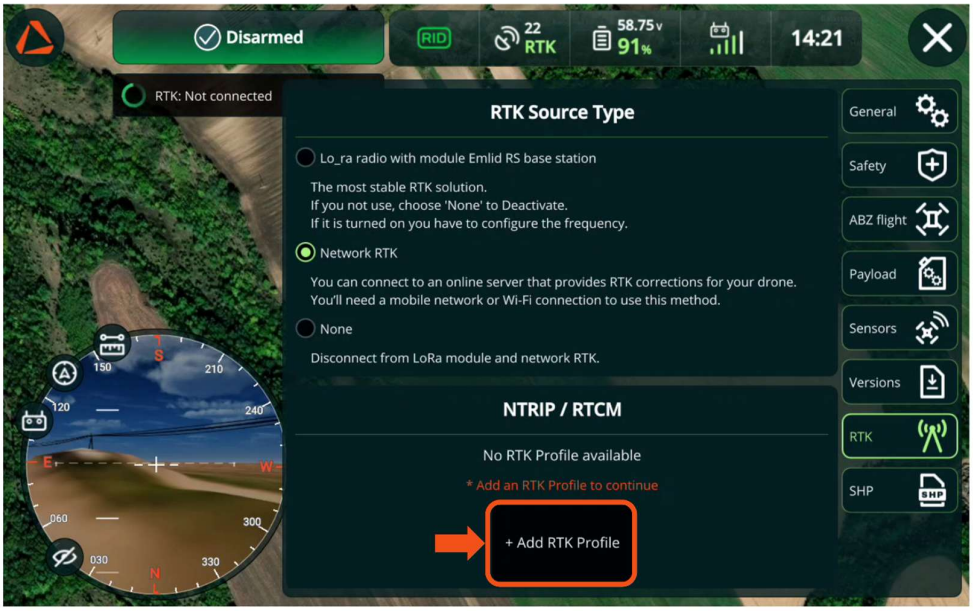

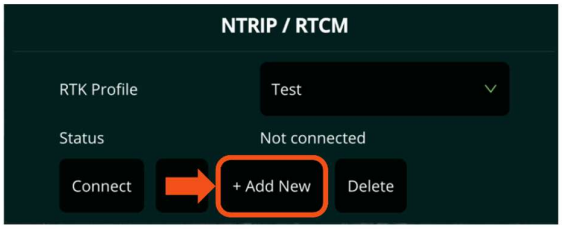


To receive corrections through NTRIP connection, make a profile by clicking **Add RTK Profile** or **Add new**. After you give a name to the profile, enter the credentials given by your NTRIP service provider. Click on **Save & Connect**.

©2026 ABZ Innovation

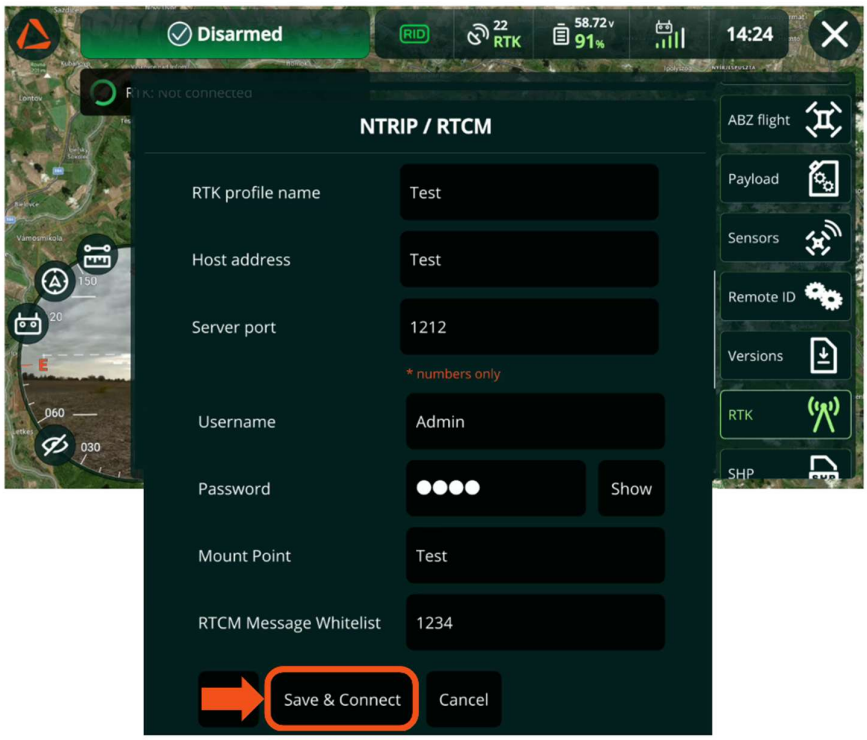

You can save multiple RTK profiles. To connect to an RTK Profile, select it from the list and click Connect.

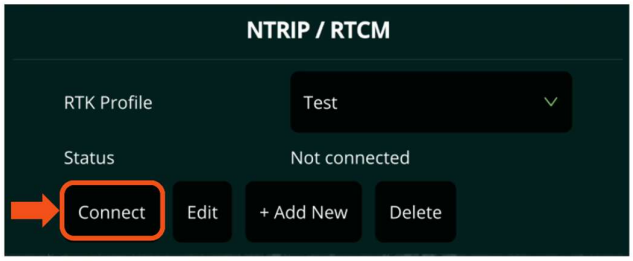

To edit the Credentials of an RTK Profile, click on **Edit**. To delete an RTK Profile, Click **Delete**.

If you choose to fly with an RTK source, the system will only allow you to arm the drone if the correction data is accurate enough to ensure proper drone positioning.

If RTK correction is available and accurate, the "RTK" status will appear next to the GNSS icon in the top bar.



©2026 ABZ Innovation

Settings: SHP

In the SHP menu, you can import Point, Polygon, or Polyline shapefiles to use as a boundary, mission route, or visual guide for mission planning.

To successfully import a shapefile, make sure that:

1. You select a folder that directly contains the shapefile folder or a `.zip` archive.
2. The shapefile folder includes all the required files: `.shp`, `.shx`, and `.dbf`.
3. The folder name matches the filenames.


For further information, see the To import a shapefile into ABZ Control section.

©2026 ABZ Innovation


Abz Flight

In the **ABZ Flight** menu, you can enable **Obstacle Avoidance** for both Automatic and Manual (Loiter) flight modes, and configure the drone's mission-related behavior.

Under the Camera View section, you can see the camera type used by ABZ Control. The default setting is FPV.

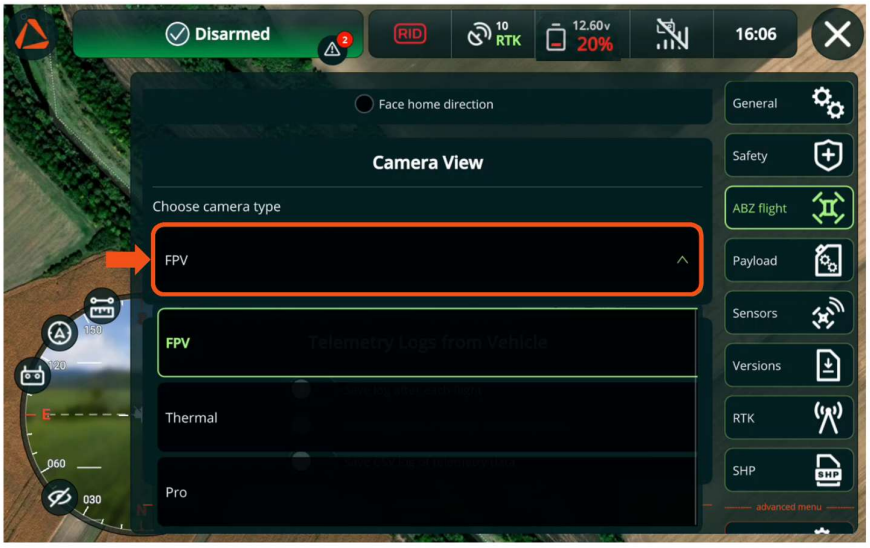


You can save the telemetry log files of your flights by checking in the Save log after each flight. The data will be saved to the folder under *ABZ Control* > *Telemetry* folder.

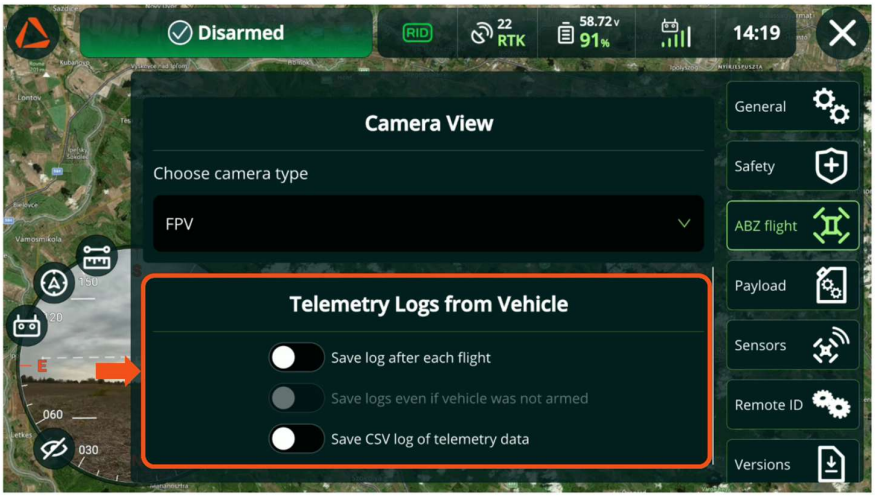

©2026 ABZ Innovation


Adjusting the Obstacle Avoidance Options

In the **ABZ Flight** menu, you can enable **Obstacle Avoidance** for both Manual (Loiter) and Auto Flight modes. You can also specify the obstacle sensing distance, which determines how far the drone should stay from obstacles. For more information, see the ABZ Sense Obstacle Avoidance system section.

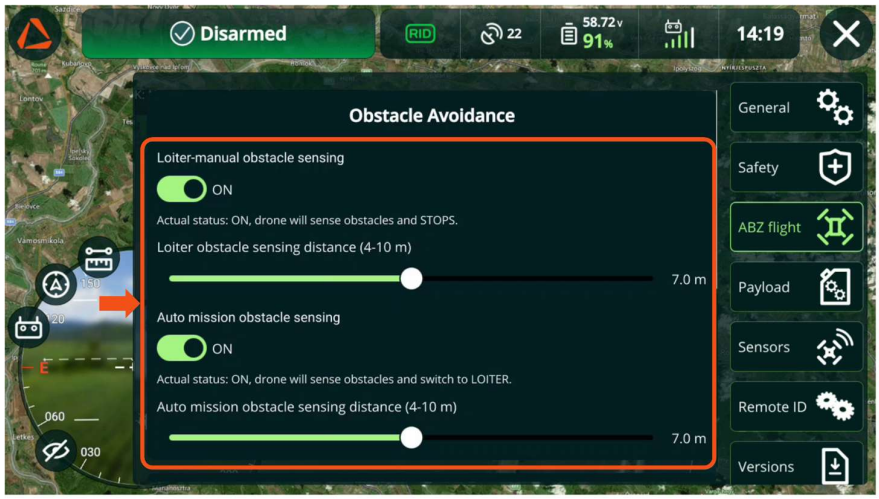

Additional Settings in ABZ Flight

Under the **Additional Settings**, you can configure the drones automatic behaviour during Mission. You can decide what the drone should do when the Tank is empty and when it finished the Mission.

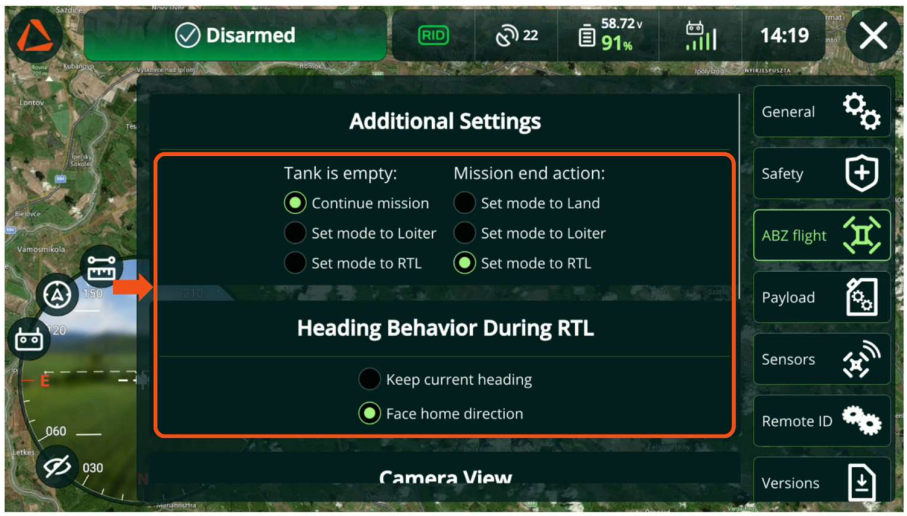

©2026 ABZ Innovation

- **Mission end action:** you can decide what the drone should do when the mission is completed. You can choose between setting the mode to Land, setting the mode to Manual (Loiter) or returning to launch (RTL).
- **Tank is empty:** you can decide what the drone should do when the tank runs empty during the mission. If the drone/payload has a physical sensor and you activate it under **Settings > Payload**, the action will be determined by the sensor's input. Otherwise, the action will take place at the emptying point calculated by the ABZ Control software.
- **Heading behavior during RTL:** You can choose the direction the drone should face when returning to its home point. The drone can either maintain its current heading or orient itself toward the home location.

IMU - Compass calibration

Under the IMU option, the **Compass Calibration** can be carried out. **The calibration should only be performed if requested by the software or instructed by the Support Center.**


For further instructions, see the Compass Calibration section.

©2026 ABZ Innovation

Remote ID

In the **Remote ID** section, you can set the **SELF-ID** to transmit during operation. Use this function if you want to show your identification, the flight task, or both. This helps to make persons feel safe when the UA operates near them.


If you operate the drone in the European Union, you must register as a drone operator on the official website of your National Aviation Authority. After you register, you receive a registration ID number. Enter this number in the **Operator ID** field.

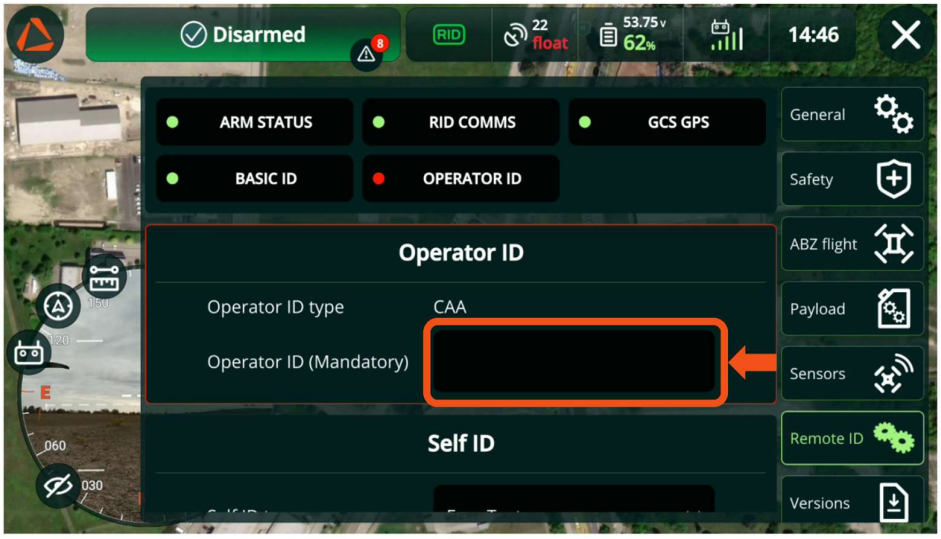

©2026 ABZ Innovation

Software versions and Update

You can check the current drone firmware and ABZ Control software versions under **Settings > Versions.** If you contact our Support Center with an inquiry regarding your drone, you will be required to provide this information.

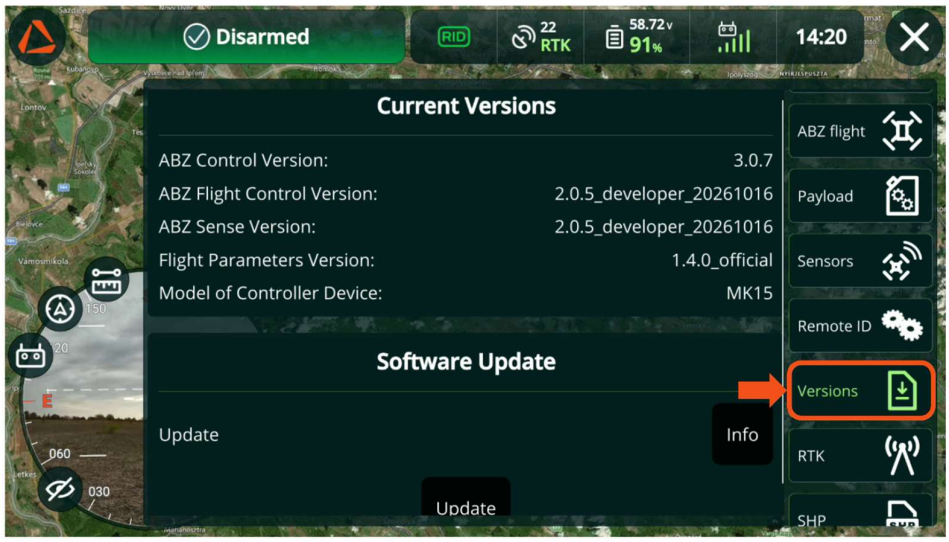



ABZ Innovation communicates all new software releases via email. Only perform updates when instructed to do so by ABZ Innovation.

©2026 ABZ Innovation

Configuring Payloads

If you have purchased different types of ABZ Innovation payloads (e.g., Spreader or Trichogramma) and your drone is equipped with the necessary connectors, you can switch between them in the **Settings > Payloads** menu. The Payload Test switch will activate the selected payload using the test values defined in this menu.

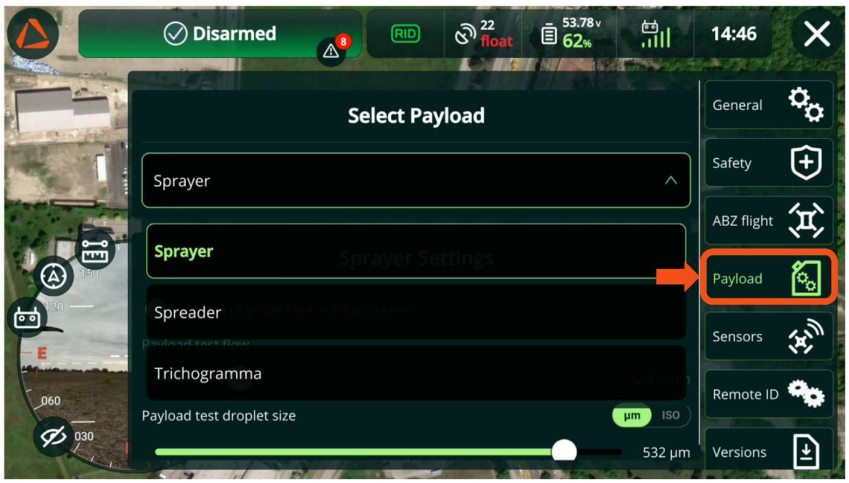

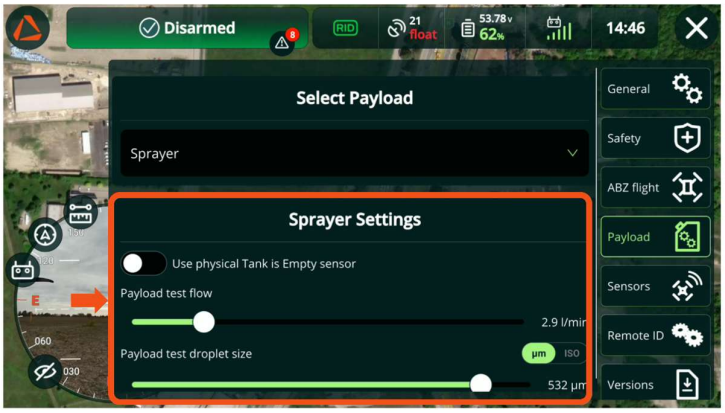



When planning an automatic mission for a specific payload, ensure the payload type is set correctly before planning.

©2026 ABZ Innovation

ABZ Sense

Obstacle Avoidance with ABZ sense


The ABZ Innovation L30 V2 drone uses the Multi beam LiDAR based ABZ Sense system to provide reliable obstacle avoidance, ensuring safe and efficient drone operations.

The Obstacle Avoidance (OBA) function is available in both manual (Loiter) and automatic flight modes. By default, it is enabled in manual mode and disabled in automatic mode. The obstacle avoidance is NOT FUNCTIONING when flying home with the „Return to Launch - RTL" function.

You can enable or disable Obstacle Avoidance via **Settings > ABZ Flight.**

When flying with obstacle avoidance enabled, the drone constantly analyzes its environment using its multi-beam LiDAR system. If an obstacle is detected, the drone stops at the distance defined as the obstacle avoidance distance.

The obstacle avoidance distance can be set between 4 m (13.1 ft) and 10 m (32.8 ft), and can be considered outside of the drone's braking distance (you do not need to consider the braking distance when defining it). The drone consistently preserves the set distance from obstacles, actively pulling back when necessary.

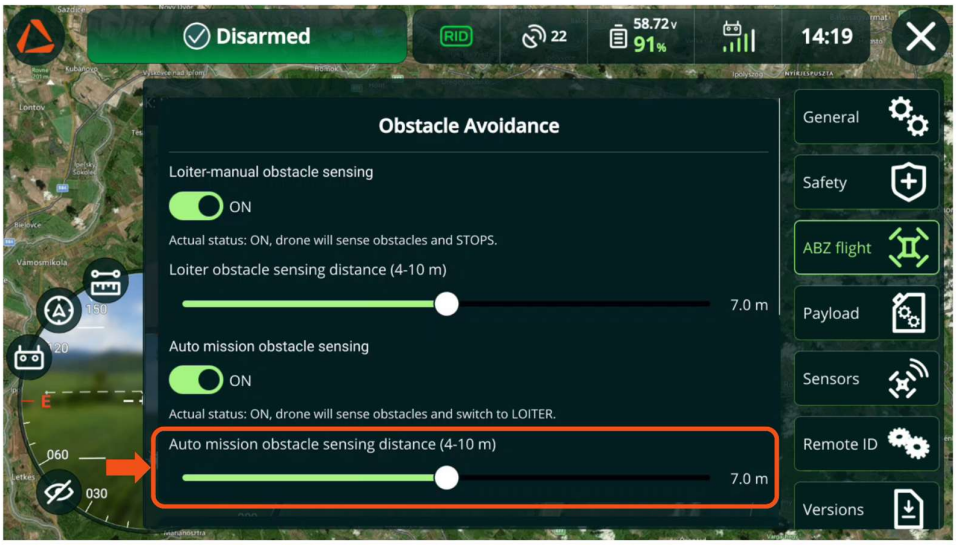

©2026 ABZ Innovation

If flying with obstacle avoidance enabled, you will see a blue arc moving at a fixed distance in front of the drone, indicating the scanning range. If the distance between the drone and the arc decreases, an obstacle has been detected.



Never rely exclusively on the obstacle avoidance system.


Always pay attention and observe the drone and its surroundings closely during flight.

Using obstacle avoidance, which is an additional safety feature, does not eliminate the need for pre-mapping obstacles, as executing missions with pre-mapped obstacles is always more time-efficient and precise.

©2026 ABZ Innovation

What to do if the drone stopped because of an obstacle?

1. If flying an automated mission with OBA enabled, the drone will switch to Manual (Loiter) mode after detecting an obstacle and stopping at the defined distance.
2. If the drone has stopped, manually navigate it parallel to the obstacle until you reach the end of it.
3. Define a return point on the mission's route by clicking on the map.
   Tap the X button to modify the position of the return point.
4. Tap the checkmark to continue with the mission.
5. In the pop-up window, reconfirm the mission settings. The drone will fly to the designated return point and continue the mission from there.

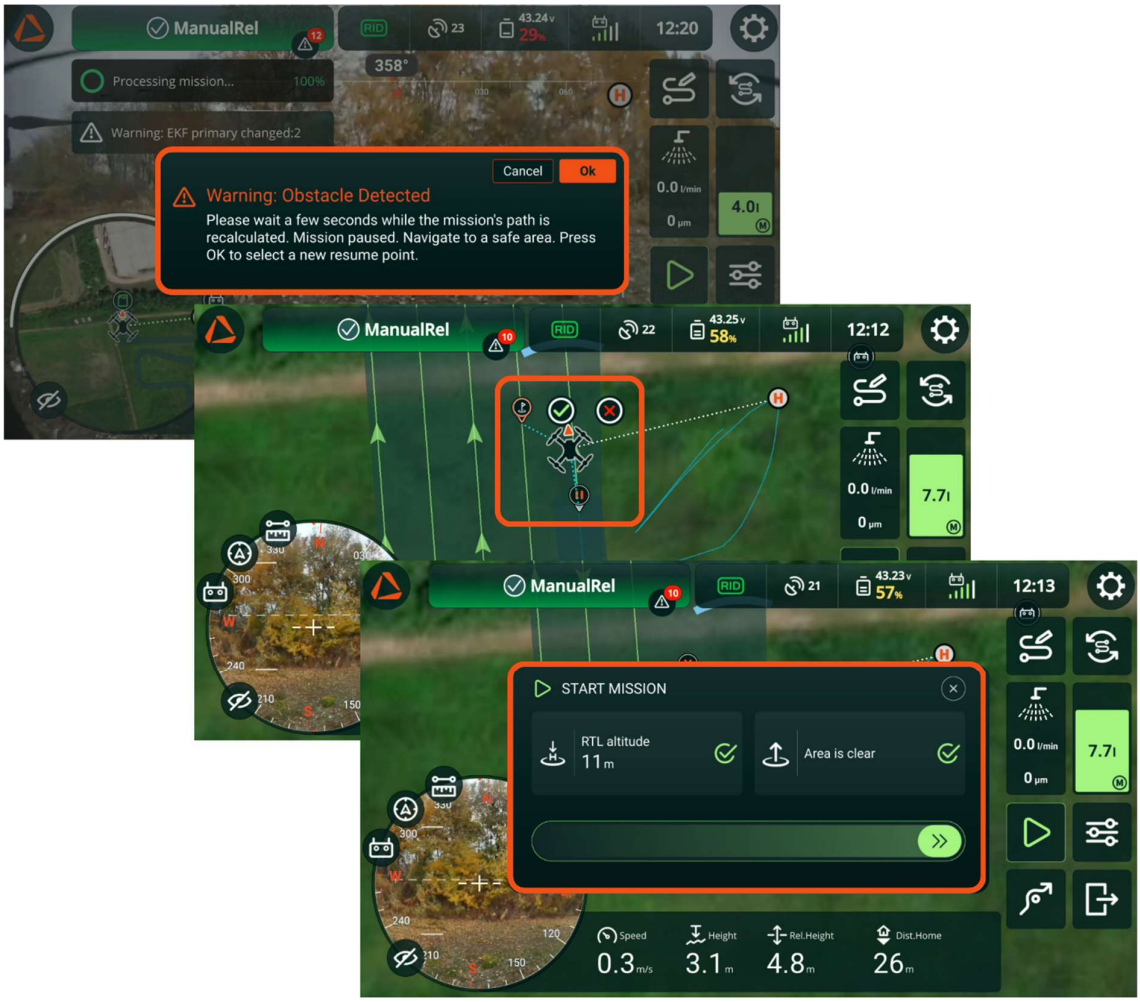

©2026 ABZ Innovation

You can also manually declare an obstacle during a mission by hitting the OBA Button in the Operation window.



©2026 ABZ Innovation

Altitude control

Based on the characteristics of the working area (terrain and plant coverage) and the requirements of the spraying mission, you can choose between three altitude control methods.

- Follow terrain (LiDAR based)
- Relative
  - Barometer based
  - GPS based

In most cases, it is recommended to use the Follow Terrain altitude hold method, which relies on the ABZ Sense system. The multi-beam LiDAR continuously scans the environment and, based on a temporary real-time map generated from the point cloud, continuously and precisely adjusts the drone's altitude. This method is ideal for challenging terrains and plantations with significant height differences, such as vineyards and orchards.

If flying in Relative Altitude Hold mode, the drone's altitude is maintained relative to the takeoff point.

In **Return to Launch (RTL)** mode and during automatic return-to-mission procedures, the drone uses the **Relative Altitude Hold** method to control altitude.

©2026 ABZ Innovation

By default, Relative Altitude Hold mode uses barometric measurements as the primary height source. The drone's altitude is maintained relative to the takeoff point. The pilot must be aware of altitude variations caused by atmospheric and weather changes. This mode is best suited for uniform plantations and flat terrains.

If you are flying with an **Emlid base station or Network RTK source using correction data,** the drone relies on GPS information as Primary Height source. This is the optimal solution in conditions where the LiDAR's normal operation is limited—such as when flying over water bodies, glass surfaces, or other reflective materials.

In automatic flight mode, you can predefine the altitude hold method for the mission in the Mission settings.



If Relative Altitude is selected, the drone relies on either barometer data or GNSS for altitude control, depending on the use of RTK correction. If GNSS data becomes unreliable, the drone will switch back to barometric altitude hold.


Always define the mission altitude measured from the highest point of the plants you will be flying over.

In Return to Launch (RTL) flight mode and during Return to mission, the drone will use the relative altitude hold method.

©2026 ABZ Innovation

Flight planning

To open **Flight Planning**, select its icon in the upper-right corner.

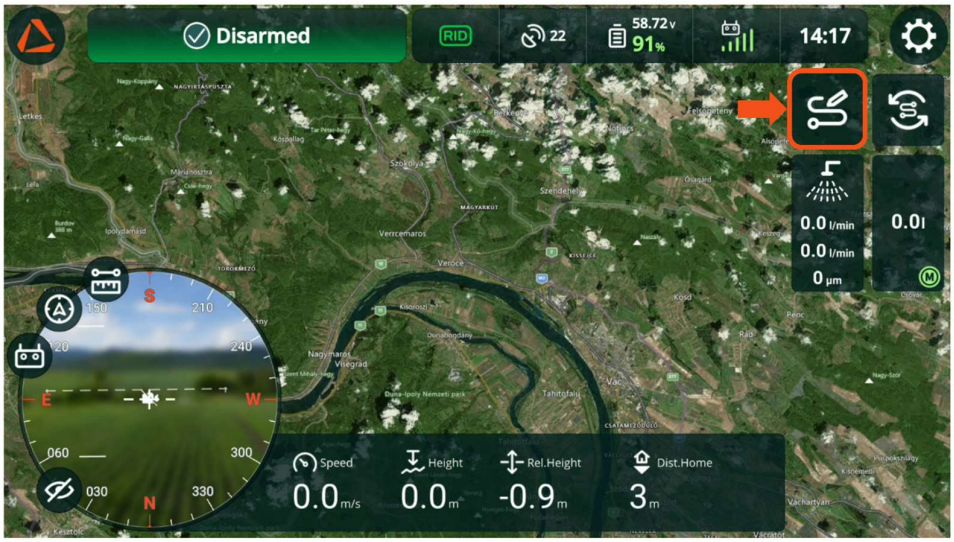

You can choose from the following options:

- **SHP/Area drawing** to upload Area based SHP files (polygon or multipolygon) or draw the Mission Area onto Maps.
- **Manual** (Marking the area with the drone/with the Remote controller)
- **Variable rate**
- **Advanced planning** (waypoint based flight route planning).

©2026 ABZ Innovation




In the payload window, select the Payload Type for the desired application method. (For more information about Spreading, refer to the ABZ Innovation 20 L Spreader System Operator Manual).



©2026 ABZ Innovation

For safety reasons, if your location or flight plan has changed, make sure to clear the previous mission from the drone by:

- clicking the **Exit button** in the Operation window under the Fly view,

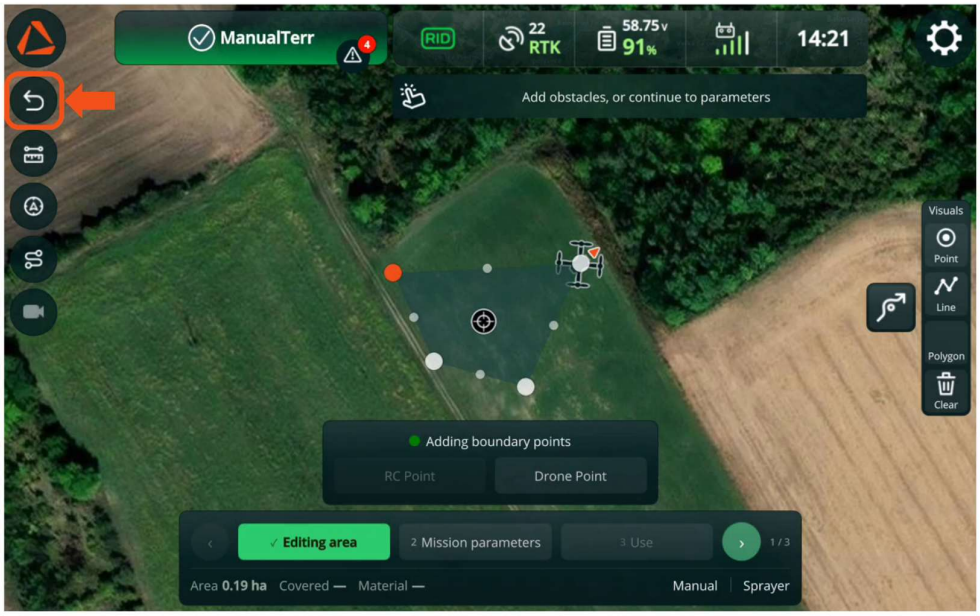

- Or by clicking the **Back button** on the Flight Planning page.



©2026 ABZ Innovation

Area based flight planning

You have two options for creating a mission plan for a predefined area:

- **Manual** (Marking the area with the drone/with the Remote controller)
- **SHP/Area drawing** to upload Area based SHP files (polygon or multipolygon) or draw the Mission Area onto Maps

When using area based planning, each flight plan can include one Boundary (the working area where the drone will execute the automatic mission), and optionally one or more Obstacles (areas the drone will avoid during the mission).


At least three points are required to define a boundary or an obstacle.

©2026 ABZ Innovation

Planning the field with the drone/ with the remote controller

You can use the drone's camera/the remote controller to mark the points of an area to specify a Boundary or Obstacle. To do so, click on the **Mission Planning** icon and choose the option **Manual.** In the pop-up window, set the Payload Type for the desired application method.

1. Select the **Mission Planning** icon.

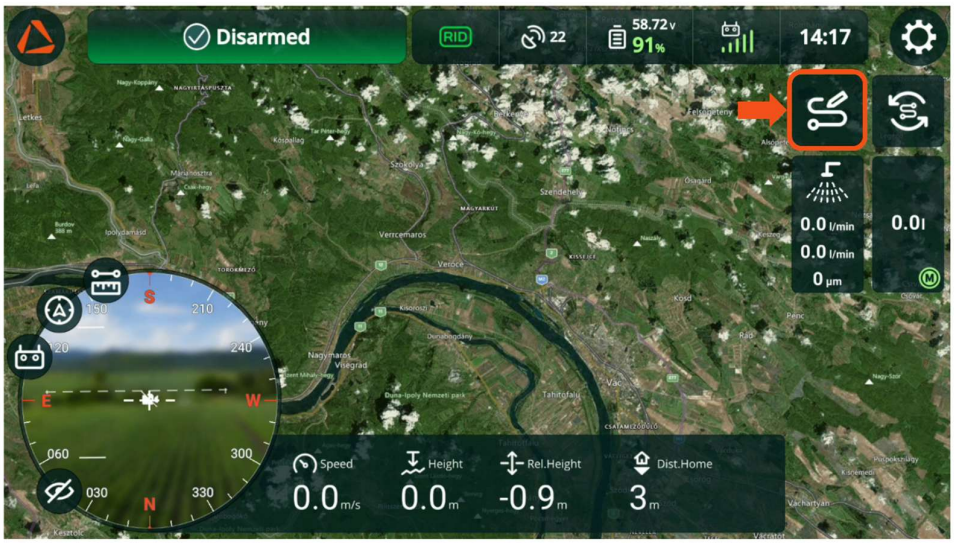

2. Select **Manual**.




©2026 ABZ Innovation

3. In the Payload window, select the **Payload Type** for the required application method.




4. Click on add Boundary icon.

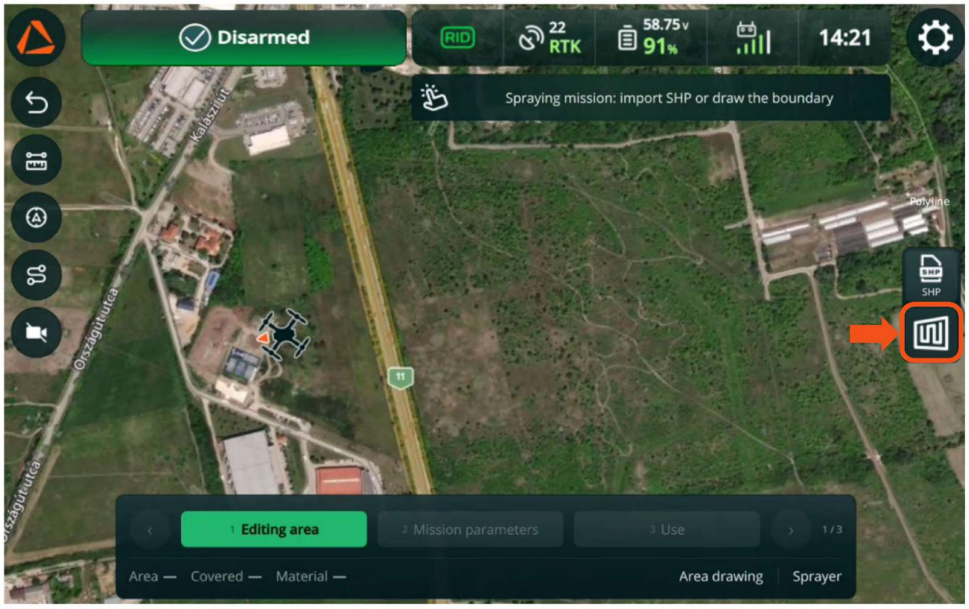

©2026 ABZ Innovation

5. Add boundary points. The points can be marked by the Remote Controller (RC Point) or the Drone (Drone Point).

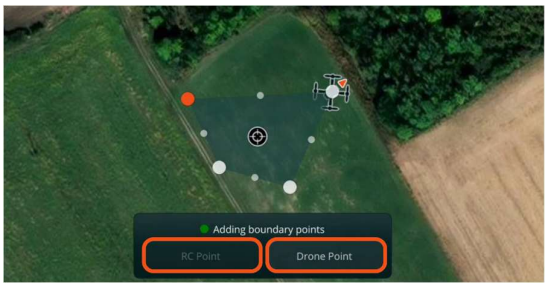

   a. To plan a mission using the drone, fly it to the desired points with the help of the camera and allow it to hover at each location. Then click on the **Drone Point** button to add the desired points.
   b. If you want to plan with the Remote Controller, take the controller to the desired point. Then click on the **RC Point** button to add the desired point.


Points can also be manually moved on the display, based on the map, by tapping and dragging.

In this case, you should be aware of the inaccuracy of the background map, which can be several meters off!


©2026 ABZ Innovation

6. Select the starting point, marked in orange, to complete the area.

   (Each flight plan can have only one boundary. To create a new boundary, first clear the existing one.)

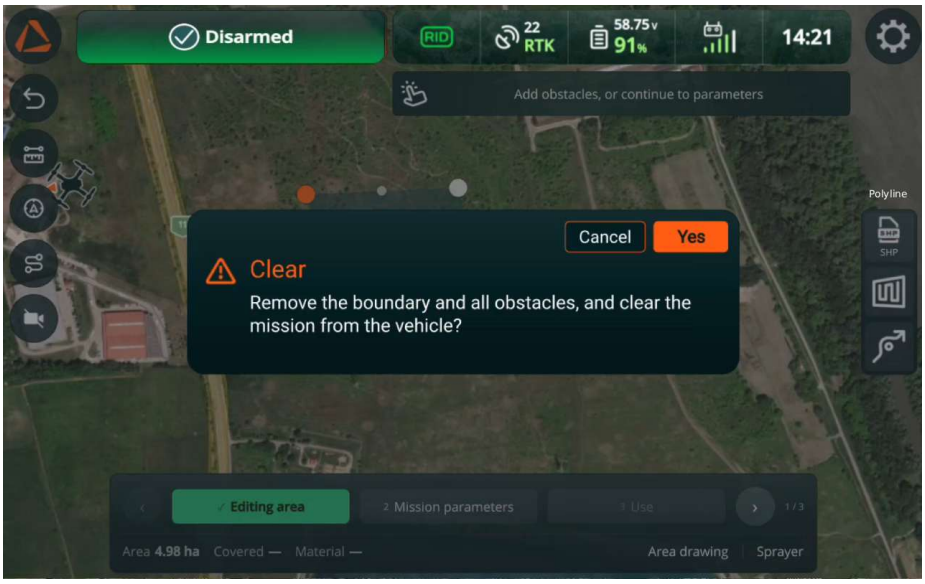


Use the Center option to choose what appears at the center of the map: the Mission, the Drone, or the Remote Controller.

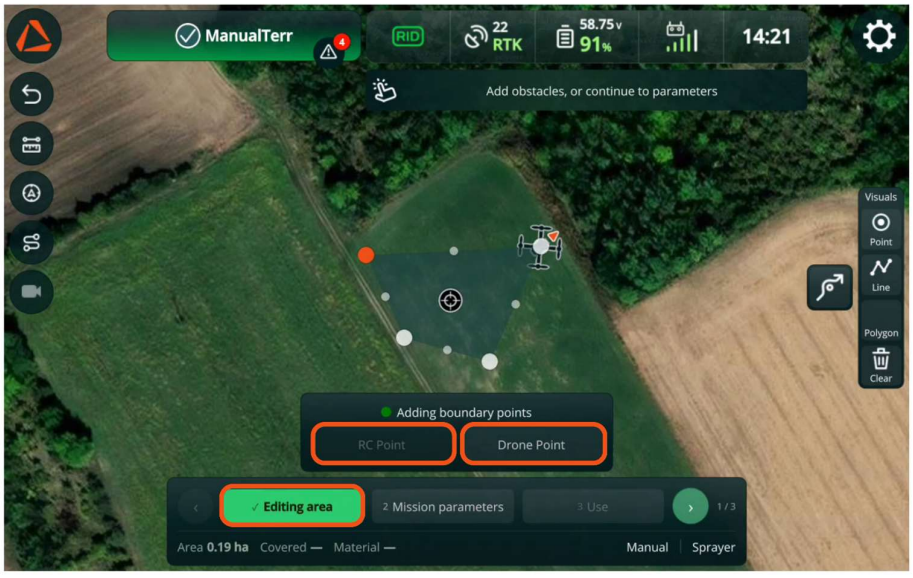

©2026 ABZ Innovation

7. After defining the boundary area, click the obstacle icon to add obstacle points using the drone's or remote controller's position. To complete the area, select the starting point marked in orange. You can add multiple obstacles within the defined boundary area.

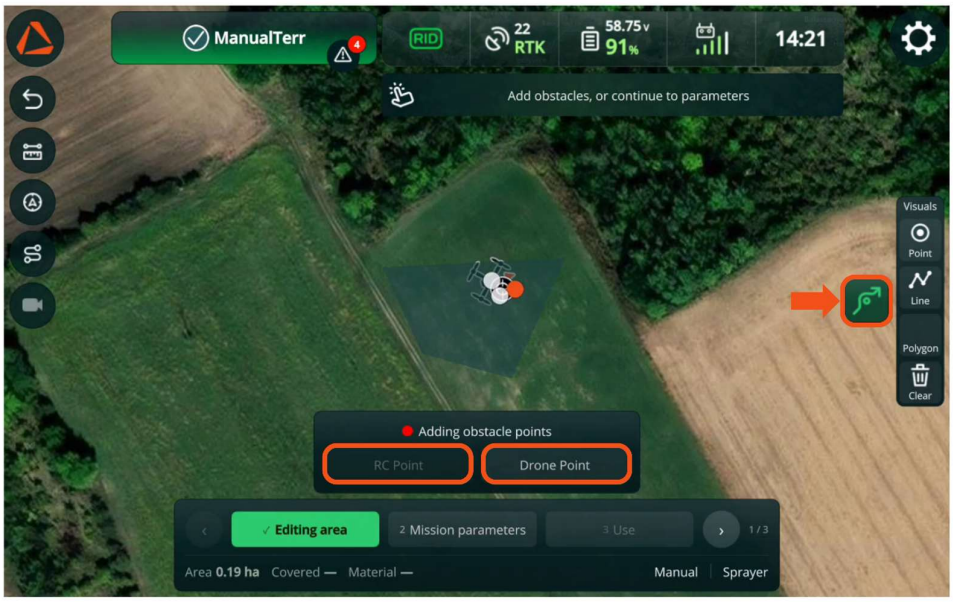

Using obstacle avoidance, which is an additional safety feature, does not eliminate the need for pre-mapping obstacles, as spraying with pre-mapped obstacles is always more time-efficient and precise.
The drone will only avoid the obstacles marked in the flight plan in automatic flight mode!

The marked obstacles are not taken into account when the drone is flying to the entry point, resuming a previously interrupted automatic route, or returning home using the Return to Launch (RTL) function. Therefore, pay special attention during these phases of the flight.


Never rely exclusively on the obstacle avoidance system.

Always pay attention and observe the drone and its surroundings closely during flight. If possible, manually fly the drone as close as possible to the desired starting/continuation point!

©2026 ABZ Innovation

Adjusting the spraying settings

After defining the boundary and all obstacles, configure the automatic spraying settings in the Mission Parameters section. Use the sliders to adjust each parameter, then confirm your selection to proceed to the next.

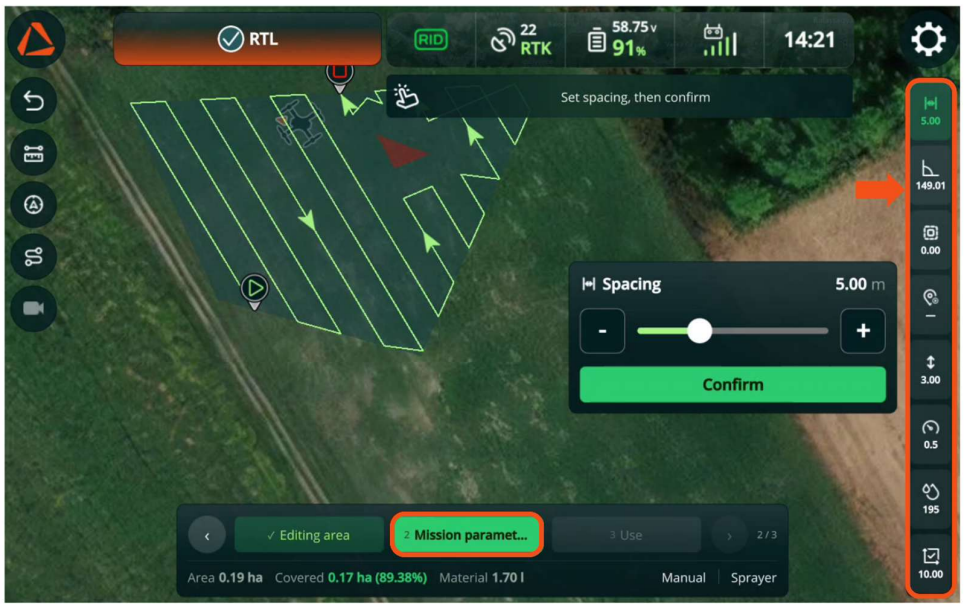


In this panel, you can adjust the following settings:

- Spacing (The distance between the drone's flight paths.)
- Angle of flight direction.
- Margin (The distance kept from the edge of the designated area.)
- Entry point (Tap a marked spot on the map to start the mission there.)
- Altitude and Mode (Select from Relative altitude and Follow terrain mode.)
- Speed (Ground speed, between applicable extremes depending on spraying rate in m/s)
- Droplet size (In microns and in ISO)
- Coverage (Low and High coverage range options are available.)

©2026 ABZ Innovation

To upload the planned route to the drone, click **Use**, then click **Upload mission**.

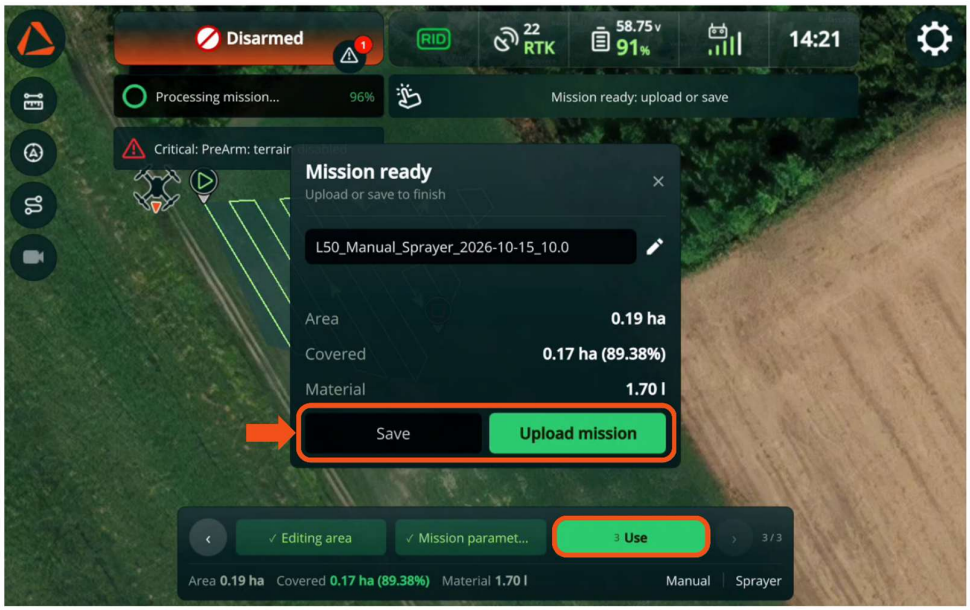


If you save your plan, the file remains on the controller. Click on the **Load mission** icon to open your saved plans. If you click on the **Back button**, your **plan will be cleared from the editor and from the drone.**

©2026 ABZ Innovation

Starting the mission

The Operation window on the left side of the screen displays the upcoming steps and provides access to essential functions throughout the mission.

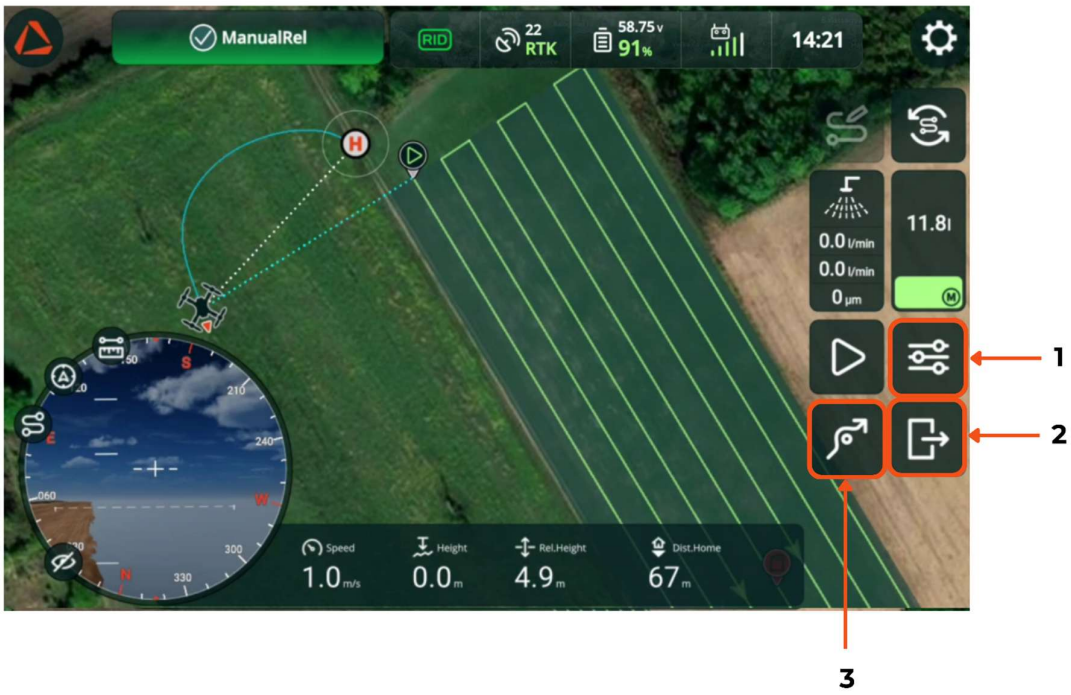

- **With the Options button (1)**, you can change the Mission and Spraying settings after pausing the mission.
- **With the OBA button (3)**, you can manually declare an obstacle. (For more information, see the Obstacle Avoidance with ABZ sense section.)
- **With the Exit button (2)**, you can clear the mission from the drone.

Before starting the mission, the software warns you if the fuel level is set to 0 L. Use the slider to set the correct fuel level or adjust it using the buttons in 0.1 L increments.

©2026 ABZ Innovation



After being prompted to arm and take off, manually fly the drone to a safe altitude before starting the mission. You can start the mission by tapping the **Start** button in the Mission window.



The system prompts you to confirm the RTL altitude setting and verify that the area is clear. Confirm both using the slider. Spraying starts automatically after confirmation.

©2026 ABZ Innovation



©2026 ABZ Innovation

Planning the field by drawing an area

Under the SHP/Area drawing menu, you can manually add and move (by tapping and dragging) corner points on the display based on the map. In this case:


Be aware that the map may be inaccurate by several meters. To ensure precise placement of your boundary, we recommend using shapefiles as visual guides.

Important: Without shapefile-based visual guides, this solution should not be used for actual spraying. It is intended for testing and demonstration purposes only.

With the Center option, you can decide what should be in the central position on the map (the mission, the Drone, or the Remote Controller).

Click the **Shapefile** icon to add visual guides to the map for more accurate boundary placement.
(For more information, the using shapefiles as visual guides section.)

1. To define a boundary by drawing an area, click on add Boundary icon.
2. Click on the map to add boundary points. You can also adjust the position of each point by dragging it on the map.

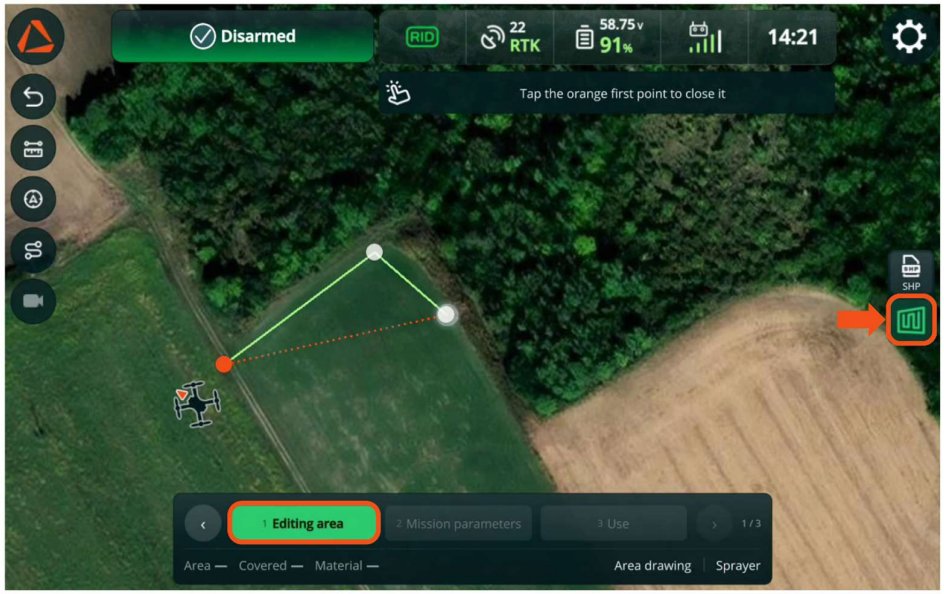


The background map may have positioning errors of several meters. Keep this in mind when placing or adjusting boundary points.


3. Select the starting point, marked in orange, to complete the area.

©2026 ABZ Innovation

4. After defining the boundary area, click the **obstacle icon** to add obstacle points. Click on the map to add obstacle points. You can also adjust the position of each point by dragging it on the map. To complete the area, select the starting point marked in orange. You can add multiple obstacles within the defined boundary area.

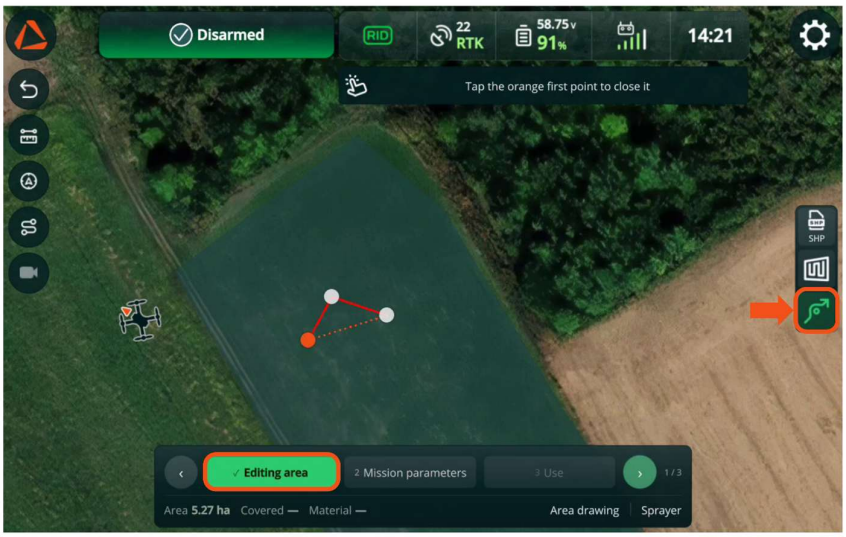

5. After adjusting the points, configure the mission's [operational and spraying settings].

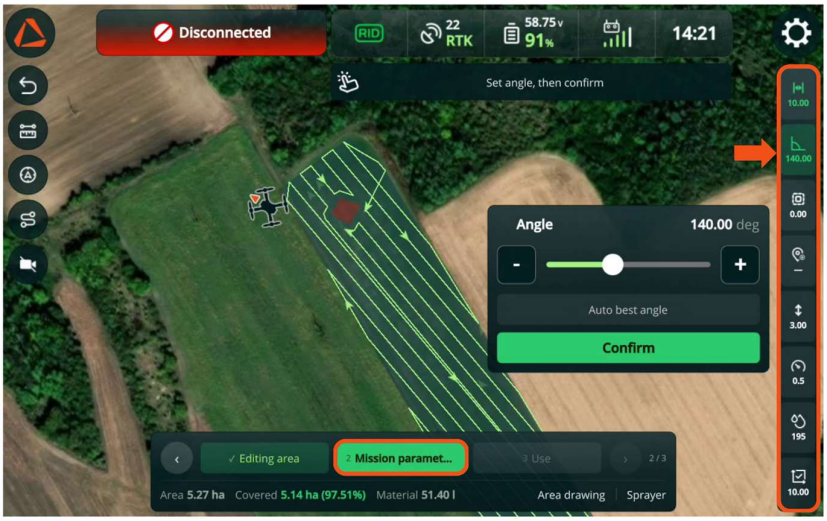

After configuring the mission settings, click **Use**, then select **Save** to save the mission or **Upload mission** to transfer the planned route to the drone. Arm and take off, manually fly the drone to a safe altitude before starting the mission. You can start the mission by tapping the **Start** button in the Mission window.

©2026 ABZ Innovation

Using shapefiles for mission planning

The ABZ Control supports polygon, polyline, and point-based shapefiles. You can use a shapefile in two distinct ways:


- To define an **area** (for further information, see the polygon based missions section) or **flight paths** (for further information, see the polyline based missions sections).
- To serve as a guide for precisely positioning the points of a boundary or waypoints

To import a shapefile into ABZ Control:

1. Make sure, **all** the needed shapefile parts are included in the .zip archive or shapefile folder (the files with extensions **.shp, .shx and .dbf** are present).
2. Ensure that the folder/archive has the **same filename** as the individual files.
3. Insert the SD card to the Remote Controller or copy the files to its internal storage with a cable:
    - If using an SD card:


    A, insert the card into the SD card slot. Only MicroSD cards with a maximum of 32 GB capacity are supported. You can decide to import the files directly from the SD card or copy them to the Remote Controller:

    B, To copy them, wipe down from the top of the screen to access the Android menu, where you must press the gear (**Settings**) icon.

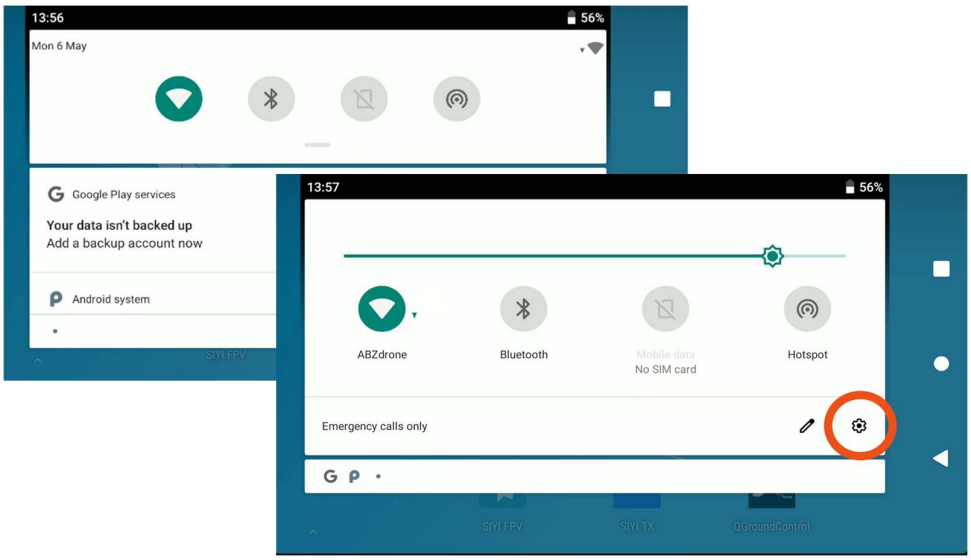


©2026 ABZ Innovation

B, In this menu, scroll down to Storage, where you can select to open the SD Card.

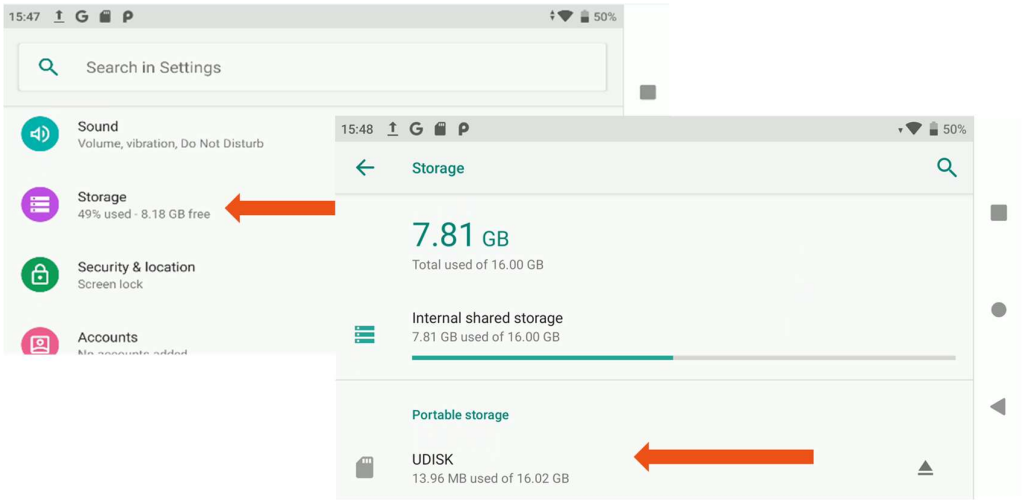


C, Tap the top right Others (3 vertical dots icon) menu, then **Show internal storage**.

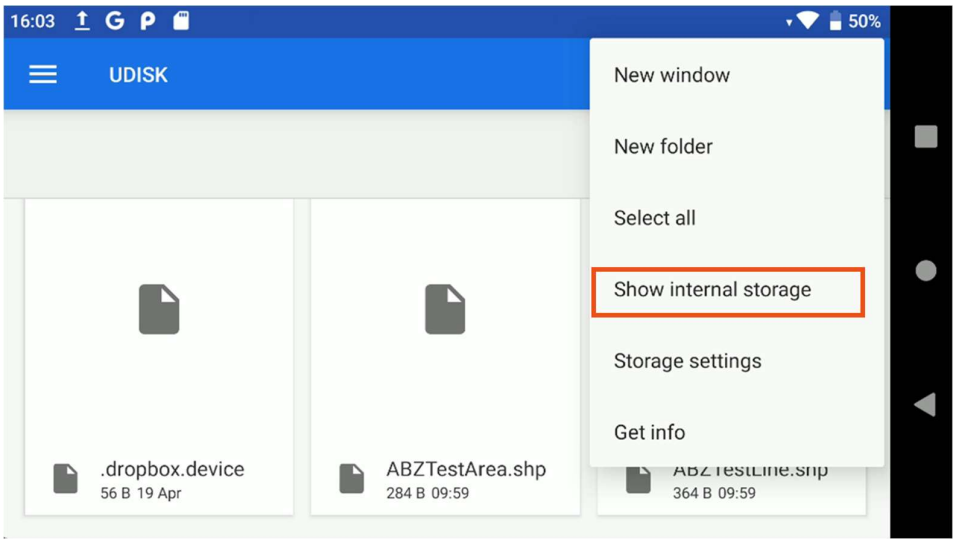


©2026 ABZ Innovation

D, Select the required files on the SD card (tap and hold), then click on the Ot (3 vertical dots icon) menu in the right corner of the screen, and select Move to...

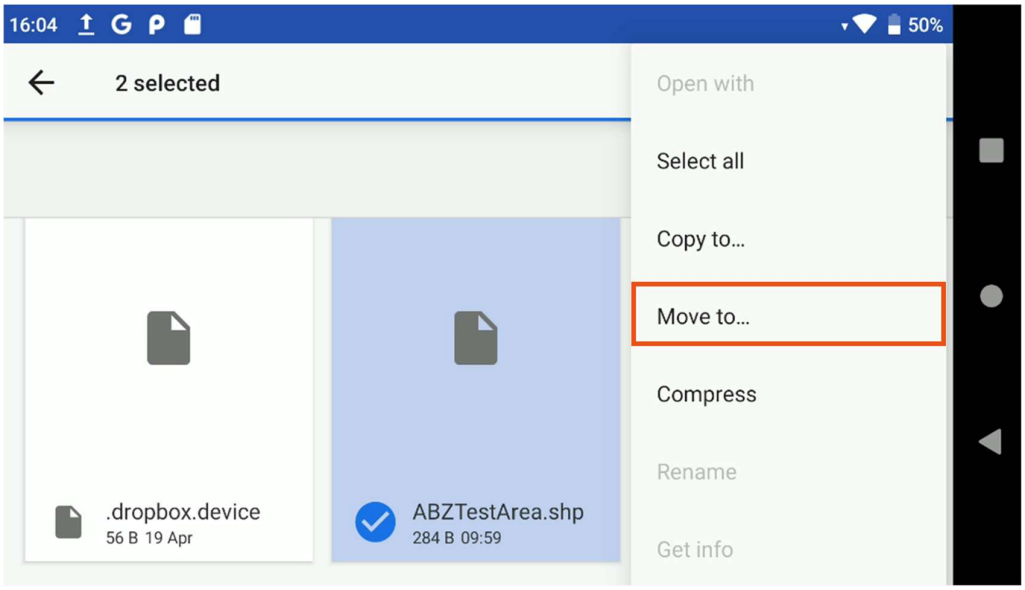


E, Click on the three lines on the left to open the navigation bar. Select MK15, then open the folder (e.g. Downloads) where you want to store your shapefiles. Click the bottom right Move button to move the files to the controller.

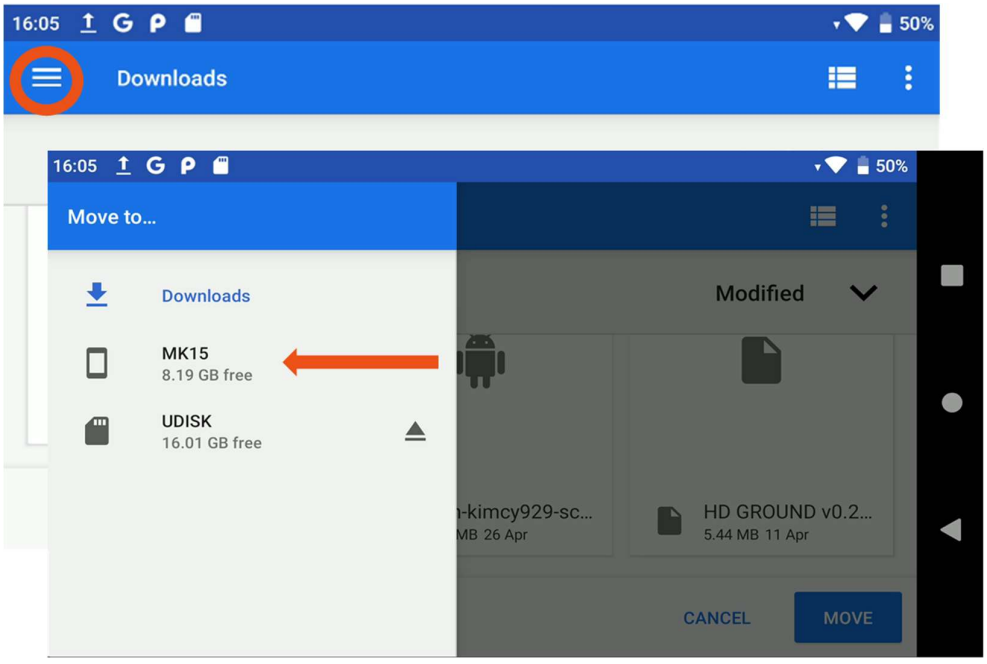


1) If you use a cable, connect the cable to the USB-C port of the remote controller and the computer.

©2026 ABZ Innovation

A, Open the Android Settings by swiping down from the top of the screen.

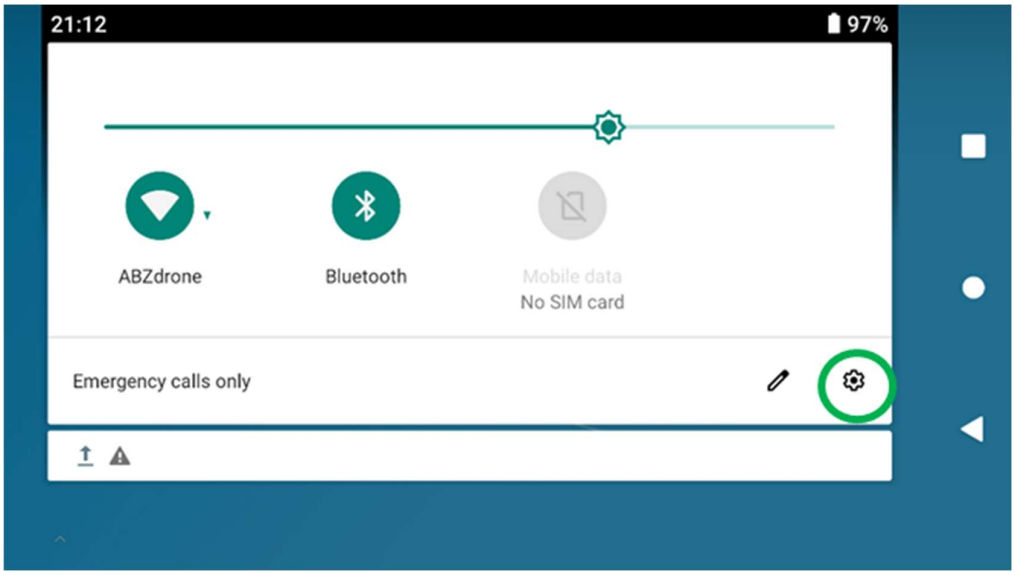

B, In the search bar, enter “USB”. Look for the option USB preferences. Click on File transfer.

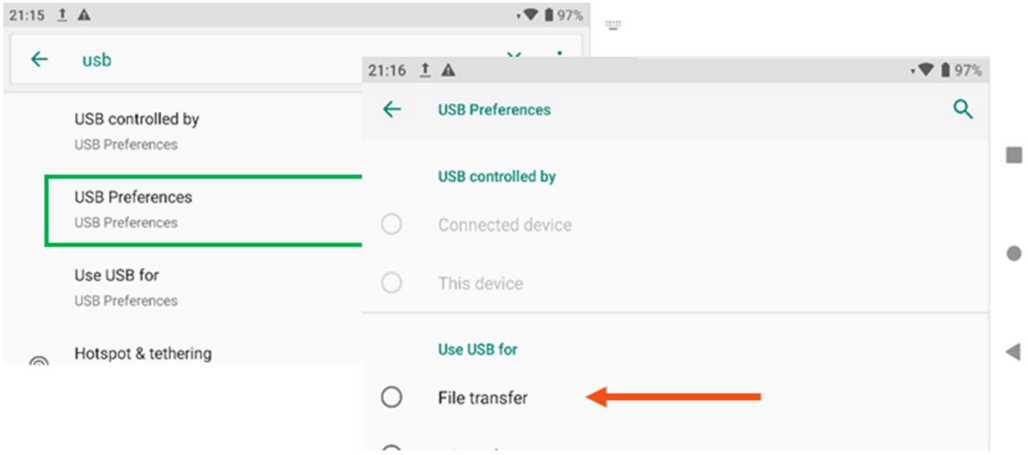


C, On your computer, the device MK15 appears. Copy the shapefile to the Controller.

D, You can disconnect the cable.


2) Launch the ABZ Control, and open the *Settings* > *SHP* Option.
3) Click **Import**.

©2026 ABZ Innovation

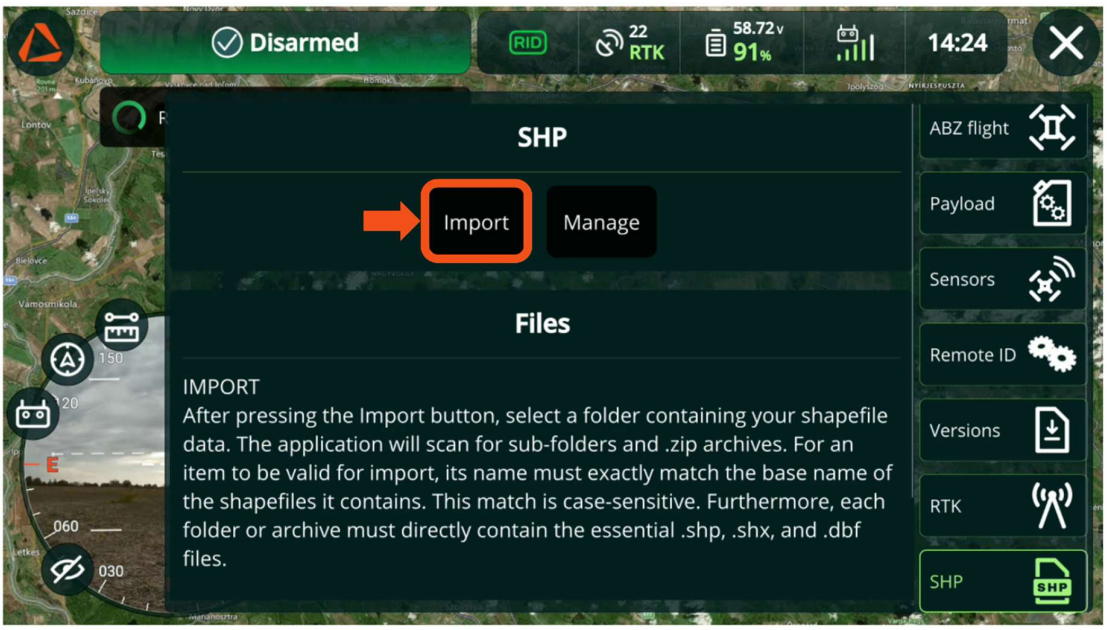


4) In the browser window, navigate to your shapefile folder/ZIP archive file. (Do not open it!)

5) Click on **Select**.

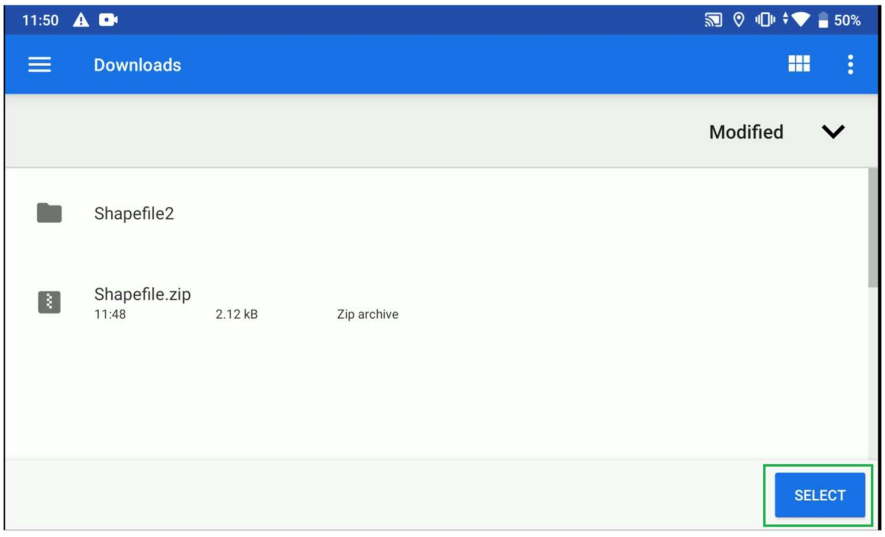


6) Mark the needed shapefiles with a checkmark, and click on **Import selected**.

©2026 ABZ Innovation

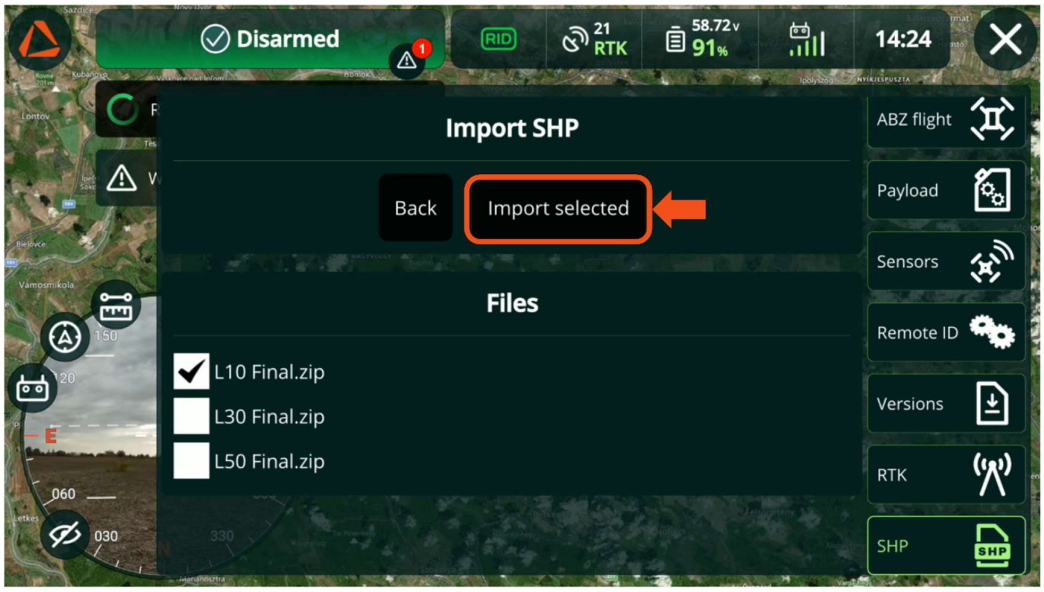

To Delete an imported shapefile, click on Manage. You will find the imported files grouped by their geometry. Select the files you wish to delete, and click on **Delete selected**.

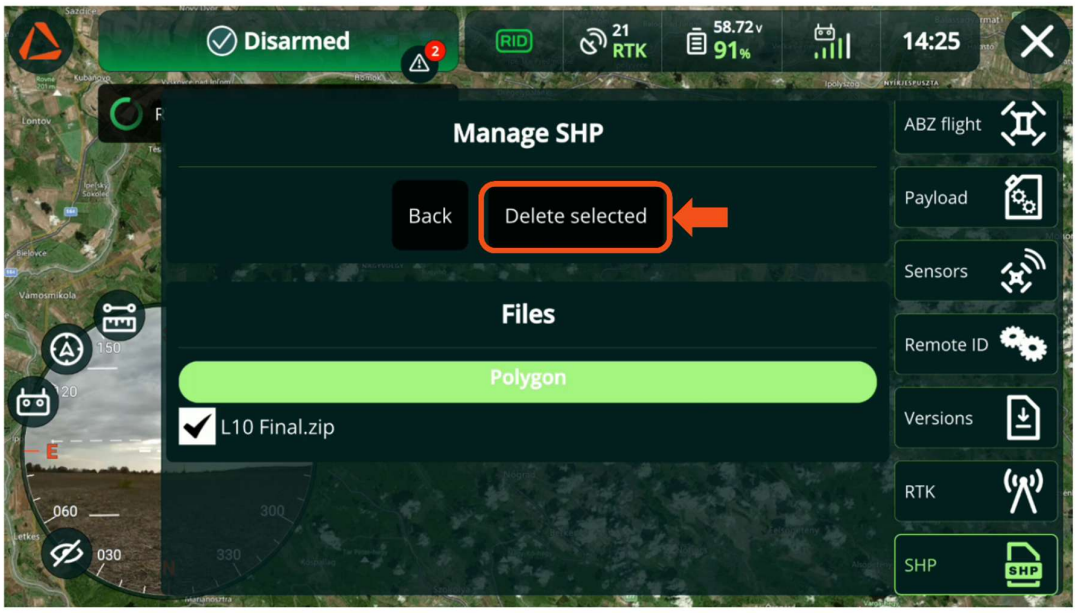

©2026 ABZ Innovation

You can open the imported shapefiles to add them as a work area (polygon-based mission), a work route (polyline-based mission), or a visual guide:

- Imported **area shapefiles** can be selected in the ABZ Control app by clicking on Flight planning then selecting the **SHP/Area drawing** option on the Mission Planning Method Page. For further information on the use of a shapefile as an area-based mission, see the area-based mission section.



- Imported **polyline (lineshape) files** can be selected in the ABZ Control app by clicking on Flight planning then selecting the **Advanced planning** option. For further information on the use of a shapefile as a polyline based, see the polyline based mission section.
- For information on using shapefiles as visual guides, see the Using shape files as visual guides section.

©2026 ABZ Innovation


Using shape files as visual guides

In ABZ Control, you can insert point, polyline, and polygon shapefiles as a layer to support precise planning. This function is available in the **SHP/Area Drawing** and **Advanced Planning** functions.


To open a shapefile as a visual guide, click on the shapefile icon. You can choose whether you want to use a point-, polygon-, or polyline-based shapefile as a Visual Guide.

After selecting one of the options, you will see the corresponding files previously imported to the controller.

Mark the needed file and click on Select File.

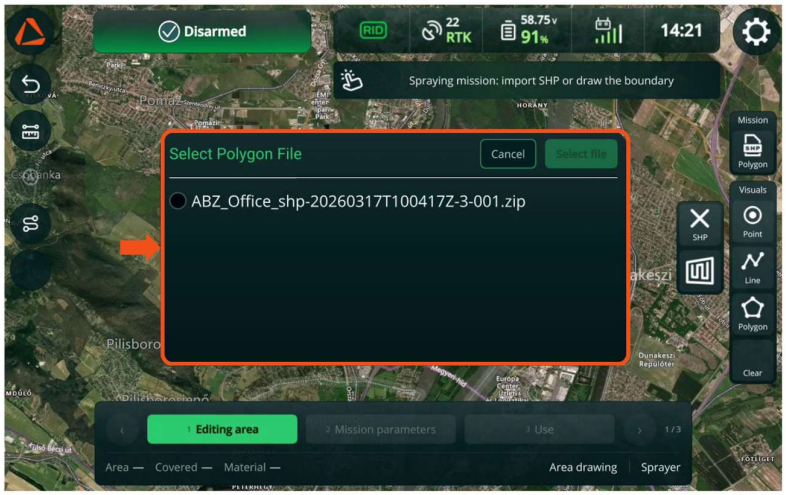


The shapefile will appear in the background, allowing you to use it for the precise placement of your boundary corner points (for more information, see the Planning the field by drawing an area, section) or waypoints (for more information about waypoint-based planning, see the Advanced Planning section). It is possible to use multiple shapefiles of different geometry types simultaneously.

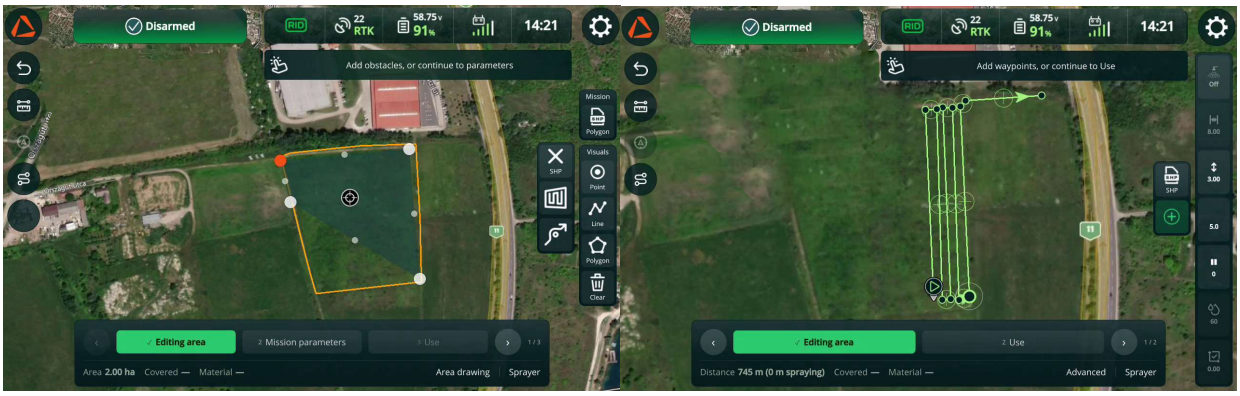

©2026 ABZ Innovation

You can remove the visual guides from your planning page by clicking the bin icon.

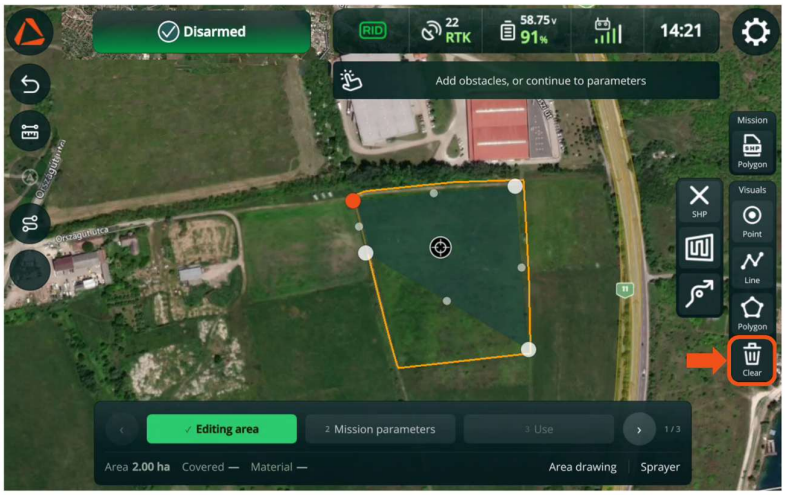



©2026 ABZ Innovation

Planning the field by loading an area shape file

To use an area shapefile for planning, the files must be imported to the remote controller. For further instructions, see the Using shapefiles for mission planning section..


Open the **Planning view** and, on the **Mission Planning Method page**, select the **SHP/Area drawing** option. In the pop-up window, set the Payload Type for the desired application method.

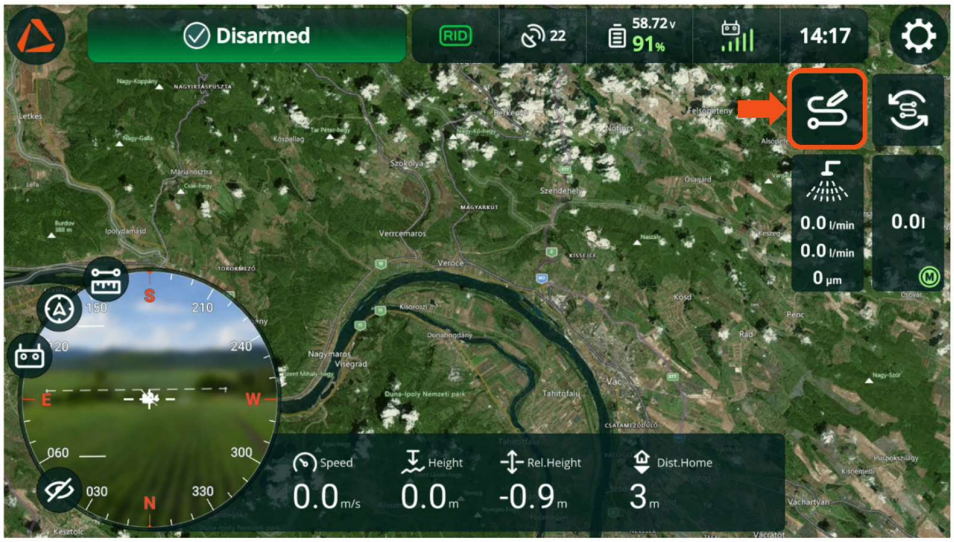

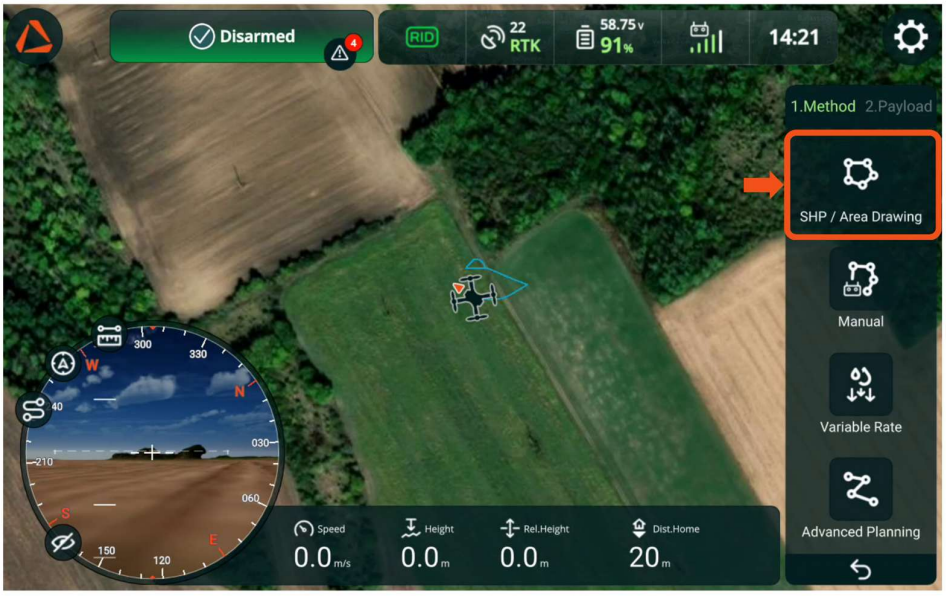


Click on the **Shapefile button** and click on the **Polygon** button.

©2026 ABZ Innovation

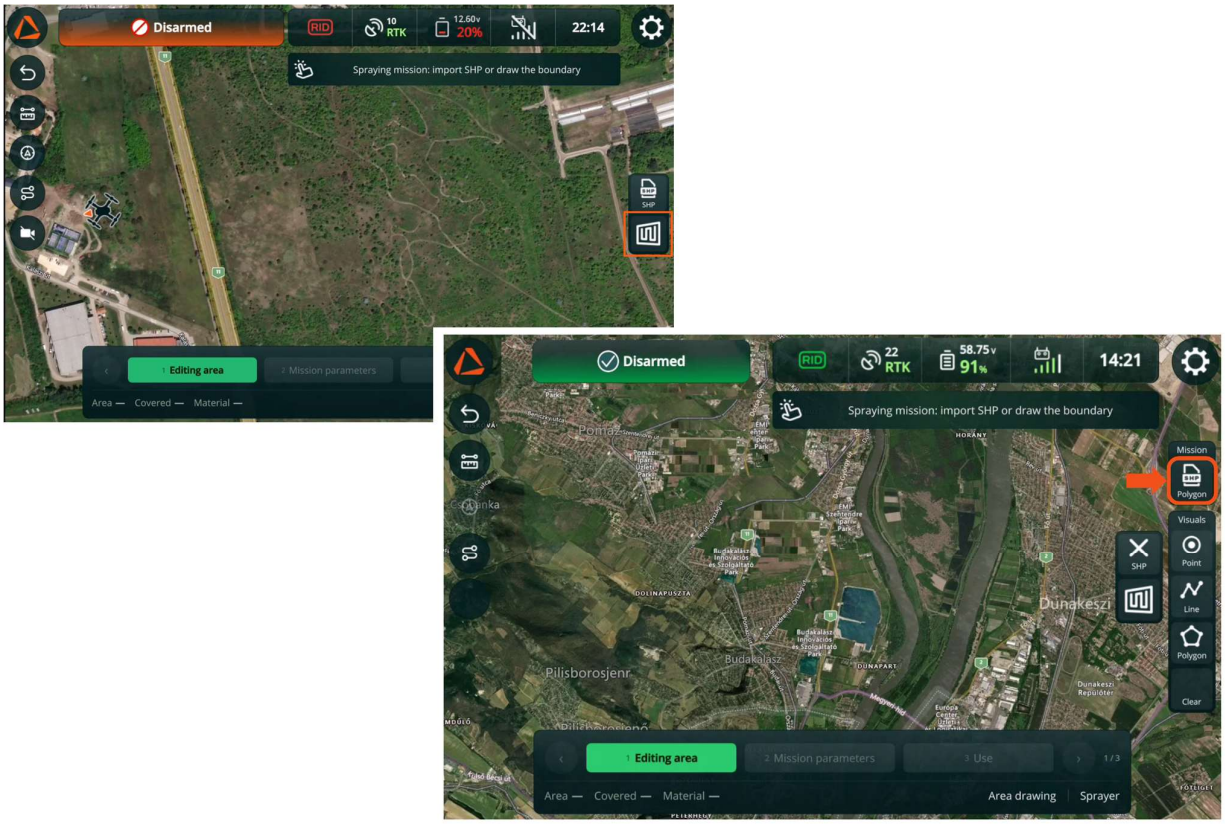


In a popup window, you will see the corresponding files previously imported to the controller. Mark the needed file and click on **Select file**.

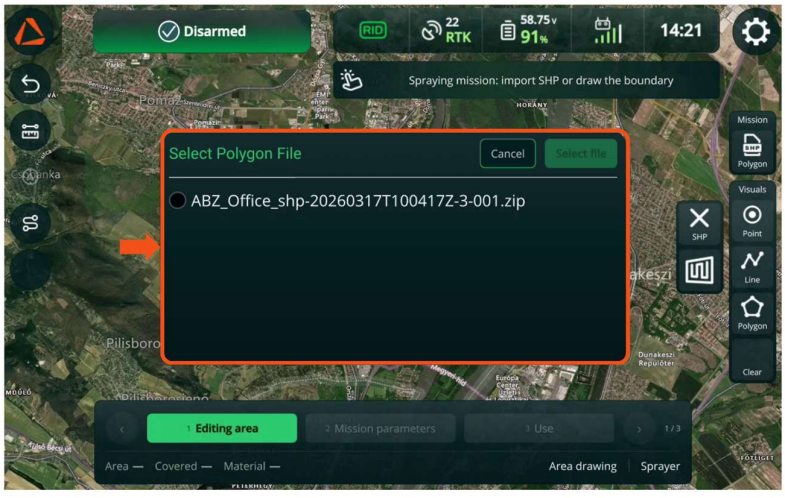

©2026 ABZ Innovation

The polygon appears on the screen. If needed, you can adjust its edges by tapping and dragging the pins on the map.

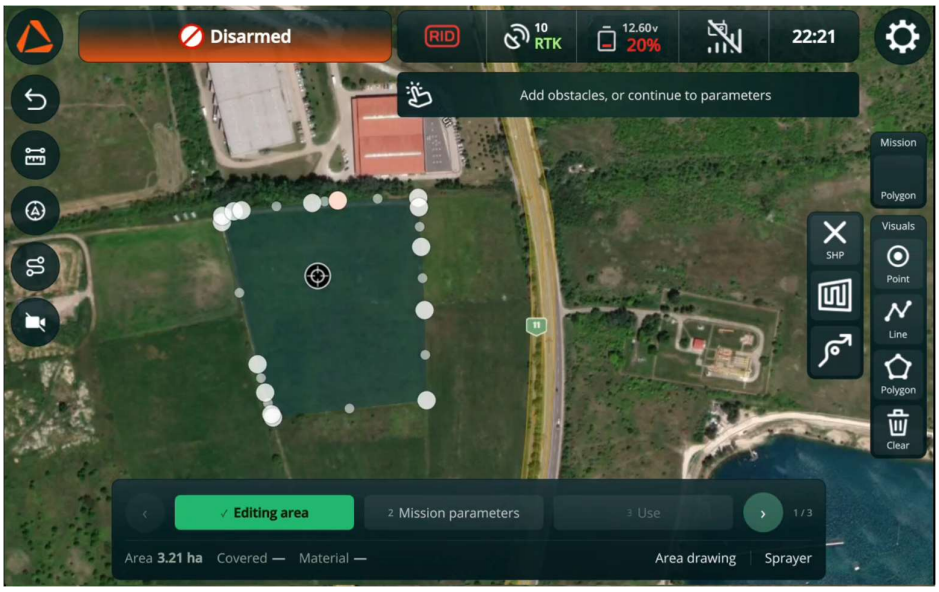

To specify the spraying settings for Area shapefiles, follow the instructions under the section Adjusting the spraying settings.

After configuring the mission settings, click **Use**, then select **Save** to save the mission or **Upload mission** to transfer the planned route to the drone.

To start the mission, navigate to the **Fly view** by clicking on the **ABZ Innovation logo**. If you leave the planning page by clicking on the back button, your plan will be cleared from the editor and from the drone. If you have saved your plan, the file remains on the controller and you can open it from the **Load mission** menu.


To start a mission, in the **Fly view** tap on the **'Start Mission'** button after manually flying the drone to a safe altitude. The spraying will begin automatically. For more information on how to fly a mission, see the Starting the mission section.

©2026 ABZ Innovation


Planning a mission by loading a Polyline (lineshape) file

The files must be imported to the ABZ Control (Settings > SHP). For further instructions, see the To import a shapefile into ABZ Control section.

1. To Load a Polyline mission in ABZ Control, you need to open the **Advanced Planning** from the Mission Planning Page.

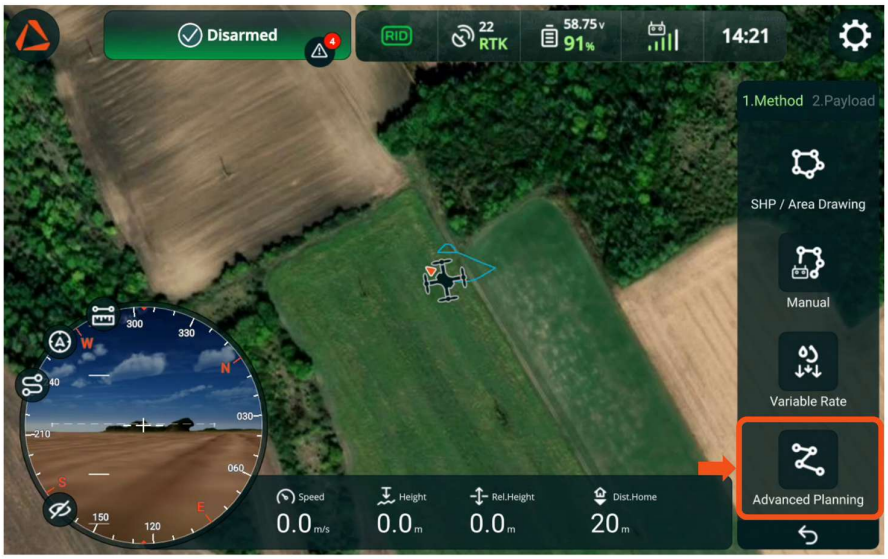


2. In the **Payload** window, set the Payload Type for the desired application method.

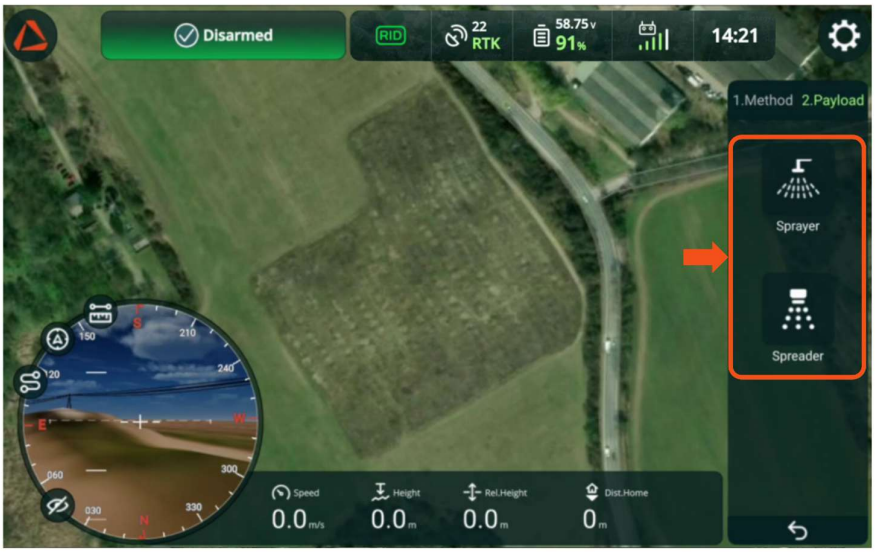


3. On the right side, click the **SHP button**.

©2026 ABZ Innovation

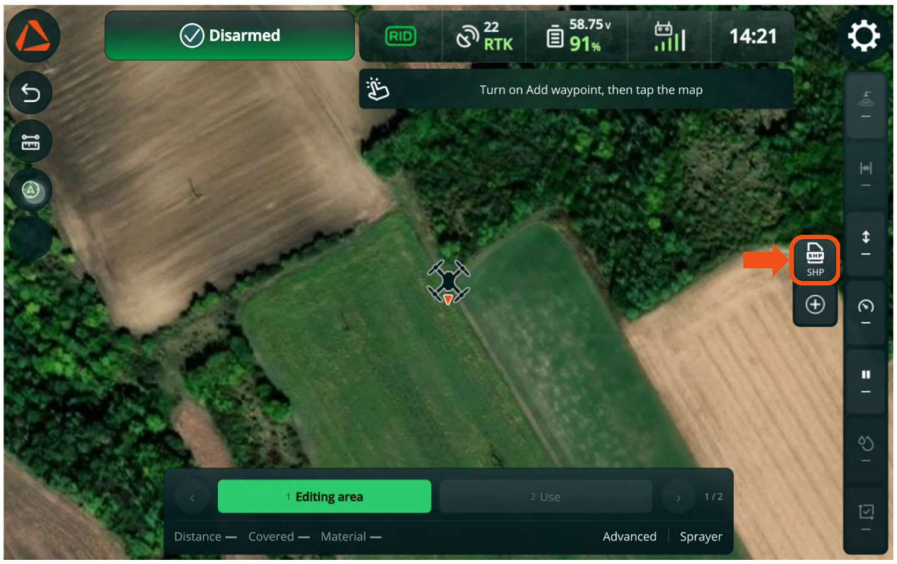


4. Click on the **Polyline button**.

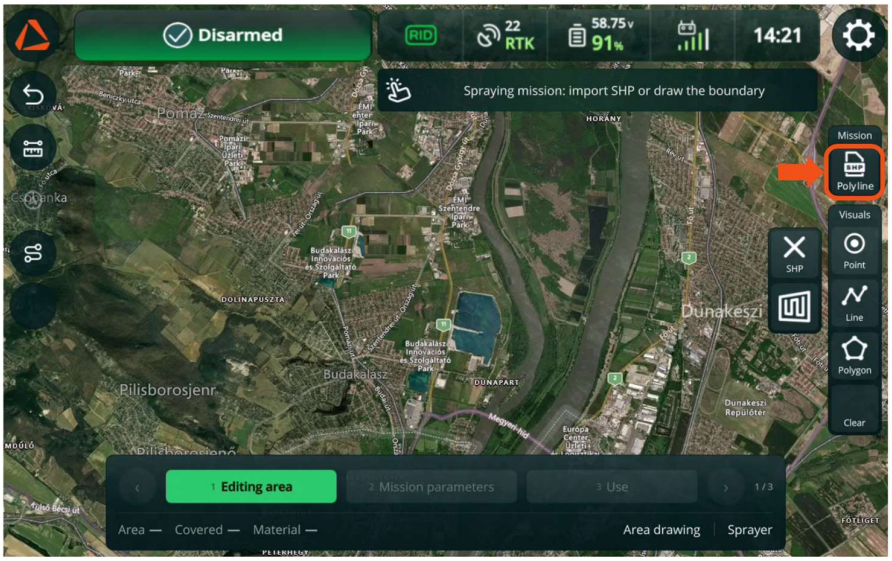


©2026 ABZ Innovation

5. In the pop-up window choose the file you want to open and click on **Select file**.

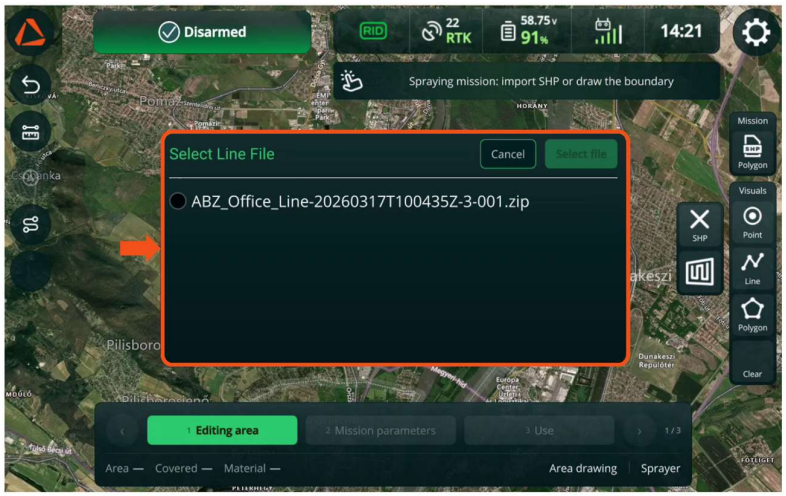


6. The editor shows the routes and waypoints on the map. Click the close SHP button to access the editor for the global settings. Set the global parameters for the waypoints.

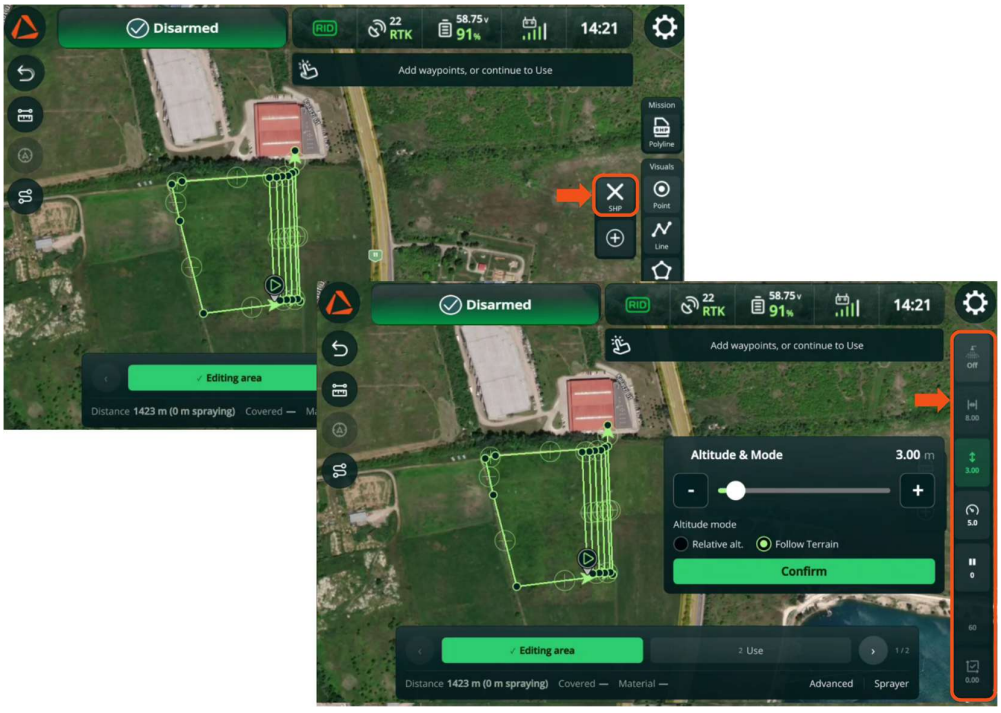

7. You can turn the sprayer on or off at each waypoint. If the sprayer is activated, you can define different application values: the application rate in liters per hectare, the working width, and the droplet size, which can also be specified

©2026 ABZ Innovation

according to ISO standards. Click the globe icon to restore the global settings, or the bin icon to delete the waypoint.

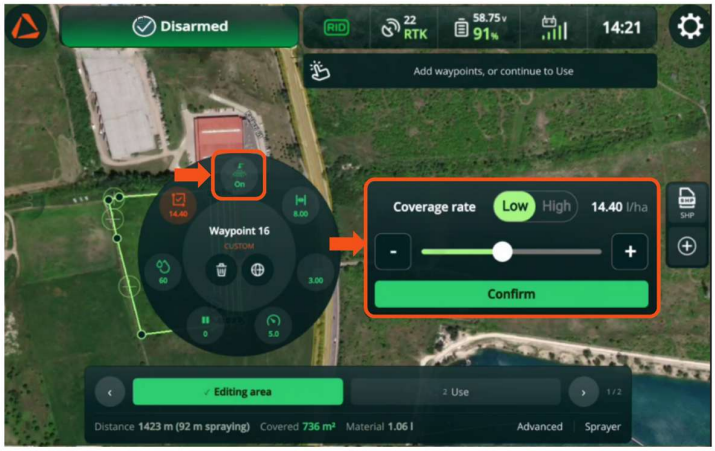

8. You can also adjust the flight parameters, including altitude and speed, individually for each waypoint.

9. After configuring the mission settings, click **Use**, then select **Save** to save the mission or **Upload mission** to transfer the planned route to the drone.

10. To start the mission tap on the **'Start Mission'** button in the Operation window after manually flying the drone to a safe altitude. The spraying will begin automatically. For further, see the Starting the mission section.

11. Clicking the **Back** button to exit the planning page clears the mission from both the editor and the drone. If you have saved the mission, the file remains on the remote controller. To reopen it, click **Load mission**.

©2026 ABZ Innovation

Waypoint based Flight Planning


Advanced Planning

Advanced Planning is a mission planning interface designed for creating complex tasks—such as differential applications or spot treatments—by providing full control over the drone's flight paths. Unlike Manual Planning or Area Drawing, where boundaries must be set, this feature gives you complete control over the drone's flight routes.

Within a single waypoint mission, you can assign different deployment parameters to various waypoints, such as the drone's speed, altitude, and working width. These capabilities enable the drone to perform tasks with precision as needed.


To enter the **Advanced Planning**:

1. Select the **Mission Planning** icon.

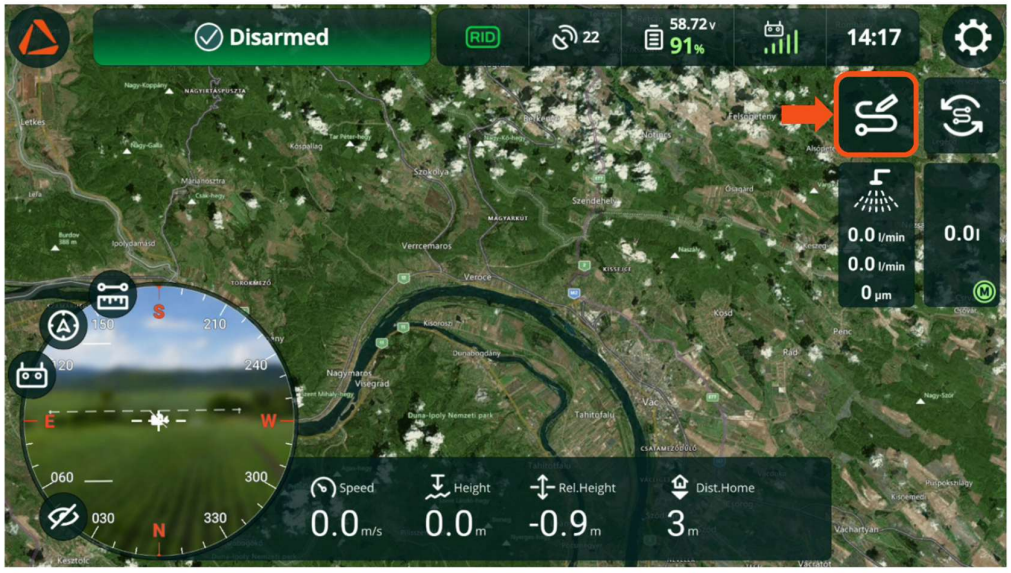


©2026 ABZ Innovation

2. Select **Advanced Planning**.

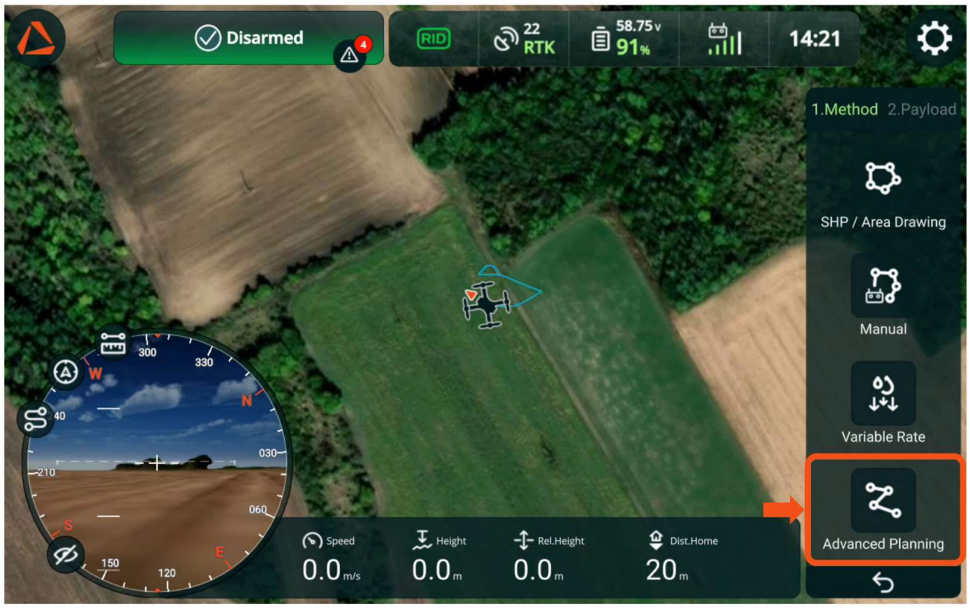


3. Select the **Payload Type** for the desired application method.

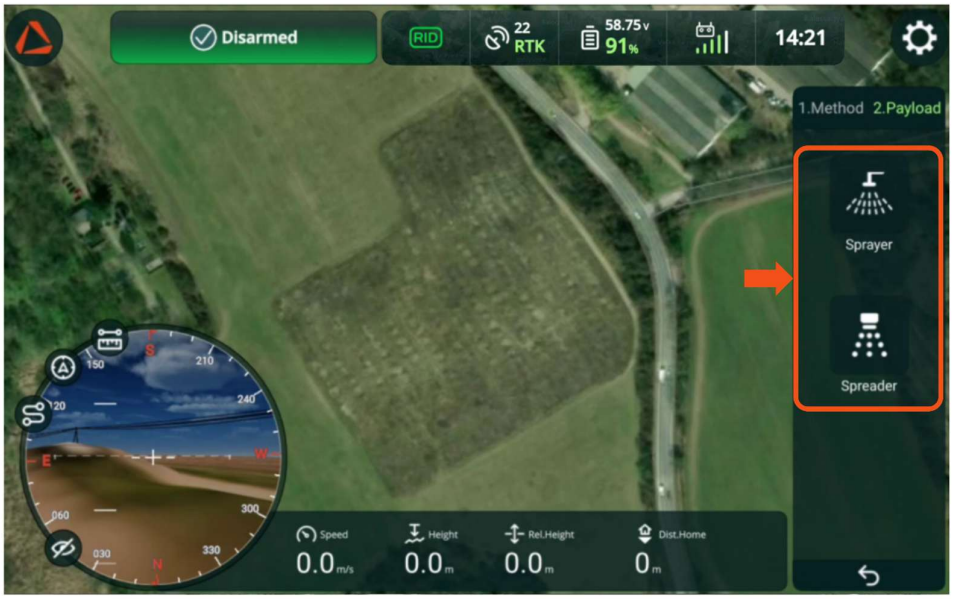

©2026 ABZ Innovation


Waypoint mission planning process

1. Activate the **Add waypoint** option by clicking on the icon (2). You can set specific waypoints by tapping on the remote controller's screen to create the drone's route.(1). Grab and move the points to reposition them.
   You can add visual guides to the map to help you with the accurate placement of the waypoints by clicking the SHP icon. It offers several options: Point, Polyline (Lineshape file), or Polygon. For further information, see the Using shapefiles as visual guides section. You can also open a Polyline shape to configure it as a Waypoint mission.
   After adding the waypoints, set the global settings parameters (3).

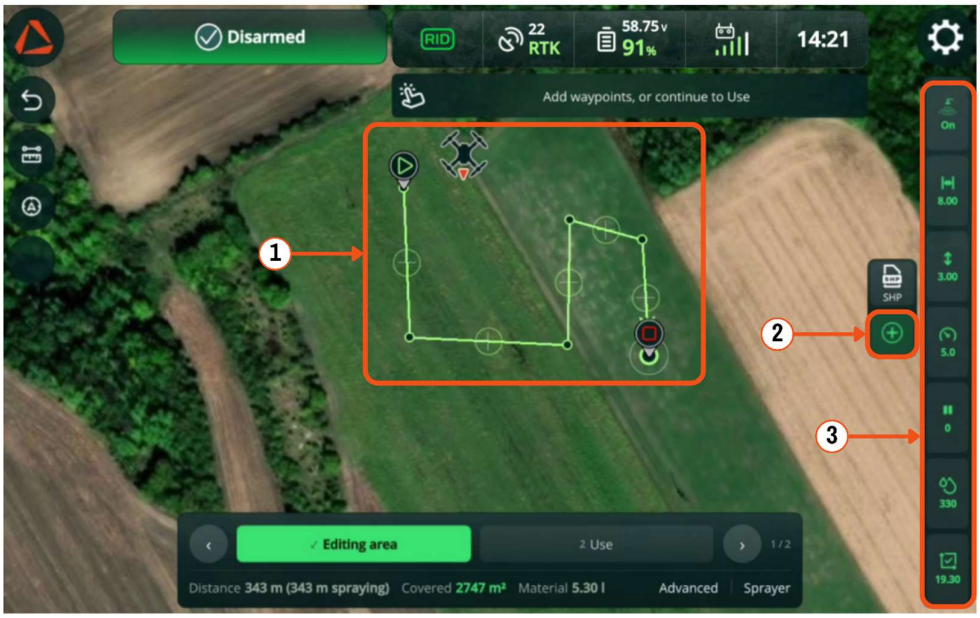

2. You can turn the sprayer on or off at each waypoint (4). When the sprayer is enabled, you can adjust the application rate in liters per hectare, working width, and droplet size. You can also select the droplet size according to ISO standards.
   You can adjust the flight parameters, including altitude and speed, individually for each waypoint.
   Click the globe icon (5) to restore the global settings or the bin icon (6) to delete the waypoint.

©2026 ABZ Innovation

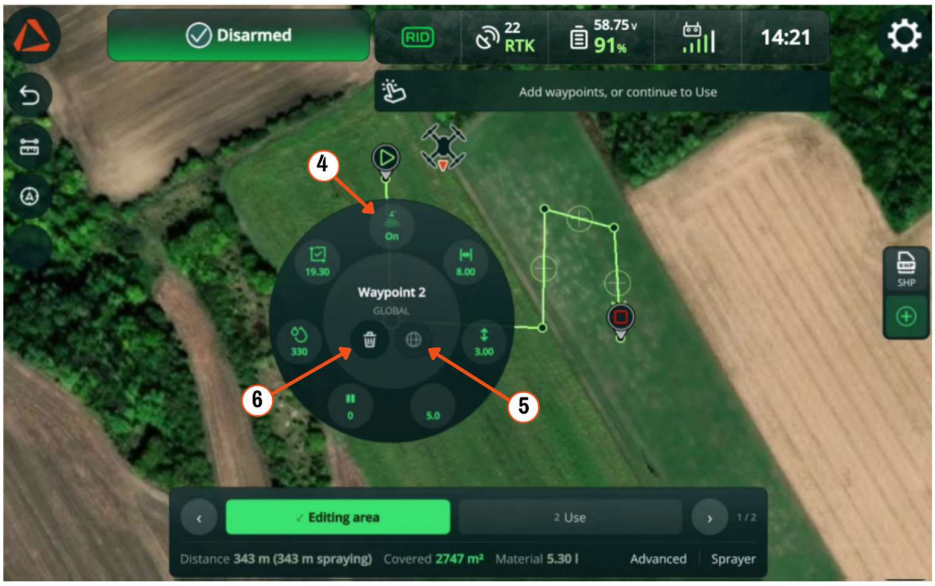


3. Custom parameters remain active until the next waypoint. Any new waypoint added to this section inherits these custom settings.



4. After editing the mission, click on **Use** and **Save**. To transfer the planned route to the drone, click **Upload mission**.

©2026 ABZ Innovation

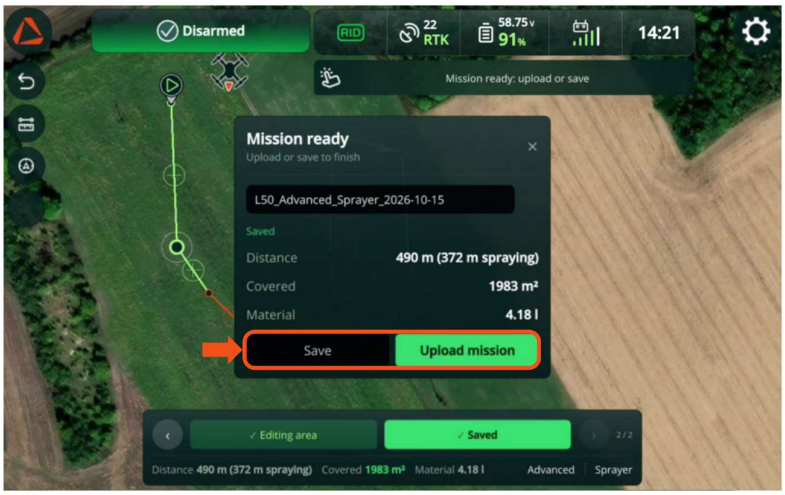

5. To start the mission, tap on the **'Start Mission'** button in the Operation window after manually flying the drone to a safe altitude. The spraying will begin automatically. For further information, see the Starting a mission section.
6. If you leave the planning page by clicking on the back button, your plan will be cleared from the editor and from the drone. If you have saved your plan, the file remains on the controller and you can open it from the Load mission menu.

©2026 ABZ Innovation

Usage Examples

Vineyard spraying


In the advanced planning, you can create mission plans that align precisely over the vine rows for efficient and economical spraying.

1. Import the shape file of your vineyard generated by a monitoring drone or with the help of the Emlid RS base to the ABZ Control. (For instructions, see the Using shapefiles for mission planning section).

2. Select the SHP icon on the right side of the screen, then choose either Point, Polyline (for line shapefiles), or Polygon (for area shapefiles) in the visual guides section, depending on the geometry of your shapefiles.


3. Use the Points/Polyline/Polygone of your SHP file as a guide to help you place the waypoints over the vine rows on your RC. It is possible to use more/different kinds of shapefiles simultaneously. You can grab and move the points to reposition them. For more information, see the Using shapefiles as visual guides section.

4. In the **Global Settings** pane, you can adjust flight parameters, including altitude and speed.

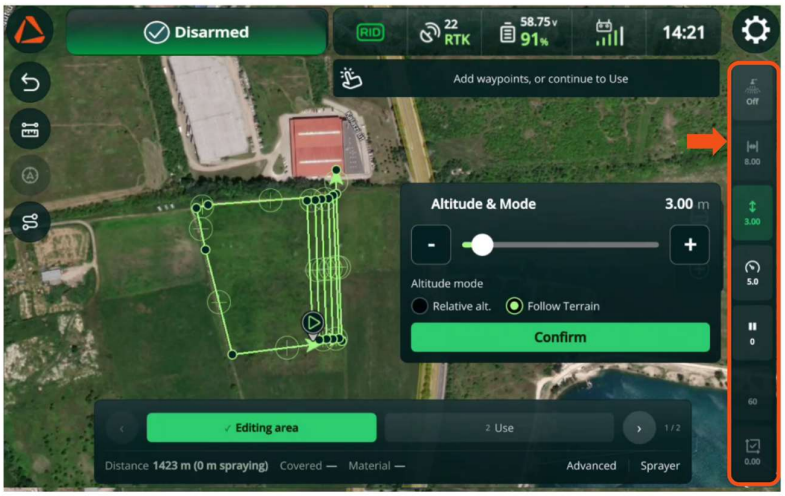

5. To delete a waypoint, click the bin icon in the waypoint's circular menu.

©2026 ABZ Innovation

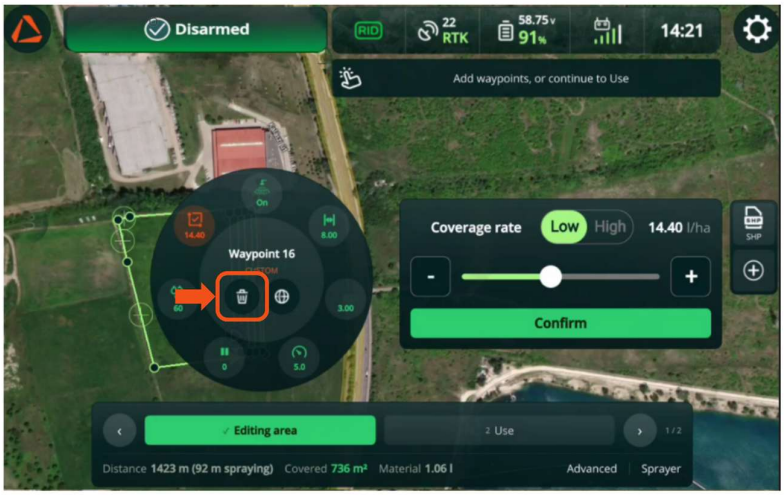

6. You can turn the sprayer on or off at each waypoint. If the sprayer is activated, you can define different application values: the application rate in liters per hectare, the working width, and the droplet size, which can also be specified according to ISO standards.

7. You can also adjust the flight parameters, including altitude and speed, individually for each waypoint.

8. After configuring the mission settings, click **Use**, then select **Save** to save the mission or **Upload mission** to transfer the planned route to the drone.

9. To start the mission tap on the **'Start Mission'** button in the Operation window after manually flying the drone to a safe altitude. The spraying will begin automatically. For further, see the Starting the mission section.

10. Clicking the **Back** button to exit the planning page clears the mission from both the editor and the drone. If you have saved the mission, the file remains on the remote controller. To reopen it, click **Load mission**.

©2026 ABZ Innovation


Spot spraying

In advanced planning, you can create mission plans for spot spraying missions.

1. Import the shape file of your field to the ABZ Control. (For instructions, see the Using shapefiles for mission planning section).

2. Select the SHP icon on the right side of the screen, then choose the **Polygon** option to load your work area with the pre-edited spots.

3. Use the Polygone of your SHP file as a guide to help you place the waypoints over the spot you would like to treat. You can grab and move the points to reposition them.

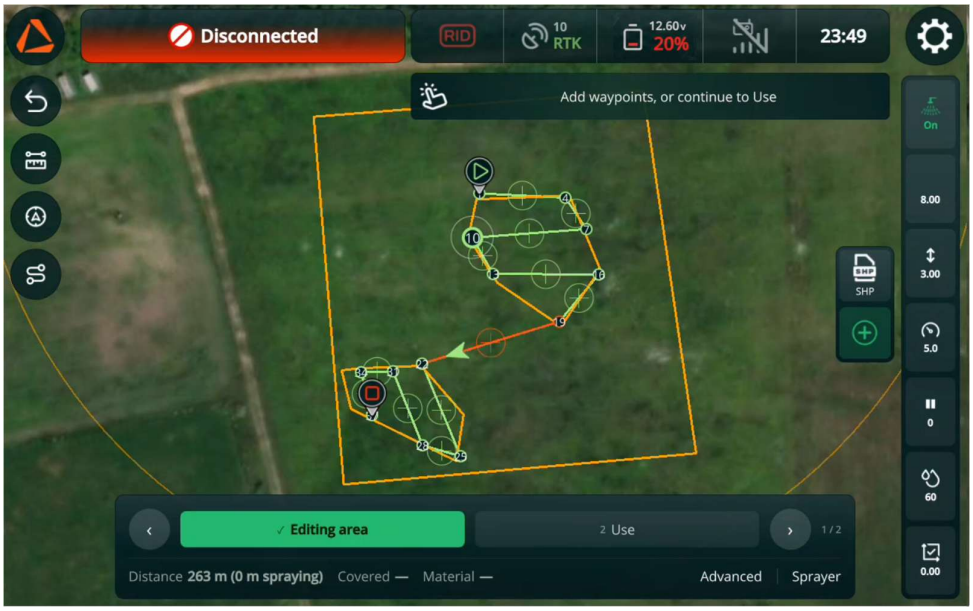

4. Under Global Settings, you can adjust the flight parameters and spraying settings for your operation. Define the application values: the application rate (in liters per hectare), the working width, and the droplet size, which can also be specified according to ISO standards.

5. To exclude certain sections from spraying, click on the waypoints where you do not want the drone to spray and turn the sprayer off.

6. You can also adjust the flight parameters, including altitude and speed, individually for each waypoint.

7. After configuring the mission settings, click **Use**, then select **Save** to save the mission or **Upload mission** to transfer the planned route to the drone.

©2026 ABZ Innovation

8. To start the mission tap on the **‘Start Mission’** button in the Operation window after manually flying the drone to a safe altitude. The spraying will begin automatically. For further, see the Starting the mission section.

9. Clicking the **Back** button to exit the planning page clears the mission from both the editor and the drone. If you have saved the mission, the file remains on the remote controller. To reopen it, click **Load mission**.

©2026 ABZ Innovation


Planning a Variable rate application mission

To fly a variable rate mission, first make the variable rate map (Shapefile) in the Pix4Dfields software. Import the folder into the ABZ Control application. For further instructions, see the To import a shapefile into ABZ Control section.

After importing the shape file, open the **Planning view.** On the **Mission Planning Method** page, select the **Variable rate** option. In the pop-up window, set the Payload Type for the desired application method.

To enter the **Variable Rate Planning**:

1. Click on the **Mission Planning icon**.

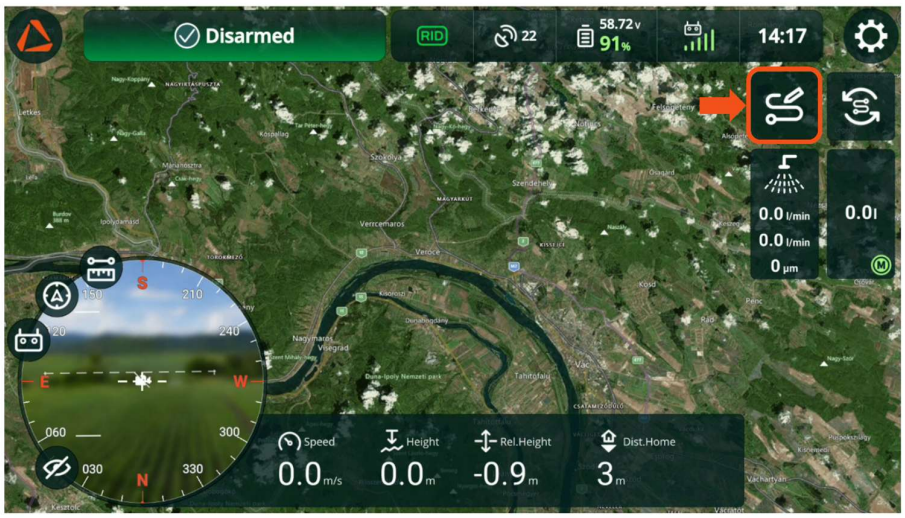


2. Select **Variable Rate**.




©2026 ABZ Innovation

3. Select the **Payload Type** for the desired application method.

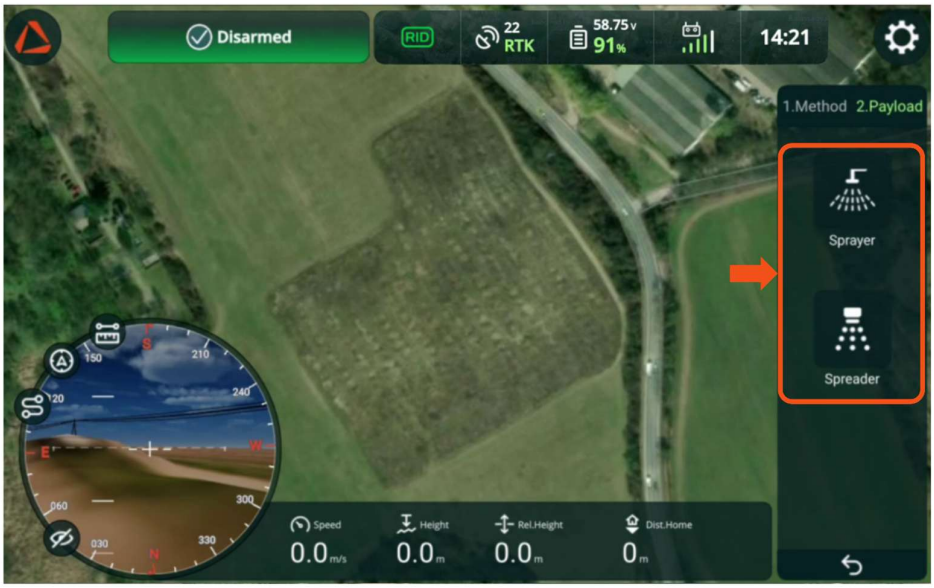


4. Click on the **Shapefile button**.

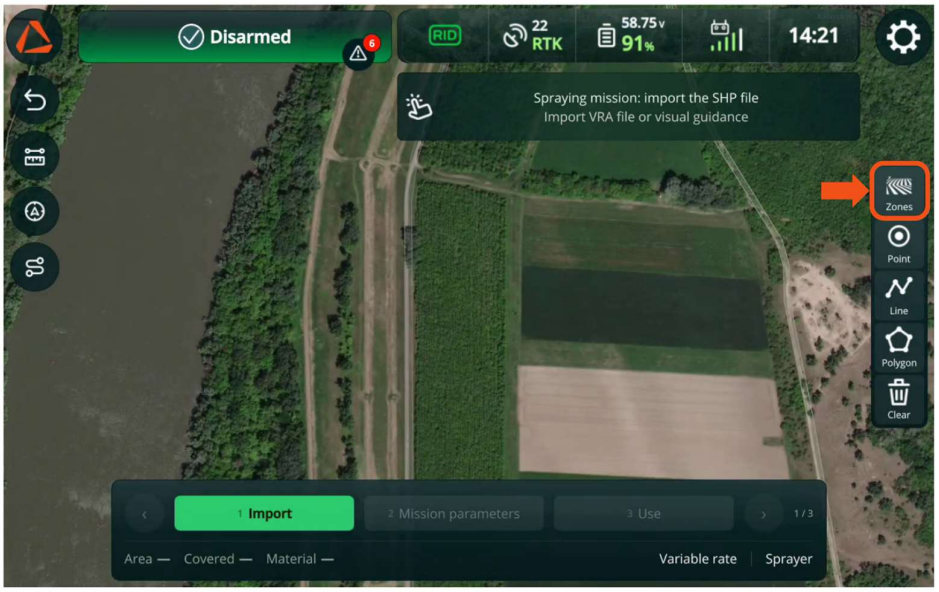


©2026 ABZ Innovation

5. In a popup window, you will see the corresponding files previously imported to the controller.
   Mark the needed file and click on **Select file**.

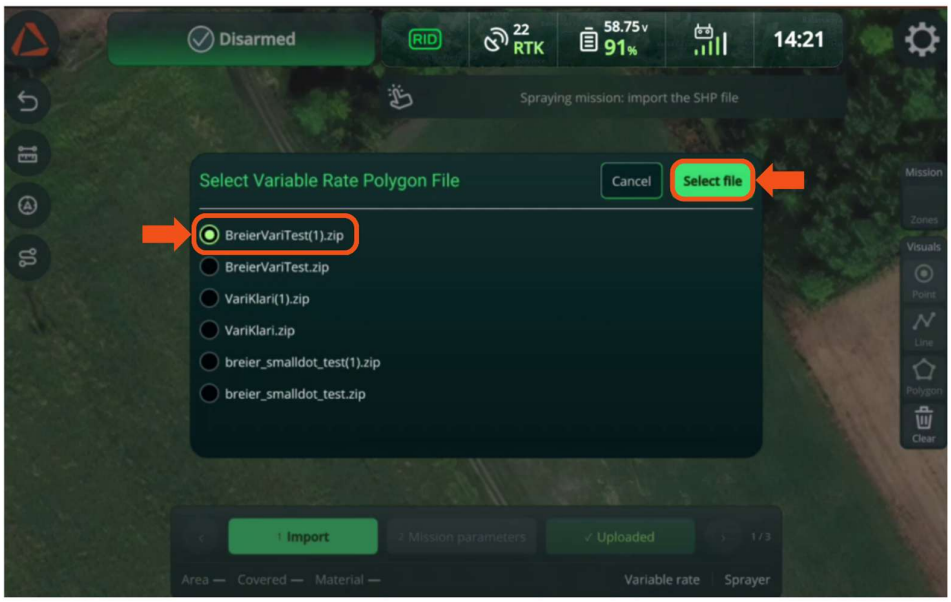


6. The mission map displays color-coded zones representing different application rates.

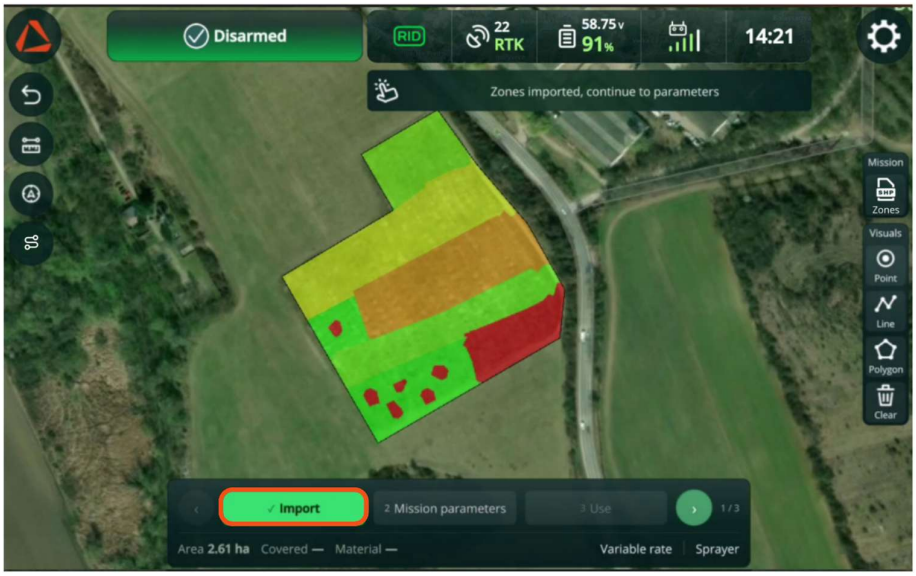

7. Configure the mission's operational and spraying settings.

©2026 ABZ Innovation

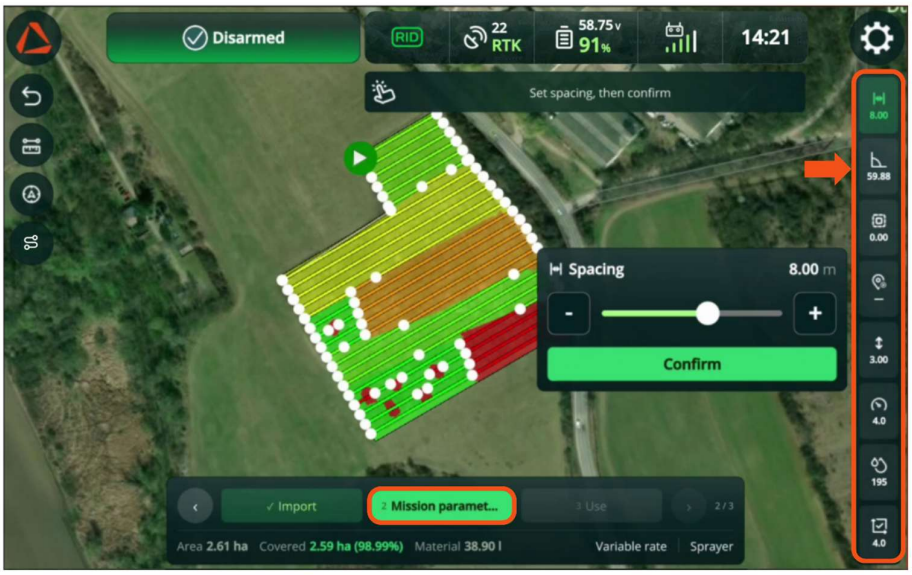


8. In the **Mission parameters** panel, you can specify the Flight, operational and spraying settings for your differential application. Under Color to rate (l/ha), the system displays the dosage values assigned to each color (e.g., Green: 10.00 l/ha, Red: 40.00 l/ha). Review these values to ensure they match your agronomic plan. You can manually adjust the flow rate for each zone directly in this panel if necessary before starting the mission.

©2026 ABZ Innovation



©2026 ABZ Innovation

9. After editing the mission, click **Save**. To transfer the planned route to the drone, click **Upload mission**.

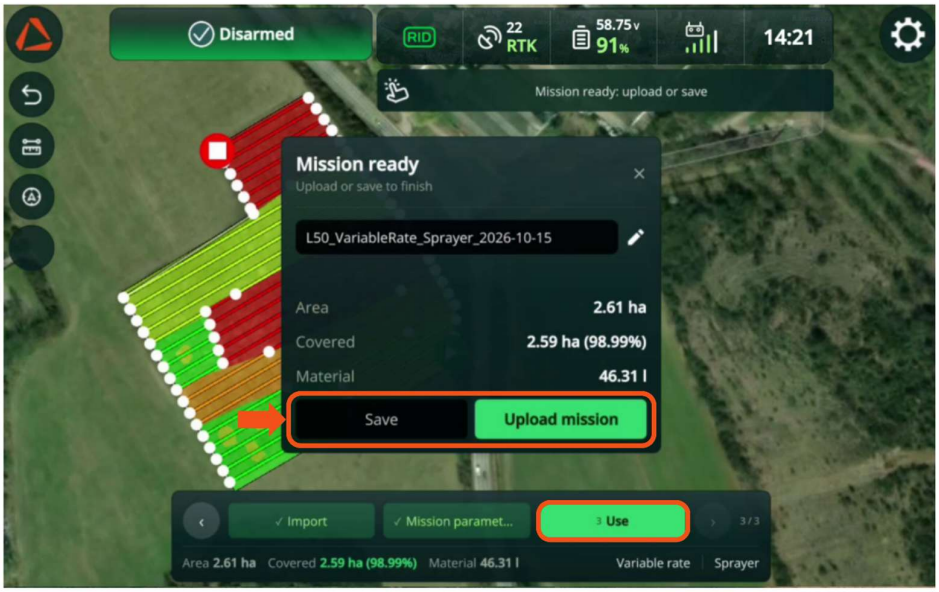

10. To start the mission, tap on the **'Start Mission'** button in the Operation window after manually flying the drone to a safe altitude. The spraying will begin automatically. For further information, see the Starting the mission section.

©2026 ABZ Innovation

Loading a previously saved mission

If you have saved a mission plan using Manual, Drawing, or Advanced Planning, you can open it by clicking Load Mission on the Mission Planning Method page. (These saved plans are stored on the remote controller and not on the drone.)



Select the mission, and click on use to upload it to the drone.



©2026 ABZ Innovation

To start the mission tap on the **‘Start Mission’** button in the Operation window after manually flying the drone to a safe altitude. The spraying will begin automatically. For further, see the Starting the mission section.

Clicking the **Back** button to exit the planning page clears the mission from both the editor and the drone. If you have saved the mission, the file remains on the remote controller. To reopen it, click **Load mission**.

To delete a saved mission, click on the Bin icons.



©2026 ABZ Innovation

Flight

Before flight, check **Failsafe settings** and adjust them according to the actual flight task and surroundings.

When flying manually, use Manual (GPS-assisted) mode instead of AltHold whenever possible. In case of unexpected operation, switch to Manual (Loiter) mode (pushing the A button) and release the sticks to stop the drone.

Set the display brightness in accordance with the lighting conditions. Every data on the display should be readable even in direct sunlight. Turn off unnecessary nearby Wi-Fi and radio equipment to minimize interference.

If all the necessary conditions for the flight are ensured, you can then enter the Fly view to start the flight, switching to "Armed" mode.

In this software version manual take-off is required and manual landing is recommended.

After arming the drone, wait about 4 seconds for the motors to reach full speed before take-off. After manual take-off, start the automatic flight by sliding the Start mission - Slide to confirm button. Every flight must be carried out fully in accordance with all Checklists.

Setting an accurate value for the Tank capacity is mandatory after any change in the amount of liquid in the tank (refill or replacement of the tank) to ensure smart tank refill route calculation and for the correct execution of the Tank is empty action defined under Settings>Safety.

The system prompts you to confirm the RTL altitude setting and verify that the area is clear. Confirm both using the slider. Spraying starts automatically after confirmation.

©2026 ABZ Innovation



On the mission route, a red petrol tank icon will inform you about the calculated tank emptying point.



The automatic flight, and every other flight mode can be interrupted at any time by changing the flight mode, e.g. by pressing **Button A** (Manual mode - the drone will hover in position) or **Button B** (RTL – Return to launch) mode, the drone will fly back to the take-off position, so that settings can be modified, or the battery can be replaced.

After an interruption of automatic flight, the drone will offer you the Continue Mission option. By sliding the slider, the automatic route will continue from the point of interruption.

©2026 ABZ Innovation


Irregular operational conditions

In case of any abnormal behavior of the drone during automatic flight, immediate switching to Manual (A button) or if enabled AltHold (C button) mode is required by the pilot to take full manual control and to ensure the safe flight and landing of the drone.

Please operate the drone smoothly when flying at low altitudes and fly above 3m.

If any flight system errors occur during the flight, the controller shows a pop-up message with information about abnormalities. If any of these happen, the pilot must take back manual control, switch back to **Manual** (Loiter) flight mode, and safely land the drone.

If the GPS system fails during flight, the "GPS glitch" pop-up message will be shown on the screen, and the pilot must land the drone.

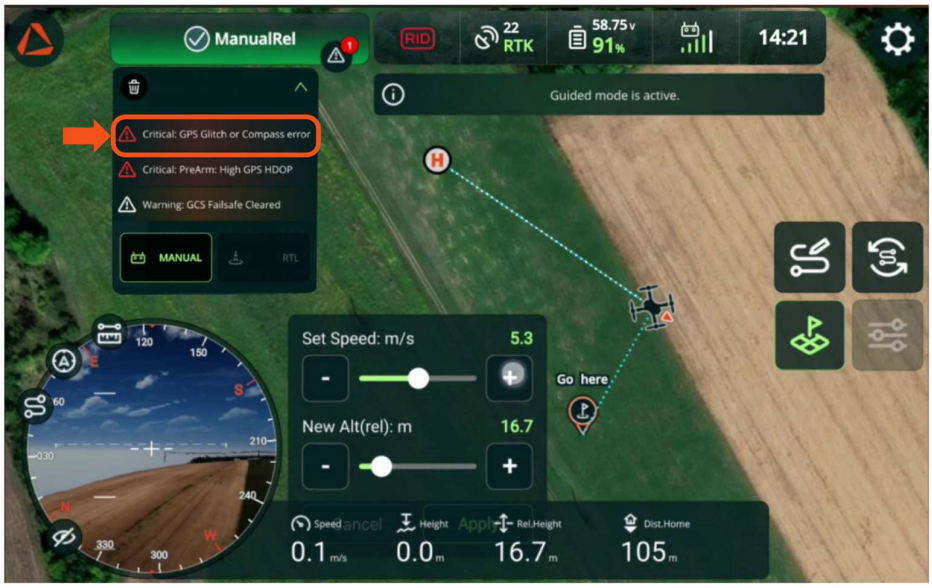


In emergency situations, the pilot must operate the drone manually in the safest available manner, specifically taking care of personal and property security. The pilot must fly the drone away from potential risks, applying careful, slow stick inputs and flight speeds, find a safe area, and land the drone with a slow descent rate.

In case of a „Potential thrust loss" message, the pilot must land the drone as soon as possible, operating it with slow and smooth motion.

©2026 ABZ Innovation

Loss of navigation systems

If the GPS system fails during flight, the "GPS glitch" pop-up message will be shown on the screen, and the pilot must land the drone.

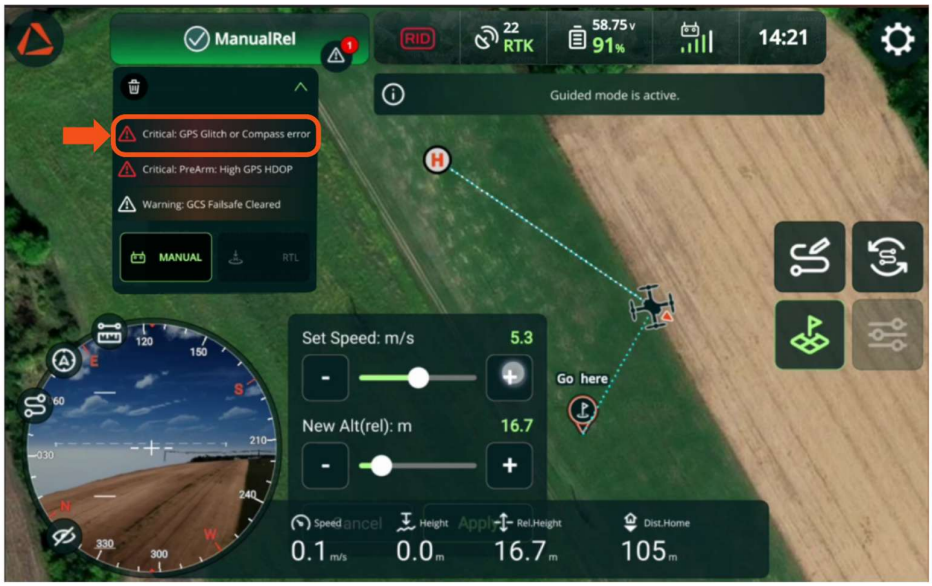

If a total failure of the navigation system occurs, the drone automatically does a controlled descent and landing. In land mode, the pilot can only give forward, rearward (pitch), left, and right (roll) stick inputs to make sure that the landing is safe.

(Brake mode*

When you fly in **Altitude Hold** mode with the **Geocage** enabled, in rare scenarios, the drone can cross the boundary of the **Geocage**. **This activates a safety protocol that switches the drone to Brake mode, and the drone stops at the boundary of the Geocage.**

In **Brake mode**, the drone does not respond to control stick inputs, and you cannot activate the **Return to Launch** mode. To exit **Brake mode**, the pilot must switch to **Manual (Button A)** mode to get full control. [6])


* Only applicable for Service Flights

©2026 ABZ Innovation

Error in Remote Identification System

The drone continuously monitors the Remote ID functionality from takeoff to shutdown and provides a notification of any malfunction or failure in the top bar of the ABZ Control application. If the Remote ID system detects an error during flight, the RID icon will turn red, and the drone will provide an error message stating that the Open Drone ID has encountered a problem (e.g., not receiving a location message).

If the Remote ID system experiences an error during operation, the unmanned aircraft is no longer broadcasting the message elements of the standard Remote ID. The pilot must, in accordance with 14 CFR Part 89 (Minimum Performance Requirements for Standard Remote Identification of Unmanned Aircraft)[7], land the unmanned aircraft as soon as practicable.

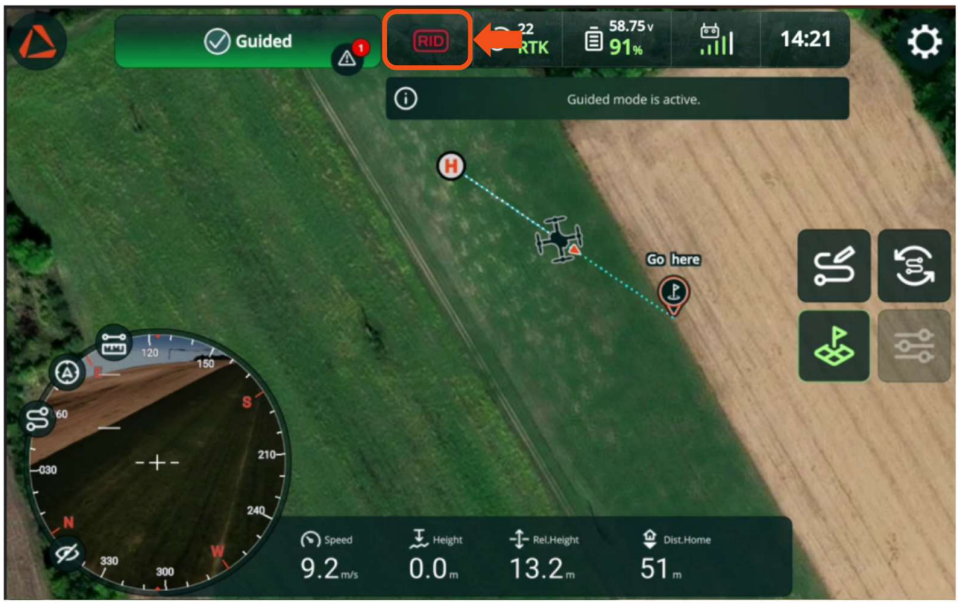


Declaring an Emergency


In the Remote ID interface, the pilot can click on the **Declare Emergency** button. To declare an emergency, you need to **press and hold the button for 3 seconds.** This function may be employed in situations such as loss of control, potential threats to persons or property, or in other emergency scenarios, at the pilot's discretion.

[7] https://www.ecfr.gov/current/title-14/chapter-I/subchapter-F/part-89

©2026 ABZ Innovation

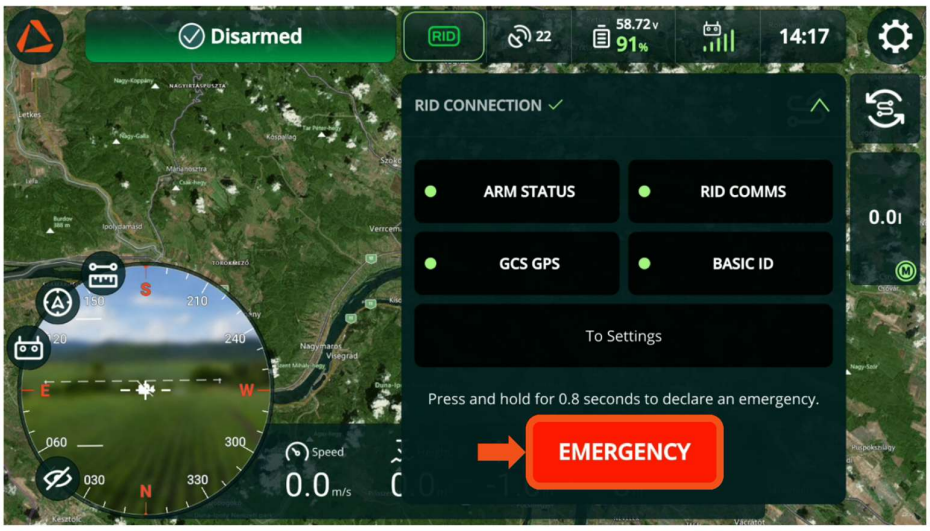

When an emergency is declared, the drone will broadcast the emergency status. To clear the emergency, press and hold the same button (which now displays the text '**Clear Emergency**') **for 3 seconds.**

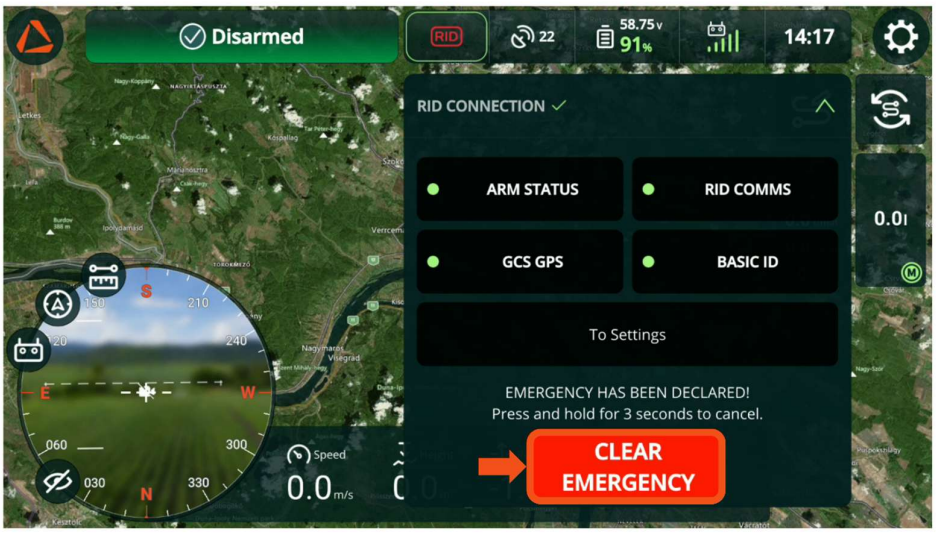

©2026 ABZ Innovation

Accessories


Payloads

ABZ Innovation does not limit the type of payloads to be used with the L30 V2. Any properly and safely mounted and operated payloads are allowed to attach to, and use with the drone.


The operator is solely liable for using only properly secured, correctly connected payloads and accessories, which are approved and compatible for drone use. It is the pilot's responsibility not to exceed the maximum combined accessories and batteries and payload weight, which is 14 kg (30,87 lbs), thereby not to exceed the MTOM with the fully equipped drone, which is 29 kg (63,95 lbs).

The payloads significantly affect the drone's center of mass, especially, when heavy payload is mounted. It is highly recommended to install the payloads as close as possible to the drone's center.

If you have purchased different types of ABZ Innovation payloads (e.g., spreader or Trichogramma) and your drone is equipped with the necessary connectors, you can switch between them in the **Settings > Payloads** menu. The Payload Test switch will activate the selected payload using the test values defined in this menu.

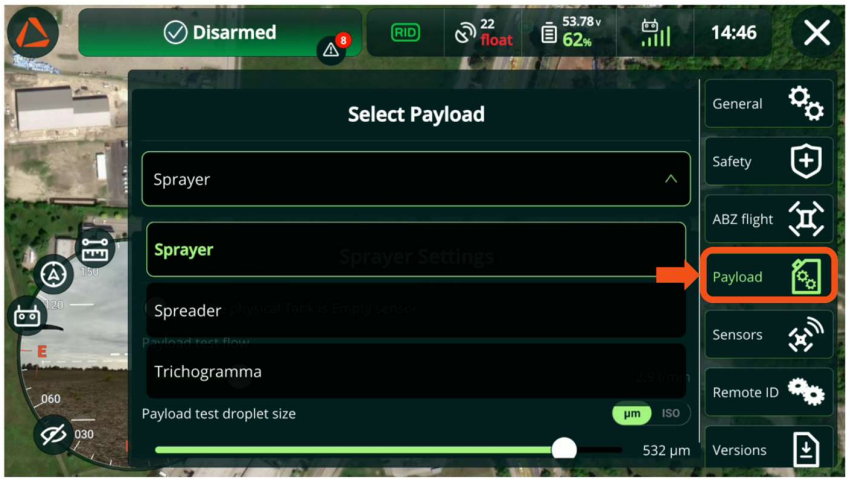

©2026 ABZ Innovation

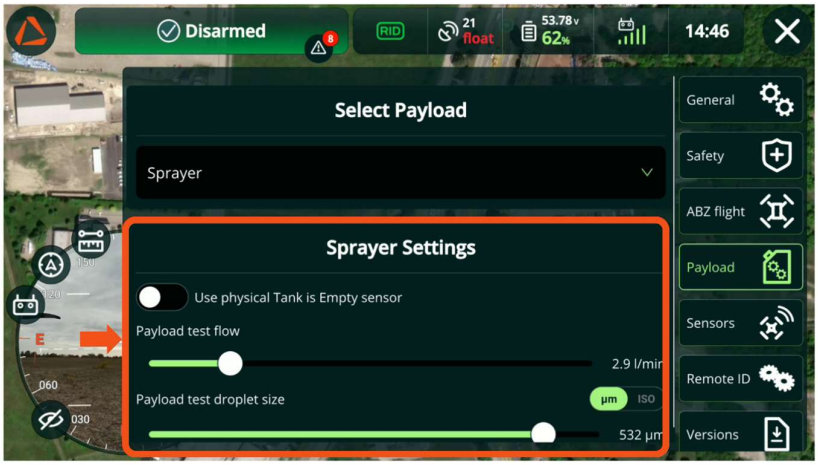



When planning an automatic mission for a specific payload, ensure the payload type is set correctly before planning.

©2026 ABZ Innovation

Emlid RTK


The L30 drone comes with the Emlid LoRa system[8]**, which can be connected with Emlid RS+ or RS2+ RS3+ base stations for RTK positioning at centimeter precision.


An RTK base station is a high-precision GNSS (Global Navigation Satellite System) device used to provide real-time kinematic (RTK) corrections for enhanced positional accuracy. It works by receiving satellite signals and transmitting correction data to the drone.

Setting up the RS2+ or RS3 base is documented at Emlid's support pages:

- Introduction | Reach RS3
- Introduction | Reach RS2/RS2+

- If you connect to the RS2+ or RS3 base with **LoRa****, make sure it is configured to **Output: LoRa**, and that the frequency entered in the **Setting > RTK > Lora radio module Emlid RS base station** matches the Base output value specified in the Emlid flow app.

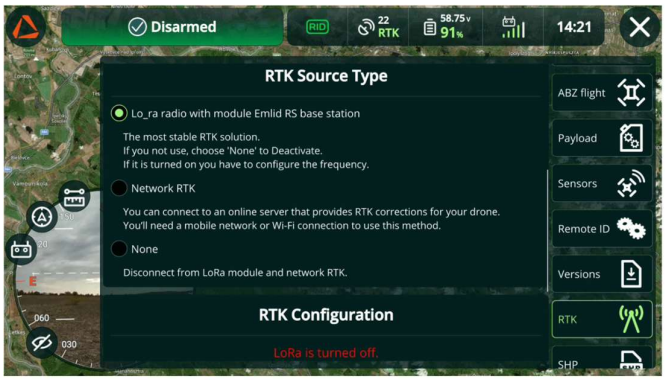

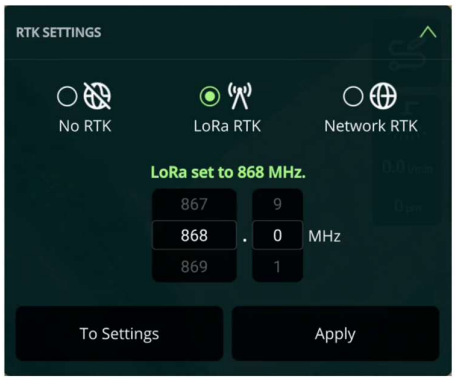

- If you connect to the RS2+ or RS3 base with **Local NTRIP**, set the base output to **Local NTRIP.**
    1. Connect the controller to the hotspot of the base station with the credentials given in the Emlid Flow application. During operation, keep the Remote Controller in close proximity to the Emlid base station (within 10 meters).
    2. In ABZ Control, in **Settings > RTK > Network RTK**, enter the NTRIP credentials that are given in the Emlid Flow application.

[8] **The LoRa connection to the Emlid base station is only applicable for drones equipped with LoRa module.**

©2026 ABZ Innovation

- If you connect to the **RS2+ or RS3** through the Emlid Caster, set the Base Output to **NTRIP.** Connect the Remote Controller to the internet with a hotspot, and enter the Credential from **Emlid Caster** in **Settings > RTK >Network RTK.** For more information about the Emlid Caster, refer to **emlid.com/ntrip-caster/**.

When the system is set up and working correctly, on the drone's controller the GPS Status shows the following based on the accuracy:

- GPS Lock – RTK float
- GPS Lock – RTK fixed

©2026 ABZ Innovation

Batteries and chargers

Battery:

Only use batteries purchased directly from ABZ Innovation distributors! This ensures safe operations, full compatibility, appropriate data connection to the drone. Using 3rd party batteries void the drone's warranty.

General informations about the Smart Battery for L30/S50/M40 drone (A001405.01):

- 53.2 V nominal voltage
- min. 30000mAh capacity
- 25C discharge value
- 14 Cells
- Integrated Smart battery management system with automatic storage mode
- To charge the battery in storage mode, turn it on with one short press and then one long press of the power button.

Charger:

Only use the original ABZ Smart Charger 3000! This ensures safe charge, full compatibility, appropriate data connection to the batteries. Using 3rd party chargers void the batteries' warranty.

- Power output: max. 60A/3000W
- Power Input: 16A/110-230V
- Capable of multiple charges at the same time
- Slow, Normal, Fast charge speed options
- Storage mode option
- On the field use two chargers, simultaneously charging one battery each.

For continuous drone operation, use a set of four batteries. You can charge two batteries simultaneously while operating the drone with the remaining two (one active and one standby). To ensure long battery life, we highly recommend using balance charging. Also, let the batteries rest after charging before using them.

©2026 ABZ Innovation

Flight Protocol

Before flight, tasks and inspections

- Drone battery status (The state of the drone battery should be monitored before the flight using the charging indicator LEDs on the battery. We recommend starting the flight with a minimum of 80% battery charge).
- Visual inspection of the propellers, paying special attention to possible mechanical damage and whether the propellers are properly fastened.
- General inspection: cables, connections, video connection, payload, etc. Payload condition, arms, base structure condition, and whether the bolts are properly tight.
- Determine the flight location.
- The task to be performed is properly analyzed.
- Permits applied for and obtained.
- Tools and accessories needed for the work are prepared.
- The pilot is fit and ready to work.
- Before take-off, tasks and inspections
- Weather conditions are suitable for the task:no lightning, appropriate temperature, visibility, rain, wind speed, etc.
- General visual inspection and condition assessment of the drone.
- Whether the drone is placed on level ground, away from metal surfaces.
- All batteries charged and checked: radio station, drone, video equipment, and accessories.
- The state of the drone battery should be monitored before the flight using the charging indicator LEDs on the battery. We recommend starting the flight with a minimum of 80% battery charge.
- The drone and all its accessories are in clean condition.
- The landing gear and any accessories are securely fastened.
- Unfold the drone’s arms and tighten the fasteners,
- Unfold the propellers symmetrically
- The propellers are clean, undamaged, properly fastened, and positioned.
- The remote controller is switched on and correctly set. The remote controller must ALWAYS be switched on before the drone battery is connected.
- Check the radio, telemetry, and video antennas.
- NEVER leave batteries connected for prolonged periods.
- Before arming the drone, leave enough free space, stand at least 10 m (35 ft) away from it.
- Perform compass calibration if necessary.

©2026 ABZ Innovation

- Check the video signal on the display.
- Check that the devices installed are working properly.
- Make sure that liquid level is correct (for the spray tank)
- Make sure that the task you have chosen is the one you want to carry out, is planned, and properly analyzed.
- Whether the take-off zone is sufficiently cleared.
- Arm the drone and take off.

After take-off, tasks

- Stabilize and hold the drone at a height of at least 3 m/9.8 ft.
- Test the left and right rotation functions, forward/reverse movements, right, left tilting.
- Check that the drone is stable and that there are no abnormal vibrations.
- Check the voltage of the battery.
- Start the mission with the drone

During mission, tasks

- Regularly check the voltage and charge level of your batteries.
- Check the flight altitude and the maximum allowed distance.
- If the drone or remote controller battery is low, land the drone in a safe place.
- During the flight, the pilot must monitor the battery voltage, which should always be above 51.4 V for Tattu Plus batteries and 48.5 V for ABZ Innovation L30 Smart Batteries, even when flying with the Maximum Take-off Mass (MTOM).
- When the battery voltage level drops under 51.4 V for Tattu Plus batteries and 48.5 V for ABZ Innovation L30 Smart Batteries , start returning and landing the drone.
  If, during the return, the battery voltage reaches the critical threshold (50.4 V for Tattu Plus batteries and 46.5 V for ABZ Innovation L30 Smart Batteries), the drone will automatically initiate landing. For further information, see Battery Failsafe.
- Switch off the engines after landing (disarm function)
- End of mission.

©2026 ABZ Innovation

After landing, tasks and inspections

- Switch off professional equipment if necessary.
- Switch off the drone by unplugging the battery from the connector.
- Switch off the remote controller.
- Clean the drone thoroughly (batteries, tools, camera, etc.).
- Disassemble, clean, check, and store all professional equipment properly.
- In the flight log, record the flight and any significant events. Accurate completion of this document is mandatory to monitor the operation and lifetime of the drone, and to facilitate properly scheduled servicing (every 300 flight hours).
- Record the nominal voltage remaining in the batteries used. After returning from the field, remove the batteries from the storage box and store them in a cool and well-ventilated place.
- DO NOT STORE batteries overcharged or fully discharged for extended periods of time.

©2026 ABZ Innovation

Checklists

Before first take-off

- General structural, mechanical inspection
- Inspection of propellers one by one, even if there is only minor damage, takeoff is prohibited.
- Tightness of the drone arms' fasteners
- Propellers in an unfolded state
- Switch on the remote controller, and launch the ABZ Control app.
- When ABZ Control is waiting for the connection, turn on the drone by turning on the battery with a short and then a long push.
- If you are operating the drone in a country where the remote identification of drones is mandatory, verify in an appropriate application that the Dronetag DRI is correctly broadcasting your Remote ID.

Before every take-off

- Drone battery charge level. The state of the drone battery should be monitored before the flight using the charging indicator LEDs on the battery. We recommend starting the flight with a minimum of 80% battery charge.
- Remote controller battery charge level
- When ABZ Control is waiting for the connection, turn on the drone by turning on the battery with a short and then a long push.
- Check the connection between the remote controller and the drone.
- Verifying Telemetry live data (e.g. LiDAR, power consumption) (in case of failure, ABZ Control must be restarted).
- Whether the drone is in Manual (Loiter) mode (if not, press button A to switch).
- You are at a safe distance (at least 10 m / 35 ft) from the drone.
- Switch to "Armed" mode by pushing the left control stick to the down-right position, until „Armed" is shown on the display, then releases the stick.
- After arming the drone, wait about 4 seconds for the motors to reach full speed before take-off.
- Take off to a safe height (at least 3 m/9,85 ft).

©2026 ABZ Innovation

After take-off

- Compass adjustment by a single 360° rotation around the vertical axis of the drone
- Check the stability and motion of the drone.
- Check the battery status and voltage frequently during flight.
- If the drone or remote controller battery is low, land the drone in a safe place.
- During the flight, the pilot must monitor the battery voltage, which should always be above 51.4 V for Tattu Plus batteries and 48.5 V for ABZ Innovation L30 Smart Batteries, even when flying with the Maximum Take-off Mass (MTOM).
- When the battery voltage level drops under 51.4 V for Tattu Plus batteries and 48.5 V for ABZ Innovation L30 Smart Batteries , start returning and landing the drone. If, during the return, the battery voltage reaches the critical threshold (50.4 V for Tattu Plus batteries and 46.5 V for ABZ Innovation L30 Smart Batteries), the drone will automatically initiate landing. For further information, see Battery Failsafe.
- The ABZ Control battery indicator icon serves only as an indicator and shows an approximate value.
- Land the drone carefully and at a safe descent speed.

After landing

- Switch to „Disarmed” mode by pushing the left control stick to the down position, until „Disarmed” is shown on the display and the motors are completely stopped.
- At the end of the flight, first switch off the drone and then the remote controller.

©2026 ABZ Innovation

Troubleshooting

If any malfunction is experienced, contact an ABZ Innovation service center for further instructions. No repair attempts are allowed by the pilot or operator.

abzinnovation.com/support

Replacement parts

Only original replacement parts are qualified, directly from ABZ Innovation.

There are no life-limited parts of the drone, however propellers and motors must be inspected frequently and in case of abnormalities, replacement is needed.

Other than replacing the propellers and the battery, every repair or replacement should be carried out only at an official ABZ Innovation distributor's service center by a trained and qualified technician. Never repair any parts of the drone while it is powered on.

List of spare parts and part numbers:

- Battery: A001405.01
- Propeller CW: M001223.01
- Propeller CCW: M001224.01

Replacing the propellers


Tools for replacement:

- HEX 5 key
- Threadlocking fluid (e.g. Loctite 243)
- Original ABZ Innovation L30 V2 propellers

©2026 ABZ Innovation

Carefully check the motor and propeller rotational direction. On the motors it is indicated with arrows, on the propellers „CW” or „CCW” are indicated.

Unscrew the two 5mm HEX screws, disassemble the fixing cap of the propellers, remove the propeller’s upper washers, remove the propellers and install new propellers, reinstall the upper washer and fixing cap. Clean the 5mm HEX screws from threadlocking residues and apply new threadlocking material (according to the manufacturer’s instruction). Tighten the screws until the propellers have zero axial and radial play, but still easy to fold and unfold them.

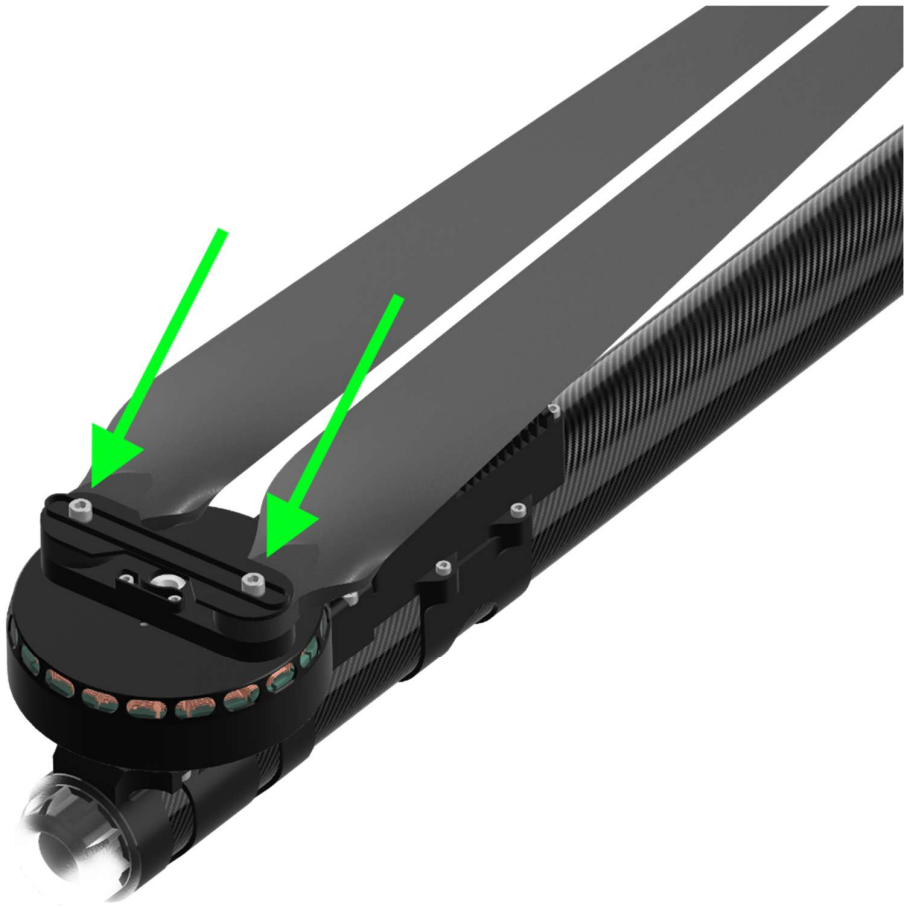

©2026 ABZ Innovation



Obtain disposal information directly from local ABZ Innovation Distributors or Resellers. Always follow local regulations regarding disposal and recycling. If a part has ended life cycle or faulty/broken, it must be ensured not to be allowed to use again, which can be carried out by an ABZ Innovation Distributor or Reseller

©2026 ABZ Innovation

CDA valve cleaning

The membrane of the valve might become clogged with particles. The membrane is located inside the pipe.

To clean the membrane:

1. Open the valve using the gear wheel.






2. Remove it using pliers and wipe it thoroughly.

3. Reinsert it with the rimmed side facing inwards and aligned with the rim of the inner tube.

©2026 ABZ Innovation

Compass calibration

To calibrate the compass, go to **Settings > Sensors > Compass**.

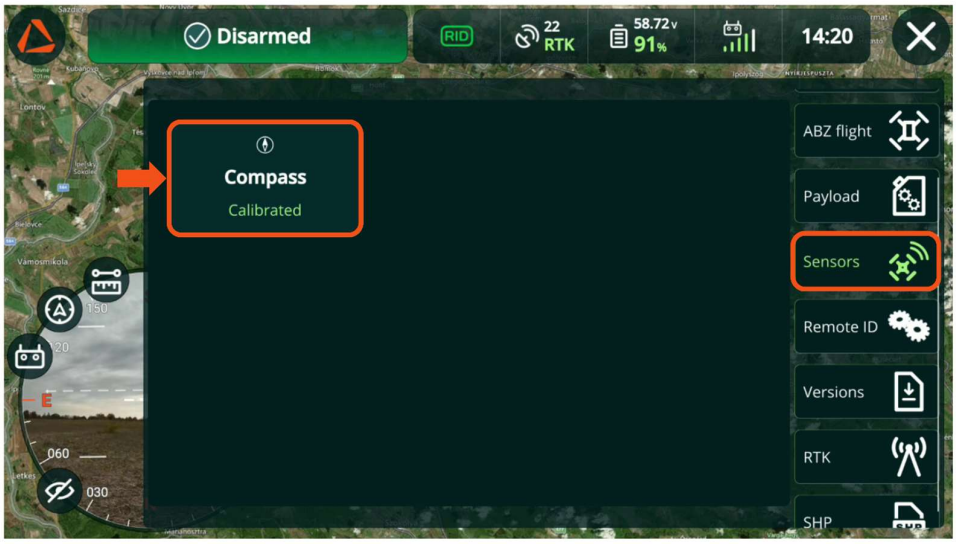

The calibration should only be performed if requested by the software or instructed by the Support Center.

- Turn on the drone and make sure it is **disarmed**.
- Remove all metal objects (such as keys and coins) and electronic devices from your pockets.
- Place the drone on open, level ground, away from vehicles and metal objects. The drone can face any direction but must remain stationary.
- Click **START** to begin the calibration.
- Wait for the heading to stabilize. This process can take up to 5 minutes.

Warning: Calibration changes important flight settings. If you are unsure about the procedure, contact ABZ Support

©2026 ABZ Innovation

Table of contents

General Information Overview 1

Drone main parts 3

Specifications 4

Safety requirements 5

Environmental aspects 5

Information about transport 10

General Failsafe 11

Battery Failsafe 12

Mandatory Remote identification with Dronetag 15

Declaring an Emergency 20

Remote Controller 21

Network settings 26

Internet connection 26

To set up the Bluetooth connection for internet access: 27

Controlling the drone 28

Default control (mode 2) 32

Starting the pump/payload manually 33

ABZ Control Software Overview 34

Settings 48

Safety – Setting up FailSafe 49

RTK configuration 51

Abz Flight 55

Adjusting the Obstacle Avoidance Options 56

Additional Settings in ABZ Flight 56

IMU - Compass calibration 57

Remote ID 58

Software versions and Update 59

©2026 ABZ Innovation

Configuring Payloads 60
ABZ Sense 61
Obstacle Avoidance with ABZ sense 61
What to do if the drone stopped because of an obstacle? 63
Altitude control 65
Flight planning 67
To import a shapefile into ABZ Control: 83
Usage Examples 104
Vineyard spraying 104
Spot spraying 106
Flight 116
Irregular operational conditions 118
Loss of navigation systems 119
(Brake mode* 119
Declaring an Emergency 120
Accessories 122
Payloads 122
Emlid RTK 124
Batteries and chargers 126
Flight Protocol 127
Before flight, tasks and inspections 127
After take-off, tasks 128
During mission, tasks 128
After landing, tasks and inspections 129
Checklists 130
Before first take-off 130
Before every take-off 130
After take-off 131

©2026 ABZ Innovation

After landing 131
Troubleshooting 132
Replacement parts 132
Replacing the propellers 132
CDA valve cleaning 135
Compass calibration **Error! Bookmark not defined.**

If you have any questions, please contact us: support@abzinnovation.com

ABZ Innovation Ltd. - www.abzinnovation.com

©2026 ABZ Innovation